

# MILO PRO

## Digital Voice Pen Recorder


### User Guide

**\*Please Read Carefully Before Use\***



#### Buttons and Functions

- ① “+” **Button**: Next Song / Volume Increase (Press and hold) / Noise Reduction
- ② “-” **Button**: Play Mode Switch / Volume Decrease (Press and hold) / Auto Record
- ③ Power Switch, ON / OFF
- ④ ▶ **Button**: Play Mode Switch
- ⑤ **USB / Charging / Headphone Port**
- ⑥ Indicator Light

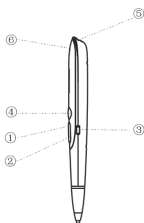

#### Instructions

**POWER ON / OFF:** move Power Switch to “ON” (will start recording) and “OFF” position.

**HOW TO RECORD:** move Power Switch to “ON” position, the Indicator Light will turn red and blink 3 times, then the device will start recording.

**\*Note: the device cannot record if headphone is plugged in.**

**HOW TO SAVE RECORD FILE:** when recording, move Power Switch to OFF position, the Indicator Light will turn red and blink 1 time before go off, then the record file is automatically saved.

**HOW TO PLAY RECORD FILE / MUSIC FILE – PLAY MODE:** plug in headphone into Headphone Port and Power ON, the device will enter Play Mode and play your record file; press button can switch to Music Mode to play your MP3 music file.

**\*Note: the device can only play record / music file when headphone is plugged in; you can also view, play, copy record / music file when connect to PC**



#### Instructions

**HOW TO PLAY NEXT RECORD / MUSIC FILE:** when playing in Play Mode, press “+” button will play the next record / music file.

**HOW TO PLAY PREVIOUS RECORD / MUSIC FILE:** when playing in Play Mode, press “-” button will play the next record / music file.

**VOLUME + / - :** when playing in Play Mode, press and hold “+” button to increase volume, press and hold “-” to decrease volume.

**CHARGING:** move Power Switch to “OFF” position and connect the device to power adapter or computer to charge. The Indicator Light will keep blinking until the device is fully charged.

**\*Note: please power off the device before charging.**

**NOISE REDUCTION:** move Power Switch to “ON” position, then press and hold “+” button until the red Indicator Light goes off will enable Noise Reduction.



## Instructions

**AUTO RECORD:** move Power Switch to "ON" position, then press "-" button until the red Indicator Light goes off will enable Auto Record. When surrounding sound is loud enough, the device will start the recording automatically.

**\*Note: you have to enable Auto Record every time after the device is power off.**

**HOW TO DELETE FILE:** when playing, press and hold "+" "-" buttons together to enter Delete Mode, and the Indicator Light will turn purple.

**Delete Single File:** in Delete Mode, press "+" or "-" button will delete current file, the Indicator Light will turn blue and blink fast.

**Delete All Files:** in Delete Mode, press and hold "+" "-" buttons together to delete all files, the Indicator Light will turn red and blink fast

**\*Note: to prevent deletion mistake, we highly recommend you to conduct file deletion when connected to PC.**



## Instructions

**FAST FORWARD / BACKWARD:** move Power Switch to "ON" position and plug in headphone, the Indicator will turn red; press and hold "+" "-" together until the Indicator Light turn blue or purple and blinking to enter Fast Forward / Backward Mode; in Fast Forward / Backward Mode, press and hold "+" to fast forward, press and hold "-" to fast backward.

**CHARGING WHEN RECORDING:** move Power Switch to "ON" position and connect USB cable to charge the device, press and hold "+" "-" together until the Indicator Light goes off, the device will start the recording when charging.

**MONITOR RECORDING:** move Power Switch to "ON" position (make sure the headphone is not plugged in), press and hold "+" "-" together until the Indicator Light goes off, then plug in headphone, you can listen to the current recording.

**CHECK RECORDING STATUS:** when recording, press and hold "+" "-" buttons together, if Indicator Light turn red and blink 1 time, the recording is in progress.



## Instructions

**RESTORE FACTORY SETTING:** move Power Switch to "OFF" position then connect the device to PC, right click the recorder's disk icon and start formatting will restore the device to factory setting.



## Instructions

### SPECIFICATIONS:

<b>Battery Type:</b>	<b>Build-In Lithium Battery</b>
<b>Recording Output Format:</b>	<b>WAV</b>
<b>Supported Music Format:</b>	<b>MP3 / WMA / WAV</b>
<b>Default Recording Quality:</b>	<b>192Kbps</b>
<b>Max Record Time (48Khz):</b>	<b>about 15 hours after fully charged</b>
<b>Max Play Time (48Khz):</b>	<b>about 10 hours after fully charged</b>
<b>Charging Time:</b>	<b>about 1 hour</b>
<b>Memory Size:</b>	<b>4G / 8G / 16G</b>