# **USER GUIDE**



## 1. Download and install APP

#### (1). Scan OR code installation

Open wechat or your browser and scan the QR code below to download and install the APP



(2). Application market installation Android: Search the Google Store [AZcam] IPhone: Search the App store [AZcam]

## 2. User registration login

Support email and third-party registration login. As the picture shows:



## 3. Product buttons and indicator light description

#### Power button

Long press the power button to turn on and off

#### M kev


Press and hold the M key for about 7 seconds to restore the factory settings.

### Pilot lamp

- (1). The yellow light remains on during charging, but turns on when fully charged.
- (2). The hotspot mode indicator is steady blue. In video recording, the blue indicator blinks slowly, while the blue indicator is steady on.
- (3). The network mode is steady red. The red light blinks slowly with a card, and the red light is steady without a card

## 4. Hotspot Add camera operation

- (1).Long press the power button to turn on the device, wait for the blue light to stay on, open the phone settings, connect to the network, and find the hotspot number sent by the machine as: IPC-\*\*\*\*\*\*\*\*\*(the hot spot prefix is the same. the suffix is different), and then click Connect.
- (2). After the connection is successful, open the APP, the device will be automatically added, and it will prompt you to set a password when you click open.

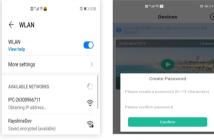

Mobile network connection

APP password modification

# 5. Network addition Settings

After the hotspot is added successfully, open the APP, click Settings in the upper right corner of the APP, open the Settings screen, find the network Settings and click in, enter the network Settings screen, click routing mode, and then select the router name and password you want to add. After the setting is successful, the machine will automatically restart. Please wait about 20 seconds





settings window

Network settings interface

## 6. Precautions

- (1). Long press the power button to turn on the device, but the indicator light does not light up and it cannot be turned on.
- Due to the device being left for too long and the battery running out. please charge the device. It will take about 100 minutes to fully charge. and the red light will turn off when fully charged.
- (2) IPC-\*\*\*\*\*\*\* The hotspot cannot be searched.
- Please observe whether the indicator is steady blue. If not, press and hold the reset button for 7 seconds to restore factory Settings.
- (3). The remote monitoring is not smooth.
- Ensure that the network environment is smooth, broadband is enough, and then choose a reasonable video effect according to the actual situation.
- (4). Memory card does not save files or files cannot be read.
- Format the memory card. Note that formatting the memory card will delete all data in the memory card. Before performing this operation, ensure that the memory card is in normal use.
- (5). After the device pushes the network mode, it is always in the offline state, and the blue and green lights are on.
- (1) Restart the machine after setting the network mode.
- (2) Please make sure that the network you are connected to is smooth, and then make sure that the input wifi password is correct. Note the case when setting the password. The device does not support 5G network for the time being, but only supports 2.4G frequency wifi. The wifi encryption mode cannot be WEP, and the password cannot be empty.
- (3) Please make sure that the device is within 10 meters of the router you are connected to.