 


NANO-4K

USER MANUAL

 
 


IN THE BOX

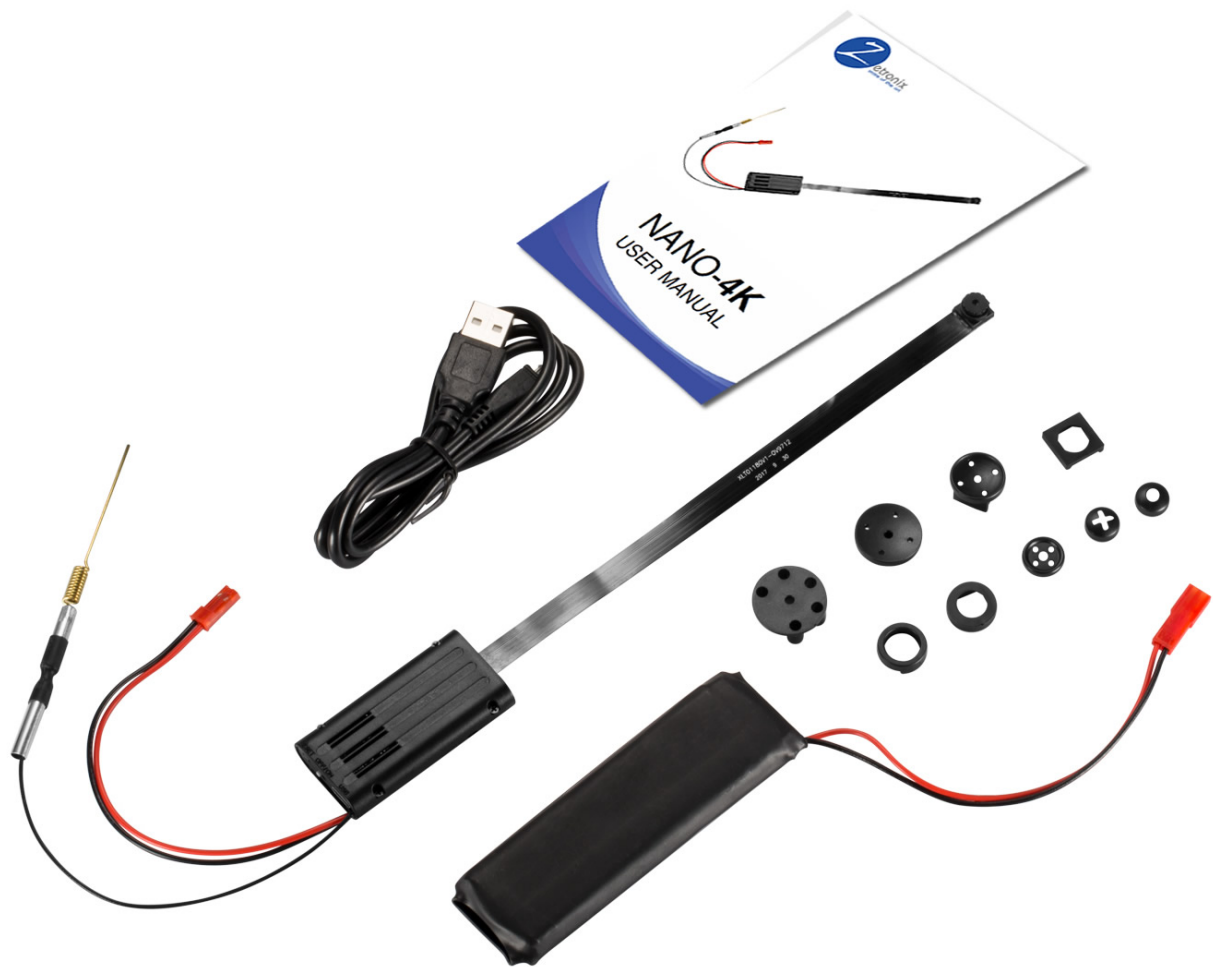

- A** NANO 4K camera unit
- B** Li-ion battery
- C** USB cable
- D** 8x shirt buttons
- E** This manual

DIAGRAM

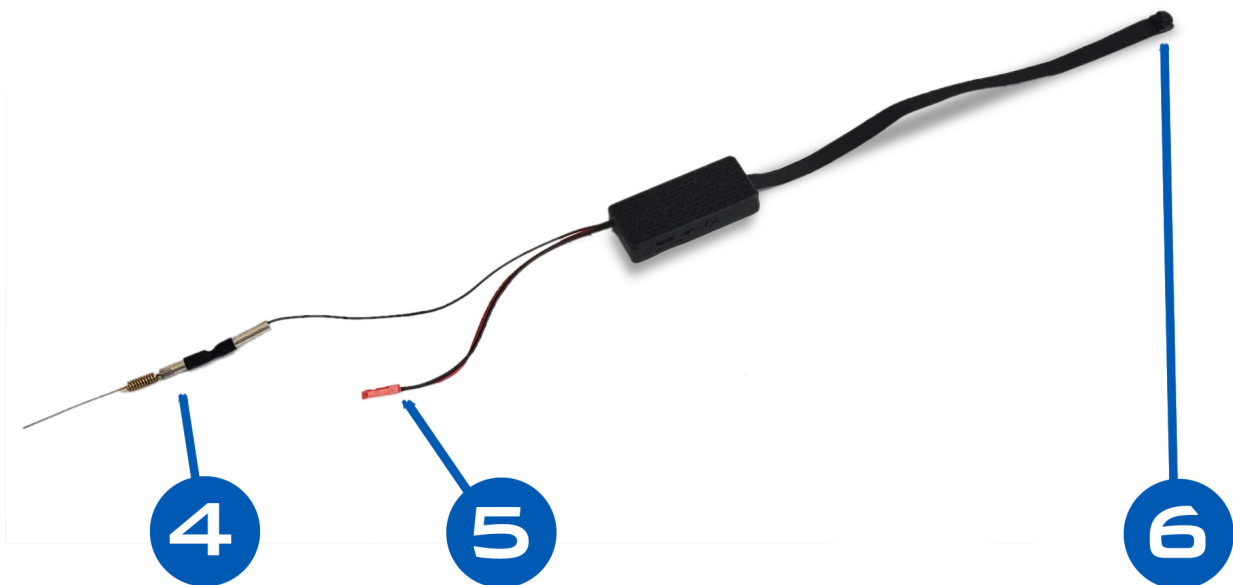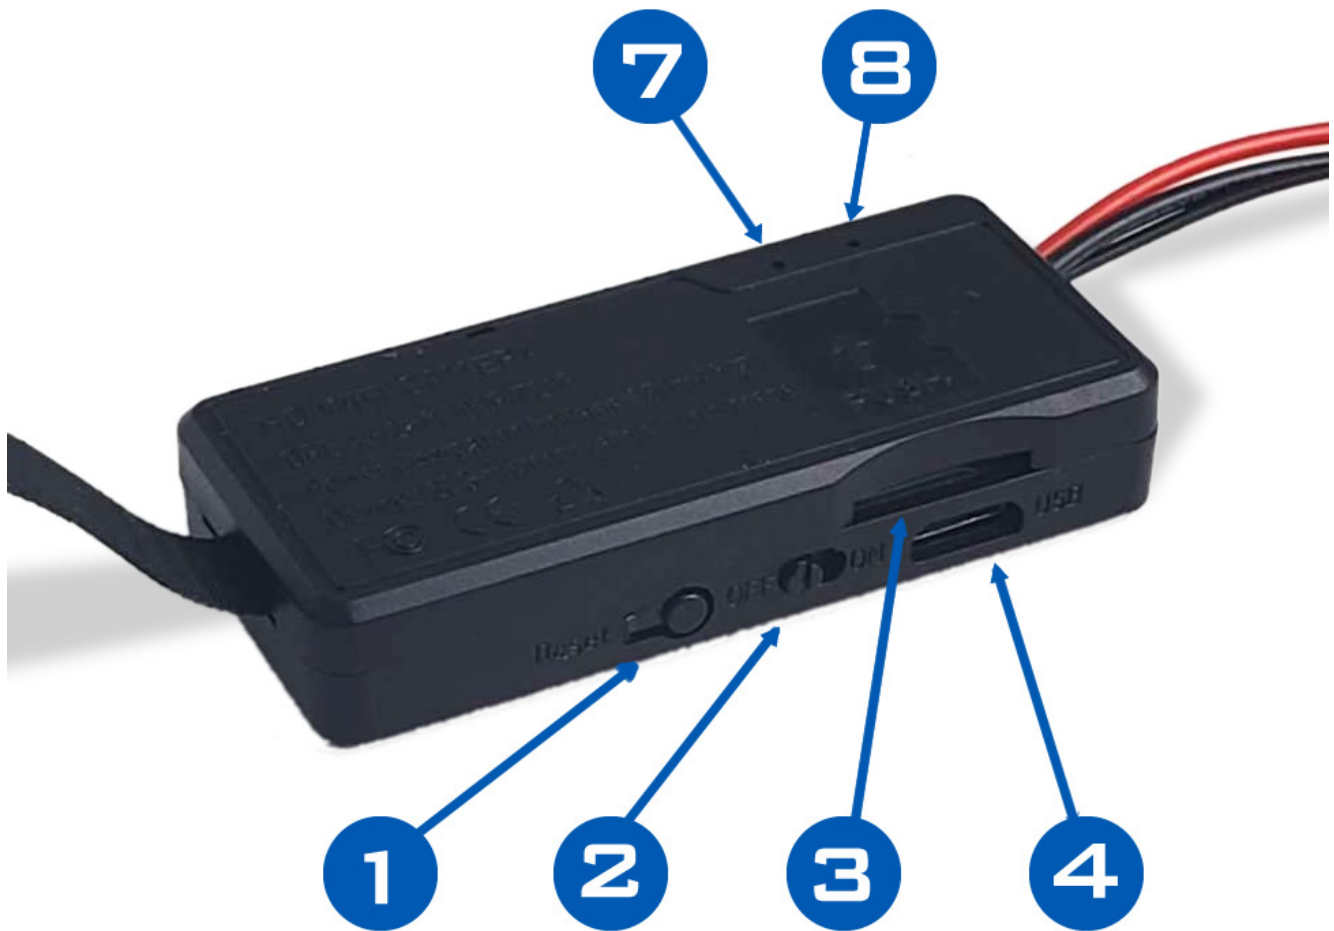

SETTING UP THE APP

1. Download the app - LookCam

Search and download **LookCam** on the App Store or Google Play. you can also scan the QR code below via QR scanning app for direct URL link.



2. Setup the NANO

Insert a Micro SD card in the card slot ❸ if you're planing on recording media directly on the NANO. Push the card in all the way until you feel it click.

Plug in the included battery to the NANO's battery connector ❺.

Turn on the camera: move the switch ❷ to the **ON** position, wait until the indicator light ❸ starts blinking solid blue.

To charge the battery, use the included USB cable to connect to a charger or any live USB port. Then connect to the NANO USB port ④.

 
 
 
The indicator will stay on red while charging and go out once fully charged.

3. Setup the WIFI

Connect your phone to this camera's WiFi access from your phone's WiFi settings, search and connect to the WiFi signal starting with "F###...".






Back in the App, if it hasn't detect your camera yet, add one by tapping the "+" plus sign, **Add new online camera**, then **ADD BY LAN**. You should see a new device listed.

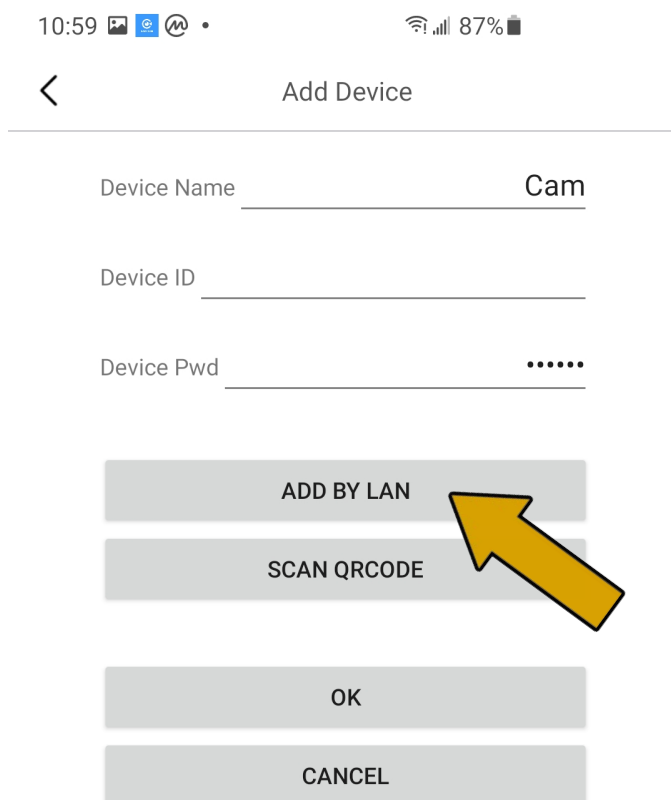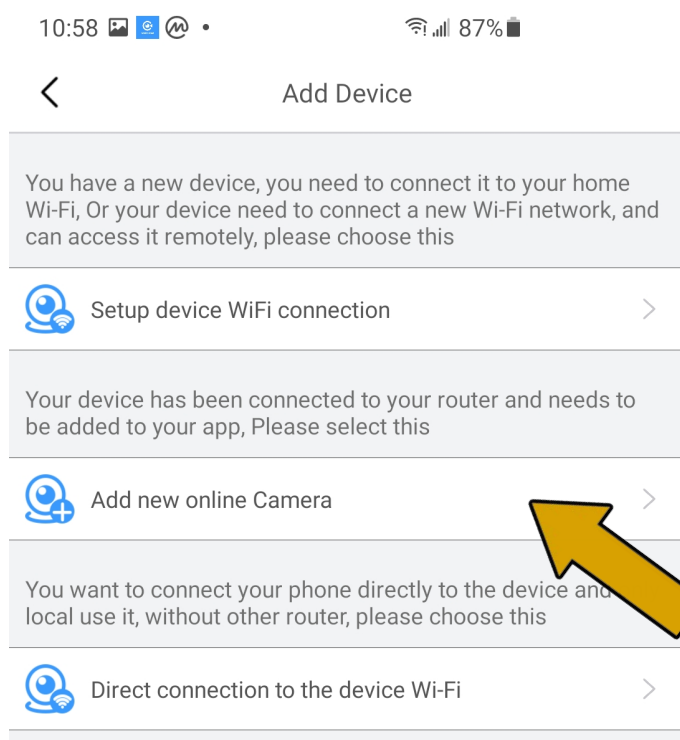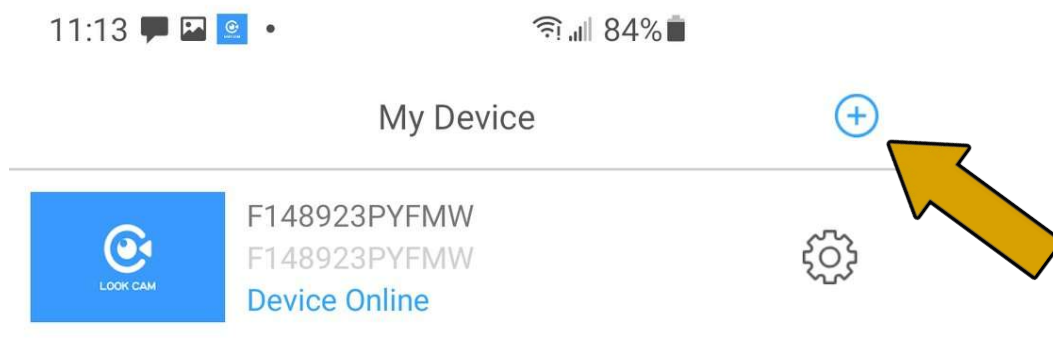

4. Setup remote connection

   Tap the gear icon from your camera device, then **Config Wi-Fi**, or **WiFi Setting** if on an Android.

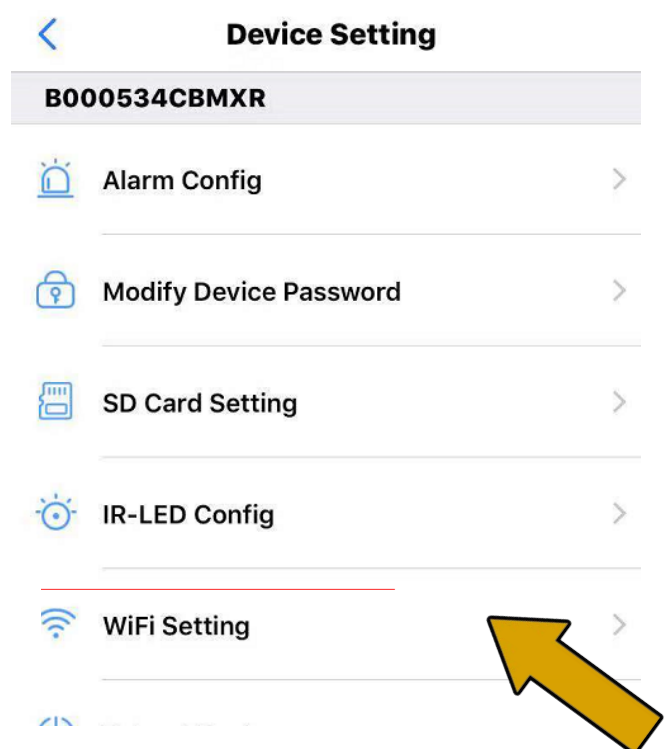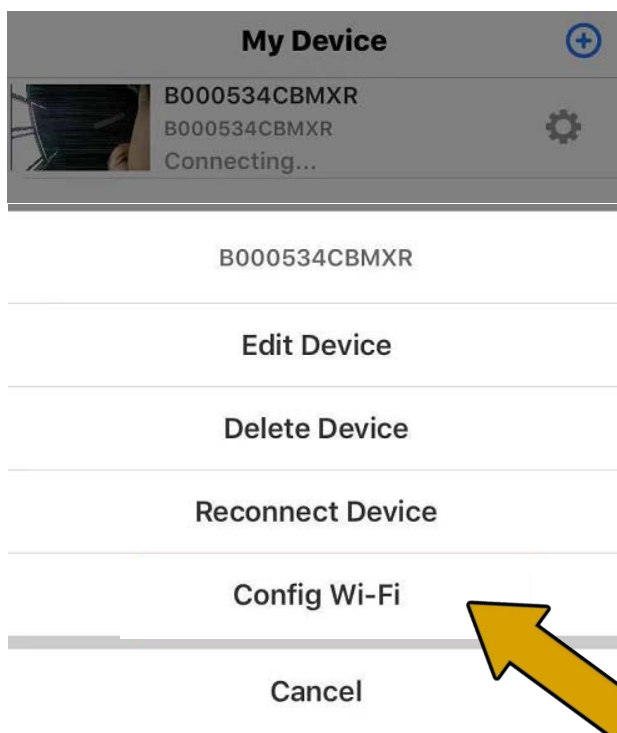
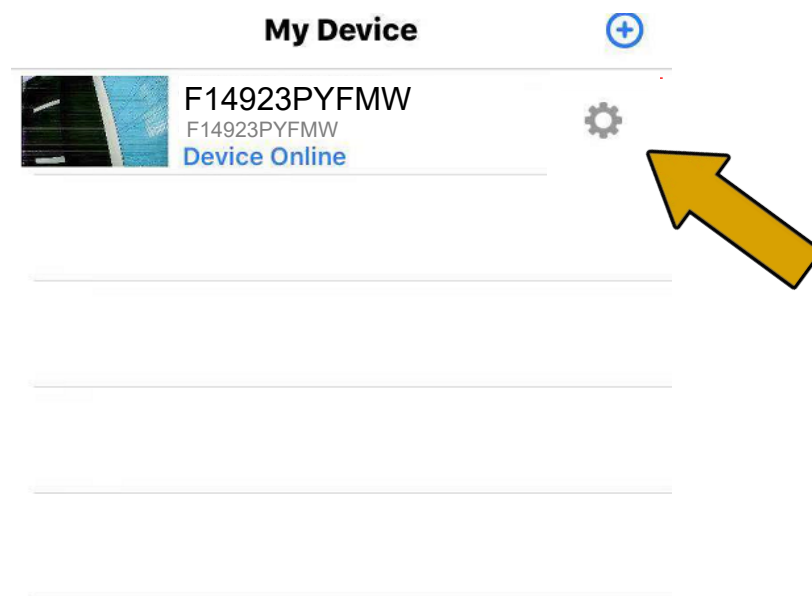


Finally, choose your local WiFi network and enter the password. If you don't know your local WiFi password please check with your internet provider.



Once connected you will be able to watch and control video recording live from the app remotely.

  Tap on the camera device on the list, it may take 30 seconds for video to come up.

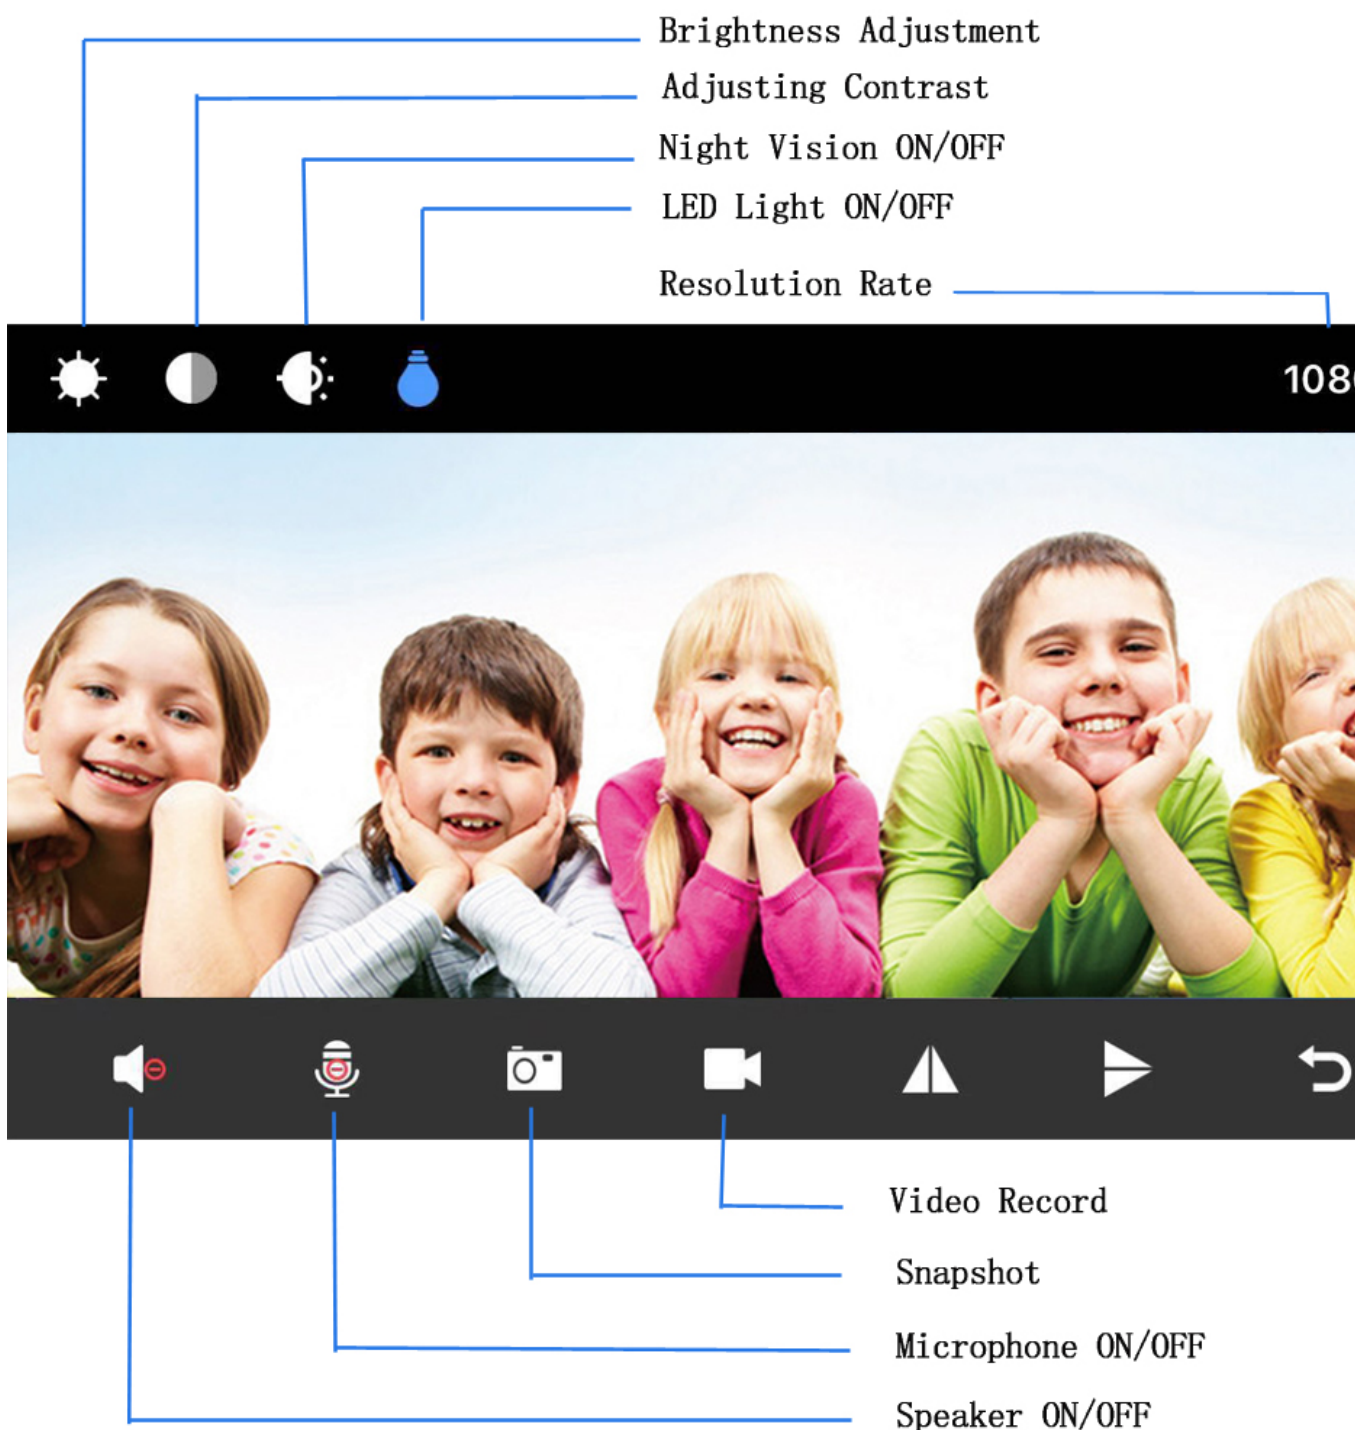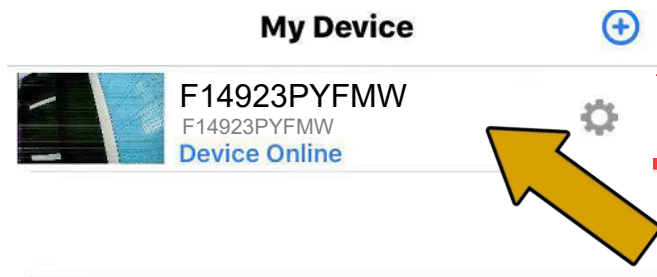

Frequently Questions & Answers

What micro SD card is required for recording?

- The camera supports up to 128GB micro SD card.

Please use high speed class 10 FAT formatted memory card.

Why can't i use my micro SD Card for recording?

- You must format the micro SD before using. If SD card is not recognized when inserted into camera just remove and re-insert.

Why can't the camera go online?

1.The camera is far away from your router.

2.Check if your router is working properly or not .

3.Weak WiFi signal

4.Wrong password while WiFi setting.

Why is remote monitoring not smooth ?

- You should choose a suitable resolution to watch according to your internet speed.

When I forgot my password ?

- Press and hold the RESET button 15 seconds and restore the factory setting, then the password is recovered to default password: **123456**, and you can set your own passwords to ensure the security of your camera .

Product Specs

Resolution Ratio	4K / 1080P/720P/640P/320P
Video Format	AVI
Frame Number	25
Visual Angle	150 /90 degree
Motion Detection Camera Shooting	Straight line 6 meters
Minimal Illumination	1LUX
Video Duration	Over 1 Hours
Compressed Format	H.264
Recording Range	5m ²
Consumption	380MA/3.7V
Storage Temperature	-20-80 degree centigrade
Operating Temperature	-10-60 degree centigrade
Operation Humidity	15-85%RH
Memory Card Type	TF card
Player Software	VLCPlayer/SMPlayer
Computer Operating System	Windows/Mac OS X
Mobile Phone Operating System	Android/iOS
Web browser	IE7 and above,chrome,firefox safari.etc
Largest customer	4