



TITO

Voice Recorder | Music Player | Car Keychain


 

Getting Started



Please ensure the device has enough charge before operating it.
Connecting headphones will place the device in playback mode.

Operation

Start Recording: Do not plug in the headphones, slide the ON/OFF switch to the ON position, the red light will flash 3 times and go out.

Stop & Save: Slide the switch back to the "OFF" position to stop the recording and automatically save it and turn it off the device.

Media Playback: Plug in the headphones, hit the Forward or Previous buttons   to cycle through the media files. Hit the Mode  button to switch in between Music/MP3 playback and the Recorded media. You can also access the recordings via a computer.

Volume: Press and hold the Forward and Previous   to increase or decrease volume.

Charging

1. Plug recorder device to your computer or a USB wall charger (120v to 5v adapter) using the included USB cable.



2. Use a power adapter with a charging current of 1A or less to charge it, otherwise it may damage the voice recorder or cause a hazard (this product does not come with a power adapter).
3. In the charging state, the light flashes blue; when fully charged, the light will stay solid blue.

Precautions

1. When charging or connecting to the computer, first turn off the device. When unplugging, wait until the light is off before using it.
2. After finish recording, no matter whether the recorder has power or not, you must first reset the switch to save the recording file, otherwise the recording file will be lost.

Maintenance

Please back up the files often to avoid losing your recordings, the device will stop recording once memory is full.

Connect your device to your computer's USB port. Your operating system (Windows/MacOS/Linux) will automatically detect it and prompt you to review or back up the files.

Troubleshooting

Please ensure your device has a good charge. Also ensure that the memory isn't full or it will fail to record additional files.

Most issues can be solved by formatting the the device. **This will delete all stored and recorded files.**

First back up all your files stored in the device and then to format, connect it to your computer and use Windows or MacOS native format utility. For more information on how to format please search online.

Note:

- ★ Do not place this product in a heating device or in a high temperature environment.
- ★ Please use the charger with a current of 1A or less to charge the computer.
- ★ This product uses flash memory to store data, please backup the required data on the computer or other storage devices often. If the product is damaged or cannot be read/recognized, Zetronix is not responsible for the loss of data.

Device Specifications

| | | | |
|--------------------|--|----------|-----------------|
| Product type | Voice recorder | 4GB | up tp 48 hours |
| Record method | Power on reacording,Power off saving | 8GB | up to 96 hours |
| Battery | Environmentally friendly polymer lithium battery | 16GB | up to 192 hours |
| Recording Format | WAV | 32GB | up to 384 hours |
| Playback format | MP3/WMA/WAV | Sampling | 48KHz |
| Recording bit rate | 192KBPS | | |