



USER MANUAL

KYLO

Voice Recorder,
Music Player, Keychain




Light Indicator

USB Port

Memory Card Slot

ON/OFF Button

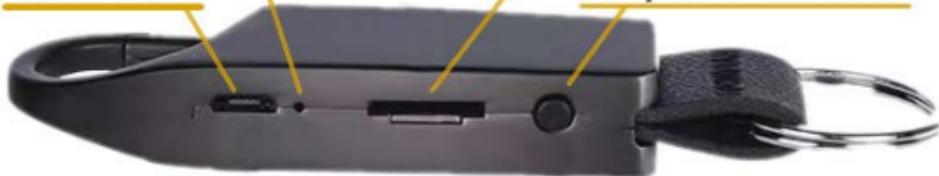

Getting Started

Please install a memory card and fully charge before operating the device.

To turn on/off the recording device, press and hold the ON/OFF button on the Keychain for 2 seconds.

To manage the recorded or stored media, make sure to connect the Controller cable.

Connecting headphones will place the device in playback mode.

Controller cable:



VOL+ / Next

Pause / play

VOL- / Previous

Operation

1. Recording/Saving

Start Recording: Do not plug in the headphones, press and hold the ON/OFF button for 2 seconds, wait for the red light to start flashing. It will light out but will continue recording.

Save the recording: Press and hold the ON/OFF button for 2 seconds to automatically save the recording and turn it off the device.

2. Music/Recordings Playback

Play: Connect the Controller cable and then the earphone cable, turn on the device, and it will go into **playback mode**;

Type Selection: Press "Pause/Play"  button on Controller cable to switch in between music or recorded media playback.

3. Volume adjustment / track switching

Volume adjustment: Under the playback mode, long press the "plus" or "minus"   buttons to increase or decrease the volume;

Track Selection: During the playback mode, quickly press the  or  buttons to switch between the previous and next songs.

4. Pause/Delete file

Pause: During the playback mode, long press "Pause/Play"  button to enter the pause state (red and blue lights flash alternately);

Delete mode: Press the  button while paused, the purple light will flash then enter to the **delete mode** (flashing purple light);

Delete a single recording: in the delete mode, quickly press the "pause/play"  button to delete a single file (flash blue light) ;

Delete all recordings: In the delete mode, press and hold the "Pause/Play"  button to delete all files (flashing red light);

Exit: Quickly press  to exit the delete mode, press "Pause/Play"  to un-pause.

! Note: Playing the recording status means deleting all the recordings. Playing the music status means deleting all the music.

5. Fast forward and rewind

Fast forward and rewind: Plug in the earphone, press the button to turn "ON" the device and then press the  button until it plays.

Fast forward and rewind: Press and hold the  button to fast forward, press and hold the  button to rewind.

Note: Volume not adjustable while under this operation mode.

6. Voice activated recording

Play pause state first: In the play state of the connected headset, long press "Pause/Play"  to pause.

Turn on the voice activated function: In the pause state, press and hold "Pause/Play"  for 3 seconds, the indicator light flashes blue a few times.

Turn off the voice activated function: In the pause state, press and hold "Pause/Play"  for 3 seconds, the indicator light flashes red a few times .

Voice-activated recording: Do not plug in the headphones after turning on, and turn it back on (flashing blue a few times) is the voice-activated recording.

7.Long recording (saving memory space, low recording sampling)

Play pause state first: In the play state of the connected earphone, long press "Pause/Play"  to pause;

Extra long open: In the pause state, press the  button for 3 seconds, the indicator light flashes blue a few times.


Extra long off: In the pause state, long press the  button for 3 seconds, the indicator light flashes red a few times.

Extra long recording: Simply don't plug in the headphones after turning on or restarting (flashing blue a few times).

Time Setting

Connect the device to the computer via the included USB cable, when you browse the new drive in your system, look for a folder called "Time synchronization tool". Inside this folder look for the SET DISK TIME utility. Double click to run it. Click "**Set Time**", as shown in the figure, and it will automatically update the devices time from your computer's time.

! If you need to format the device, Please back up this folder. Prevent loss.

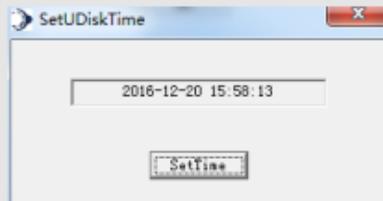

Troubleshooting

General Troubleshooting

Most issue can be solved by formatting the the device. **This will delete all stored and recorded files.**

First back up all your files stored in the device and then, to format connect the device or the memory card to your computer and use Windows or MacOS native format utility. For more information on how to format please search online.

Once formatting is done you can copy the default backed files (Time Synchronization Tools) back onto the device.

Unable to connect it to the computer via the USB cable, or computer not detecting it.

First check if the plug is in place. If the computer still does not respond, try to switch to a different computer connection. Some computers cannot be recognized because of the lack of a driver. If you still can't identify it after you try it, you can contact after-sales upgrade or after-sales service.

Plug in the earphone to boot but not enter the play state?

Insert the earphone, then turn on the device, after the light blinks for a few seconds and then goes off, turn off the device. When the red light comes back on, turn the device ON again, and then you will be in the playback state.

This recorder comes with a smart reset system. Please save the file being recorded before connecting to the computer. Due to the high recording quality and clear sound parameters of this product, the recording file is relatively large. Please back them up often. Zetronix is not responsible for the loss of data.

Function parameter

Product type	Voice recorder	4GB	up tp 48 hours
Record method	Power on reRecording,Power off saving	8GB	up to 96 hours
Battery	Environmentally friendly polymer lithium battery	16GB	up to 192 hours
Recording Format	WAV	32GB	up to 384 hours
Playback format	MP3/WMA/WAV	Sampling	48KHz
Recording bit rate	192KBPS		

Charging

1. Plug the data USB into the device's USB port socket and connect it to your computer or USB charger for charging. It is recommended to connect the voice recorder to the computer with a USB cable.
2. Use a power adapter with a charging current of 1A or less to charge it, otherwise it may damage the voice recorder or cause a hazard (this product does not come with a power adapter).
3. In the charging state, the red light is on while charging, once fully charged it will start blinking.

Precautions

1. When charging or connecting to the computer, first turn off the device. When unplugging, wait until the light is off before using it.
2. After finish recording, no matter whether the recorder has power or not, you must turn off the device so the recording is saved, otherwise the recording file will be lost.

Note:

- ★ Do not place this product in a heating device or in a high temperature environment.
- ★ Please use the charger with a current of 1A or less to charge the computer.
- ★ This product uses flash memory to store data, please backup the required data on the computer or other storage devices often. If the product is damaged or cannot be read/recognized, Zetronix is not responsible for the loss of data.