



Manual




CONTENTS:

 
Overview	Page 1
Diagram	Page 2
Camera Setup	Page 3
Using the App	Page 9
Live View Stream	Page 10
Advanced App Features	Page 11
Local Recording	Page 12
Alarm Notifications	Page 13
Media Playback	Page 14
Specifications	Page 15
Support	Page 16
Warranty	Page 17

Overview



Clock Diagram

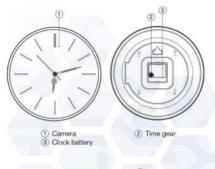



- (4) Lan port
- (5) Reset
- Micro SD card slot
- (7) USB port
 - (8) ON/OFF (For Wi-Fi Camera)
 - LED indicator. To turn on or off see page 11

CAMERA SETUP

Step1: Download and install HDSmartIPC APP

Scan below QR code or search and download free APP named "HDSmartIPC" in Apple APP store, Google play or Electronic market, and install it.



Step 2: Turn on device and connect power


Plug the WeahterStation to the AC if the battery is low.

Turn on the unit by sliding the ON/OFF switch on the side to the ON position to turn on the WiFi, a blue indicator light will come on, wait one minute for the WiFi to establish a transmition.

Step 3: Connect Wi-Fi

Open your smartphone settings, search and connect the device's wireless signal name starting with the

letters "LM..." or "Al...",wait for Wi-Fi to connect, and phone status bar shows the Wi-Fi symbol \rightleftharpoons in blue.

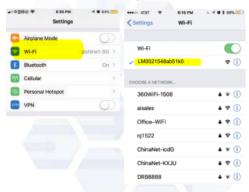

Enter the App, and the app will add just the connected camera automatically.



if you dont see any listed press the plus sign (+) to add a new camera. On the next screen hit **LAN search** device, then you will be shown a list of all detected cameras. You should see at least one. Hit **Add** to add the camera




Back on the App's main screen you will see a video preview display of the added camera. Press the gear & icon to open settings then select **Device settings**.





Select Wi-Fi Config (Network configuration on Andoid phones) then look for your local WiFi network name (SSID). You will be prompted for your local network Password. The App will now connect to the camera.

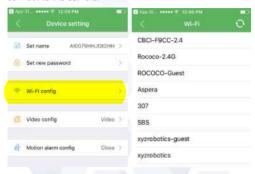

Quit and restart the App, and the device will start up with the WiFi connected within 30 secods.


You can now go back to your phone settings as in page 7 and connect your phone back to your local network.

 
The app will now stream live videos from anywhere as long as your phone has internet access.

Seting up camera name and password:

Hit the gear icon (2) below the camera view, then select **Modify Device**, you will be prompted to **Set name**, choose a new camera name, then set the **Set new password**.

The Default (old) password is **8888**. Enter your desired password, and hit **OK**.

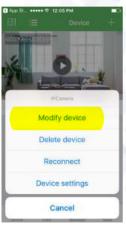




USING THE APP



Live playback view:

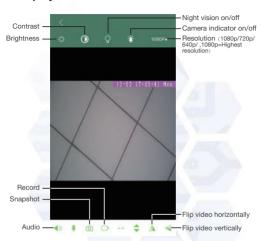

Advanced features:



TIPS: Each setting in Device Settings, please scroll down and press ok to save the setting.

LOCAL RECORDING

Media can be recorded to a memory card installed on the device. First make sure that you have a MicroSD memory card installed in the WeatherStation.

Hit the gear icon (2) below the camera view to go into **Device settings** then select **MicroSD Card Config**, on Android phones look for **TF card set**.

You have the option to format the memory card, record at all times, record at specified intervals, or stop the recording.

Recording lengh is the maximum video file segments lengh

Alarm video will record locally when motion is detected and alert you on your phone. Please refer to the next section on this manual to set up alarm notifications.



ALARM NOTIFICATION

Alarm rnotification will sent you a notification and record a snapshot when the camera detects motion.

Under **Device settings** choose set **Motion Alarm config** and set **Motion detection** to ON.

Alarm interval is the time it should continue to record after motion trigger.



To record the video on Alarm, please refer to the previus section.

Playback on PC

Videos can be reviewed and copied to a hard drive by removing the micro SD card from the camera and inserting it into a computer. It will come up as a removable drive and all the files can be accessed by opening the folder.



For playback we currently recommend a free program called VLC Player, found at

www.videolan.org

Zetronix is NOT AFFILIATED with www.videolan.org

Specifications

Sensor 2 Megapixel CMOS

Video Resolution 1920x1080

Video Format H.264

Frame Rate Max 25 FPS

Camera Angle 90 Degrees

Battery Capacity 3000 ma

Battery Time 5-6 hours

Charge Time 7-9 hours

Max Memory 128GB

Still Have Questions?

Do not return your camera

For additional assistance contact Zetronix Tech Support

By Phone	877-644-7592
By Email	support@zetronix.com
On the web at	help.zetronix.com

1 Year Limited Warranty

Zetronix Corporation ("Zetronix") warrants this product against defects in material or workmanship as follows: PRODUCT: Zetronix will repair this product with new or refurbished parts, free of charge, for a period of one (1) year from the date of original purchase in the event of a defect in materials or workmanship. REPAIRS: Zetronix will repair or replace defective parts used in the repair or replacement of this product with new or refurbished parts, free of charge, for a period equal to the remainder of the original limited warranty period on the original product, or for 60 days after the date of the repair or replacement, whichever is longer. This warranty is extended only to the original purchaser. Proof of purchase in the form of a bill of sale or receipted invoice, which is evidence that the unit is within the warranty period, must be presented to obtain warranty service. To obtain warranty service, you must take this product, or deliver the product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, to Zetronix Corporation. See below for additional information. This warranty only covers failures due to defects in materials and workmanship, which occur during normal use. The warranty does not cover damages, which occurred in shipment, cosmetic damage, damage that is attributable to acts of God, failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, faulty installation, misapplication, improper installation, operation or maintenance, alteration, modification, introduction of sand, humidity or liquids, line power surge, improper voltage supply, lightning damage, or subjecting the product to operating/environmental conditions in excess of the maximum values or below the minimum values set forth in the applicable specifications, or products serviced by anyone other than Zetronix. This warranty is invalid if the factory-applied serial number has been altered or removed from the product. This warranty does not cover products sold AS IS or WITH ALL FAULTS. his warranty excludes consumable parts such as batteries and power supplies.

Zetronix Corporation ("Zetronix") warrants this product against defects in material or workmanship as follows: PRODUCT: Zetronix will repair this product with new or refurbished parts, free of charge, for a period of one (1) year from the date of original purchase in the event of a defect in materials or workmanship, REPAIRS; Zetronix will repair or replace defective parts used in the repair or replacement of this product with new or refurbished parts, free of charge, for a period equal to the remainder of the original limited warranty period on the original product, or for 60 days after the date of the repair or replacement, whichever is longer. This warranty is extended only to the original purchaser. Proof of purchase in the form of a bill of sale or receipted invoice, which is evidence that the unit is within the warranty period, must be presented to obtain warranty service. To obtain warranty service, you must take this product, or deliver the product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, to Zetronix Corporation. See below for additional information. This warranty only covers failures due to defects in materials and workmanship, which occur during normal use.. The warranty does not cover damages, which occurred in shipment, cosmetic damage, damage that is attributable to acts of God, failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, faulty installation, misapplication, improper installation, operation or maintenance, alteration, modification, introduction of sand, humidity or liquids, line power surge, improper voltage supply, lightning damage, or subjecting the product to operating/environmental conditions in excess of the maximum values or below the minimum values set forth in the applicable specifications, or products serviced by anyone other than Zetronix. This warranty is invalid if the factory-applied serial number has been altered or removed from the product. This warranty does not cover products sold AS IS or WITH ALL FAULTS. This warranty excludes consumable parts such as batteries and power supplies.