 




Kestrel 4K
4K UltraHD Camera Video Recording Eye
Glasses

4KCC-Kestrel

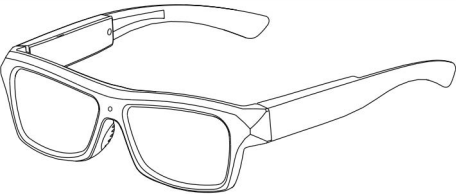


Controls

  Please insert the Micro SD Card and charge the glasses battery before operation.

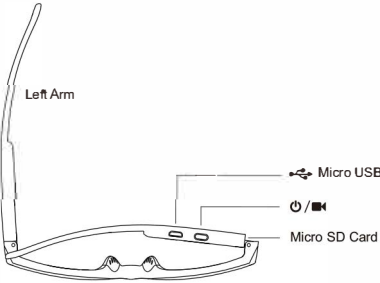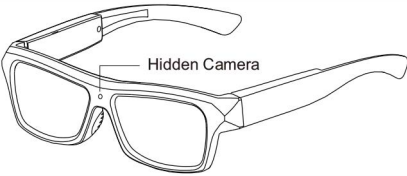

1

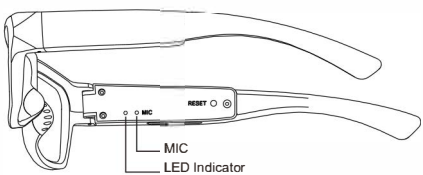 


Status	Controls	Indicator
Power on	Press and hold for 5 sec.	Solid blue
Take video	(Automatically take video after solid blue 8 sec. then goes off)	
Stop reording/Standby	Press	Solid blue(120 sec. off)
Take photo	Double click on Standby	1 Flash blue
Charge	Connet to a PC or Mac USB	Solid red
Fully charged	(Connected with USB)	Solid blue
Memory full		Solid green
Low battery	(Automatically Power off)	Flash blue then goes off
Power off	Press and hold for 5sec.	Flash blue 3times then goes off
Take video on charging	Press (Not available when connect with PC USB)	Flash red and solid blue
Work on PC / Web	Press and hold for 2 sec. during PC USB mode	Solid red (USB removeable device disappear)
Reset	Press the RESET button	Indicator goes off
No Memory Card	(Automatically Power off)	Flash blue 3times then goes off

2


Charge

 Use the supplied USB cable to connect your glasses to a running computer and charge the glasses. The indicator shows solid red during charging. The light turns solid green when the battery is fully charged.

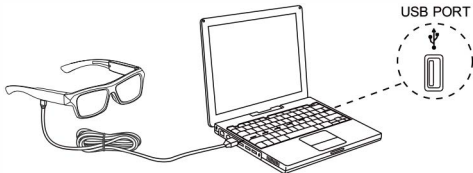

Time Setting

Connect the Glasses to your computer.Open the Removeable Disk. Find the file named "TIME".Open it and enter the current date and time data in the format as below: ("Y" for display the timestamp."N" for not display.)

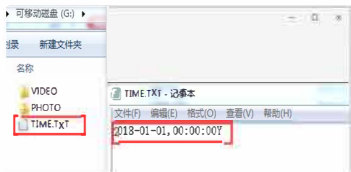

3

Take a Video


Press and hold the power button for 5 seconds to power on the glasses. The device will begin recording, indicated by a solid blue light, and will automatically turn off after 8 seconds. To stop recording, quickly press the power button. The device will enter standby mode, indicated by a solid blue light. While in standby mode, double press the button to capture a still photo. The blue light will flash once to confirm. To power off the device, press and hold the power button for 5 seconds. The blue light will blink and then turn off.

Video recording trick
Please pay attention to the angle and distance between the glasses and objective before recording video. We suggest you practicing a few times prior to getting start.



Download and play Videos

Connect the glasses to your computer.and press 8 seconds, the glasses turn on. The device appears as a "Removable Disk" in Windows Explorer. Open the DCIM folder inthe disk, copy or move the video files to your local hard disk. Playthe videos with "Windows Media Player" or other supported media player.The glasses is PC-Camera if " Removable Disk" can't be found in Windoes Explorer.

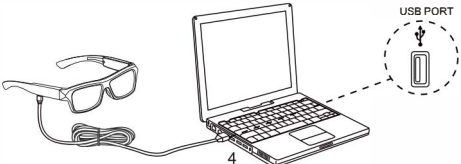

4

Trouble Shooting

Unable to turn on Glasses
Check the battery power. Recharge the battery if the power exhausted.

Unable to take video
Please check if the memory card is full. Delete or remove the video files for releasing memory space of your glasses.

Auto shut-off
Check the battery power. Recharge the battery if the power is exhausted.
If auto shut-off on video recorder mode, check if the memory card is full. Delete or remove the video files to your computer hard disk for releasing memory space of your glasses.

Removable disk is not found in Windows Explore
Check if the USB connection is fine. Check if the memory card is fine, change another USB connection or another computer to try.
Resetting
Most problems can be solved by resetting. Simply press RESET button on the right arm.
- Resetting will not erase the videos and other files stored in the glasses memory card.
- If the reset procedure does not work, charge the battery and try again.

Use the battery properly

Please charge the battery for 2 hours until the red indicator turns off for the first time using.
If the battery is exhausted, please recharge the battery as soon as possible.

5

If you don't use the glasses for a long time, please fully charge the battery to avoid battery damage from over discharge.

Specifications

Camera	8.0Mega Pixels color CMOS
View Angle	64°
Video Format	AVI (2704*1520@30fps)
UVC Mode	UVC(3840*2160@15fps)
Audio Recording	Stereo Sound
Memory Type	TF/SD card(Max. 256G)
Battery	250mAh 3.7V Li-Ion Polymer Battery
Input Power	DC 5V, 1A
Charging Time	1.5~2h by computer USB Charge (approx.)
Optional Charger	AC Adaptor, Car Charger
Battery Working Time	50~60 mins recording after fully Charged
Interface	USB2.0
Operation System	Windows 7 / 8 / 10 / Mac OS / Android
Operation Temperature	0~40°C
Operation Humidity	15~85%RH
Weight	30g
Dimension	W*D*H 157 x 160 x 33mm (approx.)

Note: Specifications are subject to minor change with upgrade and update. Please base on real object.

6

In the box



7