

### zBlackBox-HD4

PROFFESINAL DASH CAM

Man

Page 1 | 14

### Interface

### Contents

(3) (4) (5)	(8) ———— (9) ————	
(6) (7)	(10)	

1 – <b>Power</b>	2 – Rec/Left
3 – <b>Menu</b>	4 – Emergency/Confirm
5 – Mic/Right	6 – USB Port
7 – <b>AV Out</b>	8 – Reset
9 – MicroSD Slot	10 – <b>USB Port</b>

Interface	Page 3
In the box	Page 4
Installation	Page 5 - 6
Operation	Page 7 – 9
Setting	Page 10 – 11
Playback	Page 12
Contact Us	Page 13
Warranty	Page 14

### In the Box



(GPS Mount is an optional accessory is and not included with the box unless purchased)

### Installation



Slide either the GPS mount (**sold separately**) or the non-GPS mount into the slot on the back of the camera and push it up.

(NOTE: GPS data can only be recorded while using the GPS mount. The GPS feature is optional)



Peel of the protective paper from the mount to reveal the adhesive surface.

Press the adhesive surface to the point on your windshield you are mounting the camera to. Make sure the camera lens is not blocked by things such as a sun

Page 4 | 14

### Installation



Connect the USB cord to the USB port on the top of the GPS mount. If you are not using the GPS mount, connect the USB cord to the USB port on the side of the camera.

NOTE: If you connect the USB cord to the side of the camera, even while using the GPS mount, NO GPS data will be recorded unless you connect the USB cord directly to the GPS mount. Connect the other end of the USB cord into the USB car adaptor and plug it into your vehicle's 12 socket.



Adjust the position of the lens as shown so that the lens is facing directly forward and is even with the road.

## **Operation**

#### **LED Indicator**

The LED indicator will change color to show different modes. When the Power to the camera is on but it is not recording, the LED will be

RED. When it is recording the LED will flash green. the LED will also flash green when you install new firmware

#### **Buttons and Icons**

Mode	Buttons	Behavior	
	Ø	To turn on/off device	
	MENU	One click can enter setting menu	
Stand-by		Enter palylist	
wode		One click can start recording	
		One click can turn off record volume, once again to turn on record volume	
	Ø	One click can turn off the screen, once again to turn on the screen	
Recording Mode	DIENU	One click can capture a photo	
		One click can lock the file being recorded	
		One click can stop recording	
		One click can turn off record volume, once again to turn on record volume	

Playlist Mode	Ø	One click can turn off the screen, once again to turn on the screen	
	DIJETM	Back to previous menu	
		1. To select the last video 2. To delete the video	
		1. To select the next video 2. To lock/unlock the video	
		1. To enter the video selected 2. To play/pause the video	
	ø	One click can turn off the screen, once again to turn on the screen	
Setting	MENU	One click can back to recording mode	
Menu Mode		To select the last feature	
		To select the next feature	
	Â	To enter the feature selected	

### **Operation**

#### Screen Info



#### **Starting Up**

Insert the MicroSD (Sold Separately) card into the SD card slot. Connect the camera to your vehicle's 12v power socket. When you start your vehicle, the camera will automatically turn on. When you turn your vehicle off the camera will automatically shut off.

NOTE: Some vehicles provide constant power via the 12v socket while turned off. If your vehicle does this, you will need to manually turn the camera on and off with the POWER BUTTON. Hold the power button for 5 seconds to power on and off.

#### Recording

By default the camera is in LOOP RECORDING mode. It will record video clips until the memory card is full, and then it will record over the oldest video clip. You can change this setting in the SETTINGS MENU

To record while parked, you can choose from recording modes; TIME LAPSE which will take photos slowly over time and MOTION DETECTION which will take video when motion is detected. See Page 9 on setting these modes.

#### **Emergency Recording**

When an extreme force such as sudden stop or collision is detected the camera will save the current clip as an emergency recording that will not be overwritten by loop recording until you choose. You can manually save your current video as an emergency recording by pressing .

#### **Muting Audio**

At any time, press the MIC button to mute any sound from being recorded to your videos.

## **Settings**

Press the MENU button while in STANDBY MODE to open the SETTINGS MENU. The settings available are as follows.

Resolution	Setting video resolution of footage recorded,
	2560x1440P 30fps, 2304x1296P 30fps, 1920x1080P 60fps,
	1920x1080P 30fps, 1280x720P 120fps, 1280x720P 60fps,
Loop Recording	Choose the length of your video clips. If you choose OFF you will deactivate LOOP RECORDING and when your memory card is full, recording will stop.
Exposure	Change the amount of light picked up by the video sensor. Adjust
	the value of the EV (Exposure Value) to obtain
	better recording results under different light sources. Range is from -2.0 up to +2.0. Default is set at 0.0.
WDR	(Wide Dynamic Range) video in low light will appear clearer,
	but overall video quality may be reduced at times.
Time Lapse	Choose a length of time between still photos that will be taken
Recording	automatically while not in RECORDING MORE (good for
	leaving your car parked) Leave this in OFF when you do not
	want to take time-lapse video. (NOTE: the camera requires
	constant power to use this mode.)
Motion Detection	Turn motion detection on or off. While on, the camera will record video only when it detects movement. (NOTE: the camera requires constant power to use this mode.)
GPS	Manually turn GPS data on or off.
Speed Unit	Choose if you want MPH or KMH displayed on your videos.
G-Sensor	Set sensitivity of the sensor that will detect a collision or
	sudden stop.
LDWS	Lane detection warning system camera will beep when it thinks you have drifted out of your lane
FCWS	Forward collision warning system. The camera will beep
	when it thinks you are too close to an object in front of you.
Date Stamp	Choose if you want the date and time to be stamped onto
	your video clips.
Model Stamp	Choose if you want the model of the camera stamped onto
	you video clips.
Record Audio	clips. (You can change this while recording with the MIC button)
Screen Savers	Choose if you want the screen to turn off after three minutes or stay on.

Date/Time	Set the current Date & Time
Time Zone	Set your current Time Zone
Lang <u>uage</u>	Set Display Language
LED	You can set the LED OFF or ON
Beep Sound	Toggle Menu sound on and off
Frequency	Set Light Frequency (Continental US Set to 60HZ)
Format	Complete erase all files from the memory card Format
	Warning - Set a monthly reminder to format the memory card (it's good to do this every few months)
Default Settings	Return all settings to factory default
Car No	Set a name or number to be stamped on the video that shows the place of your vehicle (Great for Large Fleets)
Customize Text	Choose any text to be stamped into your video
Version	View the current firmware version

Page 10 | 14

### **Playback**

#### **Playback on Camera**

In STANDBY mode, press the Abutton to open your video playlist. Use the button and button to select a video to play back. Press the button to play and pause. Press MENU to go back.

#### **Playback on Computer**

Connect the camera to your computer with the USB cable. The camera will appear on your computer as a removable drive. You can also remove the SD card from the camera and connect it to your computer with a SD card reader.

Enter the removable drive. Inside is a folder called DCIM. Open DCIM.

Inside are three folders.

MOVIE - This folder contains your video clips

EMR - This folder contains clips saved in EMERGENCY MODE

**PICTURE** - This folder holds pictures taken manually

#### IF YOU PURCHASED THE OPTIONAL GPS RECEIVER PLEASE

GOTO

### WWW.ZETRONIX.COM/DOWNLOADS

TO DOWNLOAD SOFTWARE AND INSTRUCTIONS

### **Contact Us**

**Still Have Questions?** 

# Do NOT return your camera! We will HELP!

For additional assistance contact Zetronix Tech Support

By Phone	(877) 644-7592
By Email	<u>support@zetronix.com</u>
On the Web	http://help.zetronix.com

### **1 Year Limited Warranty**

Zetronix Corporation ("Zetronix") warrants this product against defects in material or workmanship as follows:

PRODUCT: Zetronix will repair this product with new or refurbished parts, free of charge, for a period of one (1) year from the date of original purchase in the event of a defect in materials or workmanship. REPAIRS: Zetronix will repair or replace defective parts used in the repair or replacement of this product with new or refurbished parts, free of charge, for a period equal to the remainder of the original limited warranty period on the original product, or for 60 days after the date of the repair or replacement, whichever is longer. This warranty is extended only to the original purchase. Proof of purchase in the form of a bill of sale or receipted invoice, which is evidence that the unit is within the warranty period, must be presented to obtain warranty service. To obtain warranty service, you must take this product, or deliver the product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, to Zetronix Corporation.

See below for additional information. This warranty only covers failures due to defects in materials and workmanship, which occur during normal use. The warranty does not cover damages, which occurred in shipment, cosmetic damage, damage that is attributable to acts of God, failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, faulty installation, misapplication, improper installation, operation or maintenance, alteration, modification, introduction of sand, humidity or liquids, line power surge, improper voltage supply, lightning damage, or subjecting the product to operating/environmental conditions in excess of the maximum values or below the minimum values set forth in the applicable specifications, or products serviced by anyone other than Zetronix. This warranty is invalid if the factory-applied serial number has been altered or removed from the product. This warranty does not cover products sold AS IS or WITH ALL FAULTS. This warranty excludes consumable parts such as batteries and power supplies. THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED ABOVE REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE PURCHASER. MYVU SHALL NOT BE LIABLE FOR LOST PROFITS, LOST SALES, LOSS OF USE OF THE PRODUCT, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND TITLE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

#### Limitation of liability

SELLER SHALL HAVE NO LIABILITY FOR ANY CLAIM, LOSS, DAMAGE OR EXPENSE OF ANY KIND, INCLUDING FOR LOST PROFITS, SPECIAL, INDIRECT, CONSEQUENTIAL, EXEMPLARY OR INCIDENTAL DAMAGES, WITH RESPECT TO THE SELECTION, QUALITY, CONDITION, MERCHANTABILITY, SUITABILITY, FITNESS, OPERATION, PERFORMANCE, OR THE USE, MAINTENANCE OR REPAIR OF THE PRODUCTS EVEN IF SELLER OR BUYER HAS BEEN ADVISED OF THE POSSIBILITY THEREOF. THE PRICE STATED HEREIN WAS ARRIVED AT IN CONSIDERATION FOR LIMITING SELLERS WARRANTES AND LIABILITY AS PROVIDED HEREIN.

Some states do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state. If a problem with this product develops during or after the warranty period, please contact: Zetronix Corporation,