

# Kronos-Pro

2.7K SUPERHD MILITARY STYLE  
HIDDEN CAMERA WATCH



Attention



## Attention

Keep the triangles upward to capture videos in the right direction.



Correct facing up direction for the triangles.

# More Details



## Basic parameters

Video format	MP4
Video encoding	M-JPEG
Resolution, frame rate	4K、2K
Frame rate	30 frames
Support system	Windows、Mac
Full battery life	About 80 minutes
Charging voltage	DC-5V
Interface Type	Micro USB
Storage support	TF Card (16/32/64/128G, FAT32 format)
Battery Type	Lithium-ion polymer battery

## How to adjust the time



1.Lift the button and then adjust it to the correct time

2.Push the button back into its original position, and the watch will work normally.

## Charging:

Please charge the device by a DC-5V USB power supply, it needs to charge for about 90 minutes. It is charging when the red light on, it is fully charged when the green light runs on all the time.



Charging:  
red light flashes



Fully charged:  
the greenlight is always on



## | Turn on

After holding down the power button for 5 seconds, the blue light will flash, then please release the button. The blue light will stay on continuously after the flash, indicating that the device has entered standby mode.



**keep pressing for  
5 seconds**

## Instruction of the automatic shutdown

In standby mode The device will be shutdown after the red light flashes 5 times if there are no any motion in 60 seconds when it is in standby mode.

## Abnormal condition

The device will be shutdown after the blue light flashes 5 times.



### The memory card incompatibles the device

The device will be shutdown after the indicator light flashes 3 times.



## How to use the reset button

When the device crashes, the operation buttons become unresponsive, or it cannot be used normally, you can press the reset button once to initiate a reset. If it still doesn't work properly, please connect it to a power supply for charging and then try again. After a short press of the reset button, the device will shut down. It needs to be restarted to restore it to factory settings.





## Operation button



## A. Taking Photo

When it is in standby mode (blue light runs on all the time), please short press the operation button once, the photo is finished if the blue light flashes 1 time.



## B. Taking Video

When it is in standby mode (blue light runs on all the time), please press the operation button twice, the video is taking after the blue light flashes 3 times then goes out. It is in 2K Video pixel (2048 \* 1152 Resolution)



Press the operation button twice to take video.

**The blue light** flashes three times and then goes.

## How to Turn off the video

Click the operation button once to exit video mode, and the video will be automatically saved. The blue light changes back from off to steady.



**Blue light** is always on

## How to turn off the device

Press and hold the power button for about 8 seconds until the blue indicator light starts flashing. Once you see the indicator light begin to flash, you can release the button. At this point, the indicator light will turn off, indicating that the device has been successfully shut down.



Keep pressing for 8 seconds.

**The blue indicator light** goes out.

## Watch the video and adjust the time stamp

### Copy the video to Phone or Computer

You can connect the device to your computer using the provided data cable and then open the video for viewing.

You can also copy the video from your computer to your phone for viewing.




### Adjust the time stamp by Computer

It will set up a file box name TIME.TXT and TIME.BAT in the Device automatically when the device is recording at the first time.

After the Device is connected to the computer, please click TIME.BAT to match the time of the computer.

For example : 2020-01-01 , 23 : 59 : 59,  
Y means YEAR/MONTH/DAY/HOUR/MINUTE/SECOND,  
the“Y”means display the time,  
and the “N”means do not display.

- 1.2020-01-0123 : 59 : 59Y ( display time)
- 2.2020-01-0123 : 59 : 59N ( not display )

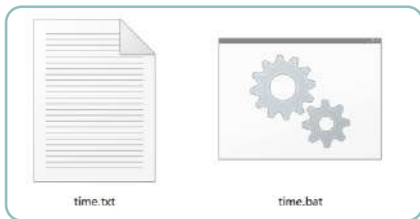


File Edit Format View Help

1. 2020-01-01 23:59:59 Y|

## Attention

- 1) The video watermark cannot be removed by changing Y to N which has already recorded the watermark.
- 2) If the modified date is earlier than the current date (2020-01-01 23:59:59 Y), the timestamp will not take effect.

 It does not record voice or sound. You must follow federal, state, and local laws when using this device. This product should not be used for any illegal purposes.