




# zWeatherStation

**WIFI Nanny Camera Weather Station  
(500w-PRO)**

## USER MANUAL

1. Camera Device Diagram	<b>Page 1</b>
Dicover Your Weather Station Camera Device	
2. Initial Setup	<b>Page 2</b>
Step-by-Step Guide to Get Started	
3. App Installation	<b>Page 3</b>
4. Camera Startup	<b>Page 3</b>
How to Download and Install the Required Mobile Application	
5. WiFi Connection Setup	<b>Page 4</b>
Instructions for Connecting to the station's Wi-Fi Hotspot	
6. Hotspot Mode	<b>Page 5</b>
Using the Koios as a Standalone Hotspot Device Without Wi-Fi	
7. Network Integration	<b>Page 6</b>
Connecting Your stations's to Your Home Wi-Fi Network	
8. Recording & Playback	<b>Page 8</b>
Guide to Recording and Retrieving Files from Your Media Card	
9. Troubleshooting Tips	<b>Page 12</b>
Quick Fixes for Common Issues	
10. Technical Specifications	<b>Page 13</b>
Detailed Camera Specifications and Requirements	

# 1. Camera Device Diagram

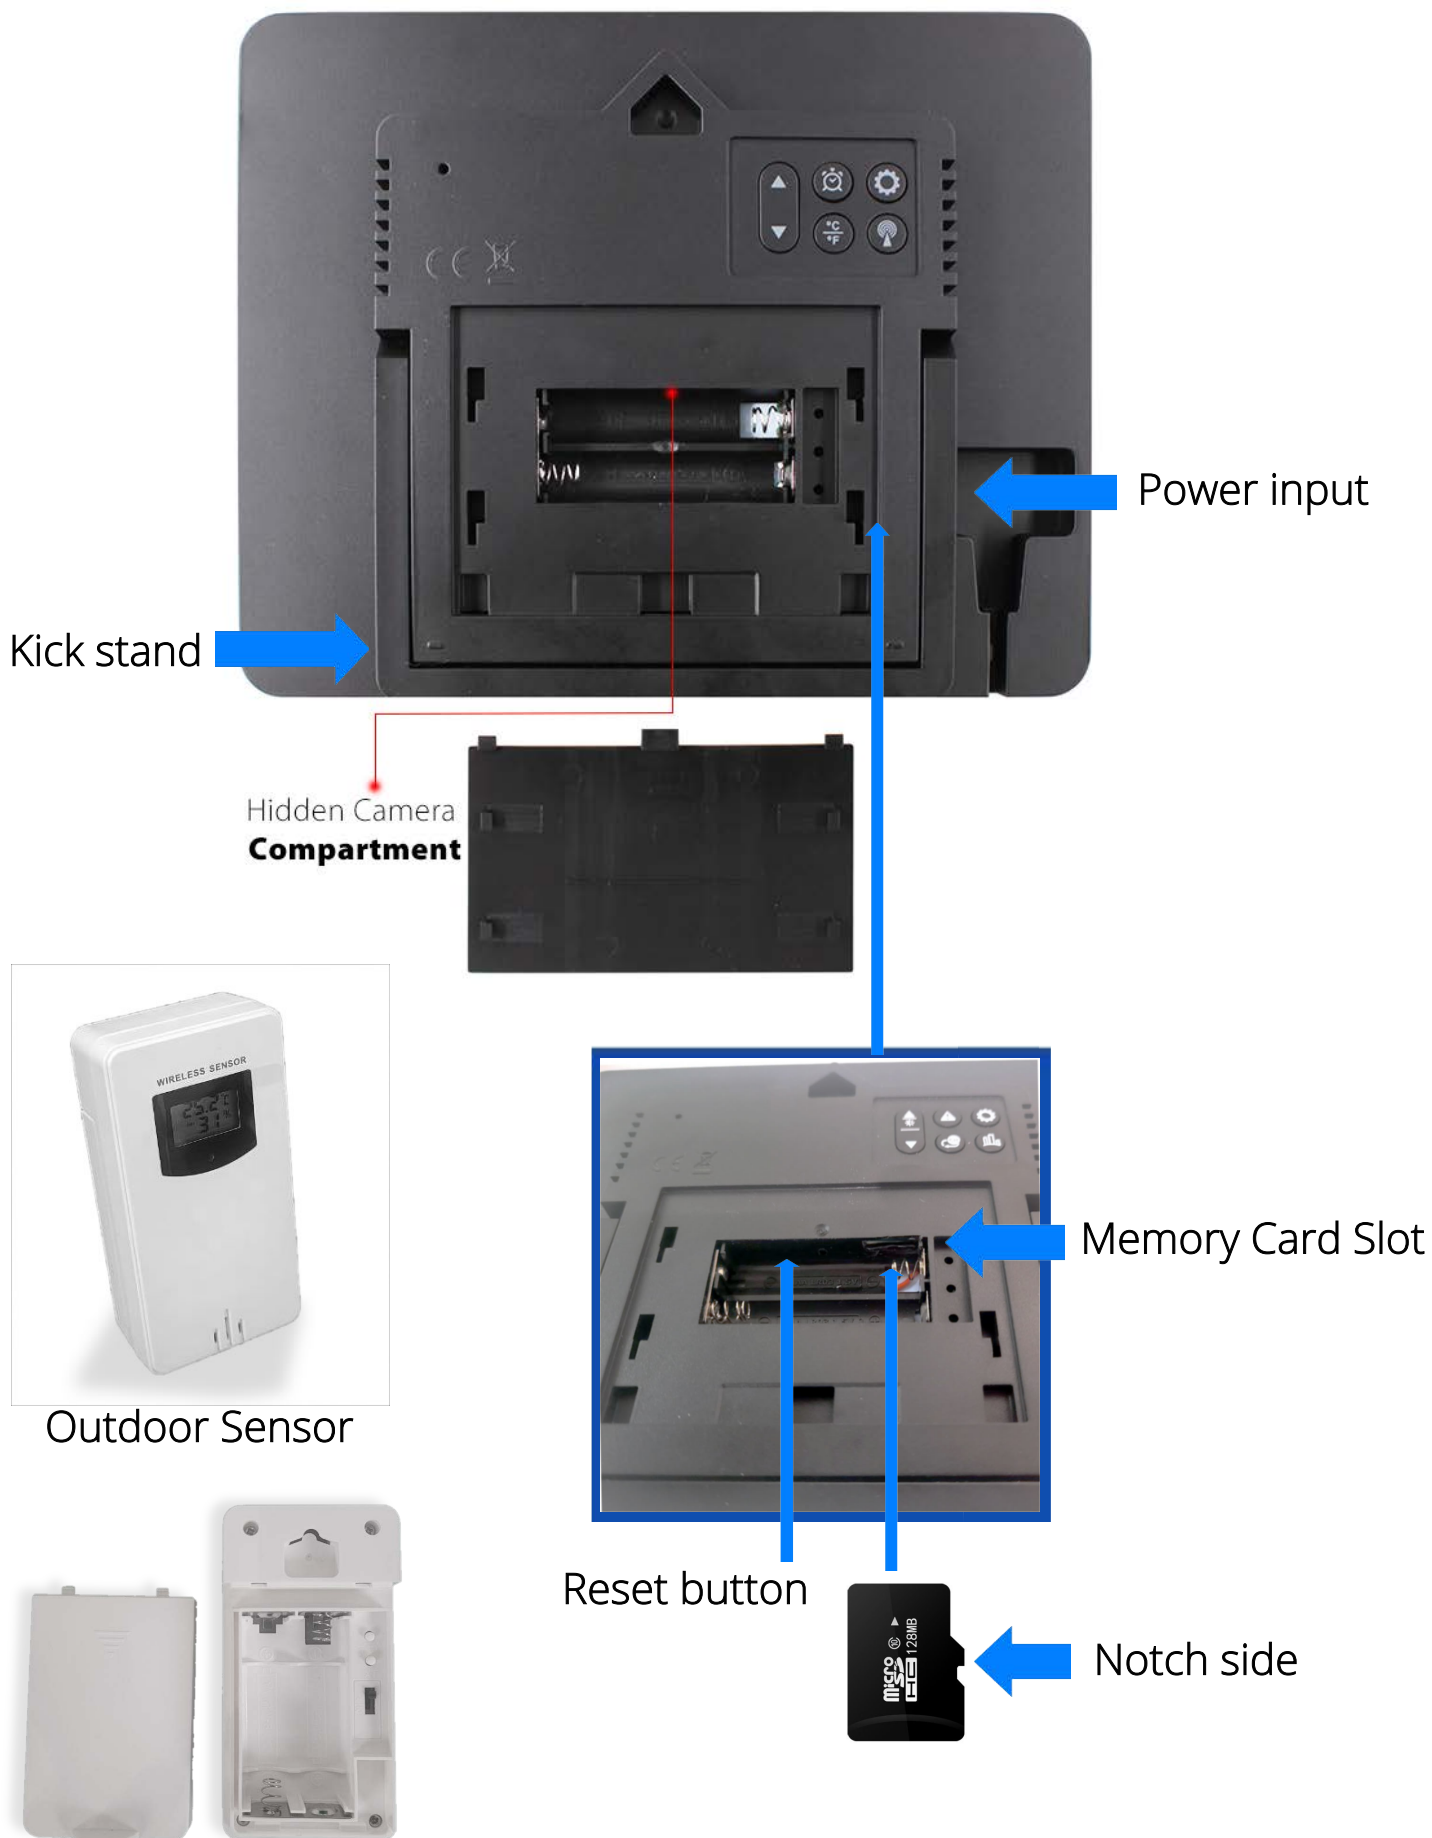

## 2. Initial Setup

### Media Storage

Insert a MicroSD memory card as shown in the diagram. The card should click in place. To remove it simply press it down again to toggle it back out.

### Power ON/OFF

Install AA batteries on the Outdoor sensor. The Station device can be powered with the included A/C adapter or 2 AAA batteries.

### Camera Reset

Resetting the camera device to factory default will fix most issues. While the weather station is powered, use a pin or paperclip to press and hold the reset switch for 5 seconds, the camera device will restart with factory settings.

## 4. App Installation

### I. Setting up the App

Download the **Tuya** app from Google Play or the App Store. You can scan the QR code or use the URL links below from your phone.



IOS



Android

#### Google Play / Android

<https://play.google.com/store/apps/details?id=com.view.ppcs>

#### App Store / iOS


<https://apps.apple.com/us/app/lookcam/id1460758870?l=zh&ls=1>

## 6. WiFi Connection Setup

Ensure the weather station is powered on.


Please ensure to follow the previous step; **Camera Startup** to make sure the camera device is broadcasting it's own WiFi network.

In your smartphone, enter the mobile phone WI-FI settings, find the camera's WiFi network starting with the name **SmartLife** and connect to it.

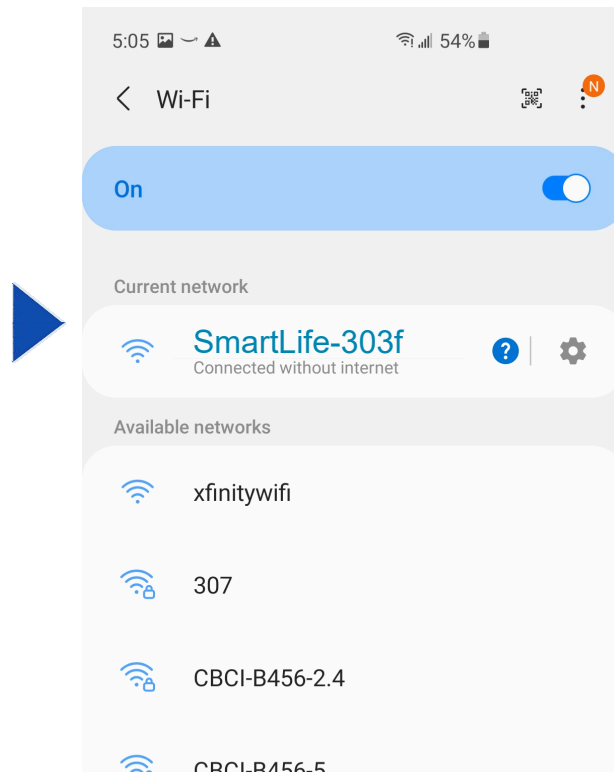

**NOTE:** please ensure "Mobile data" and "Wi-Fi Assist" features are disabled to prevent your phone from automatically using another network.

You may get a prompt warning that the internet is not available. If so, choose to **Keep Wi-Fi connection**.

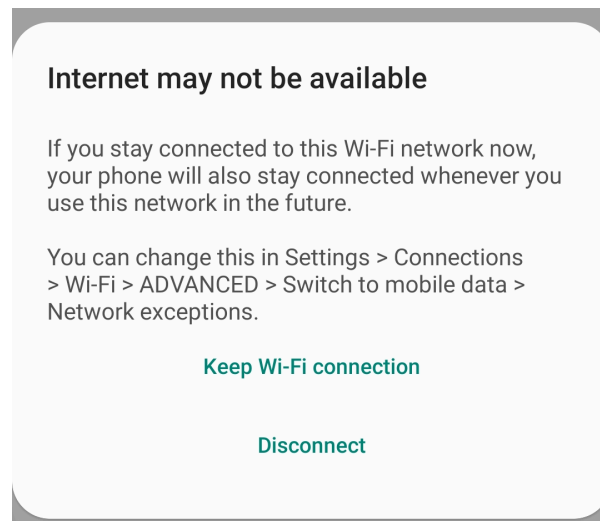


Your phone should now be connected to the camera device.

## 7. Hotspot Mode

This section is so you will be able to view the camera live on your phone using the the **Tuya** app. No WiFi is required if your phone is within 30 feet range of the **weather station**.

This mode of operation is ideal if the weather station is installed in plug beyond the range of a WiFi network.


After completing the previous section, when you first open the **Tuya** app, the app will automatically prompt you to add the new camera device.

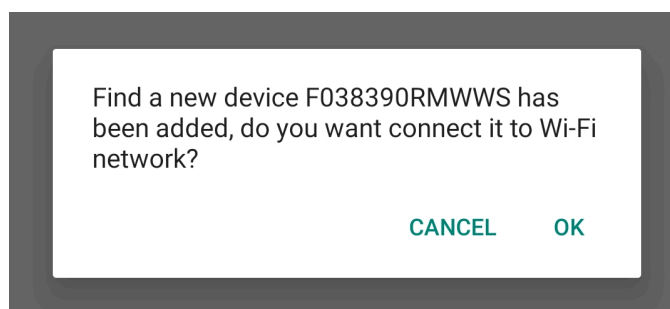


If you dont get a prompt, either it may be already connected, the phone did not connect to the hotspot on the previous section or you may have connected to the wrong network.



When you see "**Device Online**" in the listed item, you may tap on it to open the live camera feed.

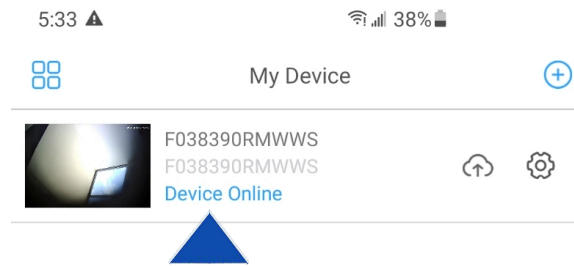

You may be prompt to setup a new password. You can **cancel** it for now to preview the video.

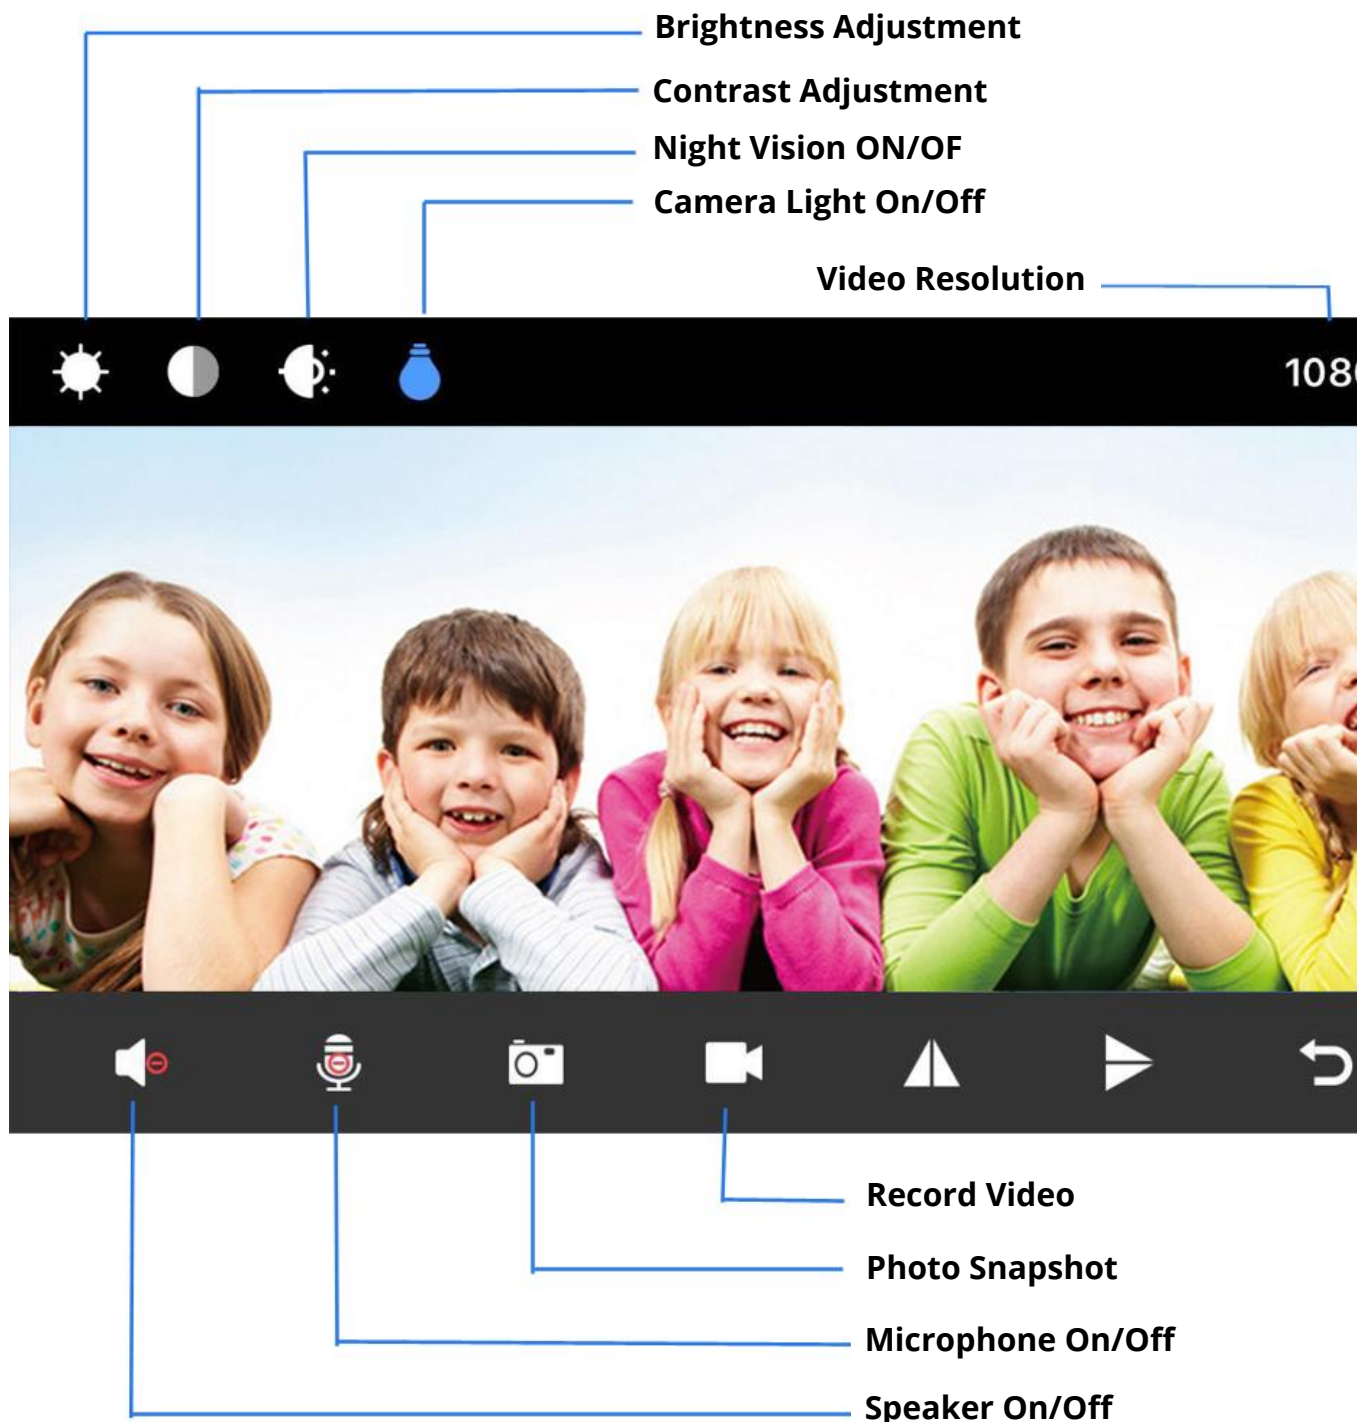

## 8. Network Integration



Please read the previous section; **Hotspot Mode** before continuing.

This mode of operation is so you can access the camera live view from anywhere using the **Tuya** app on your phone as long as your phone has internet access.

The Koios has to be within range of a WiFi network, and you will need to know your WiFi network ID and password.


Click the settings icon ⚙️ → WiFi Setting → Choose your local WiFi → Enter you WiFi Password → Click OK.

Wait 60 seconds for the camera to restart. The camera will now broadcast through your local network so you can remotely access the camera using the LookCam app.

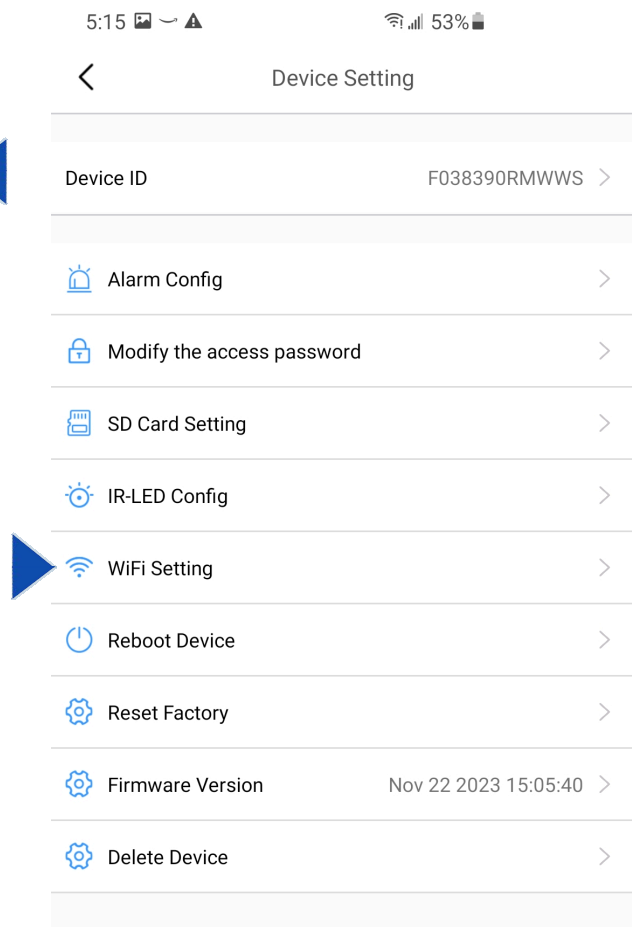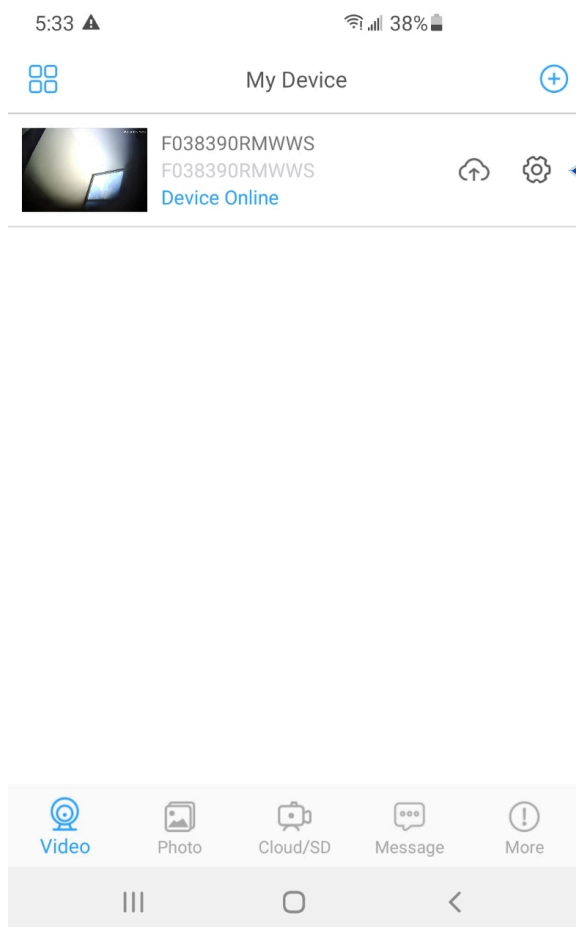



Select your WiFi network so the the camera can connect to it, and enter the password.

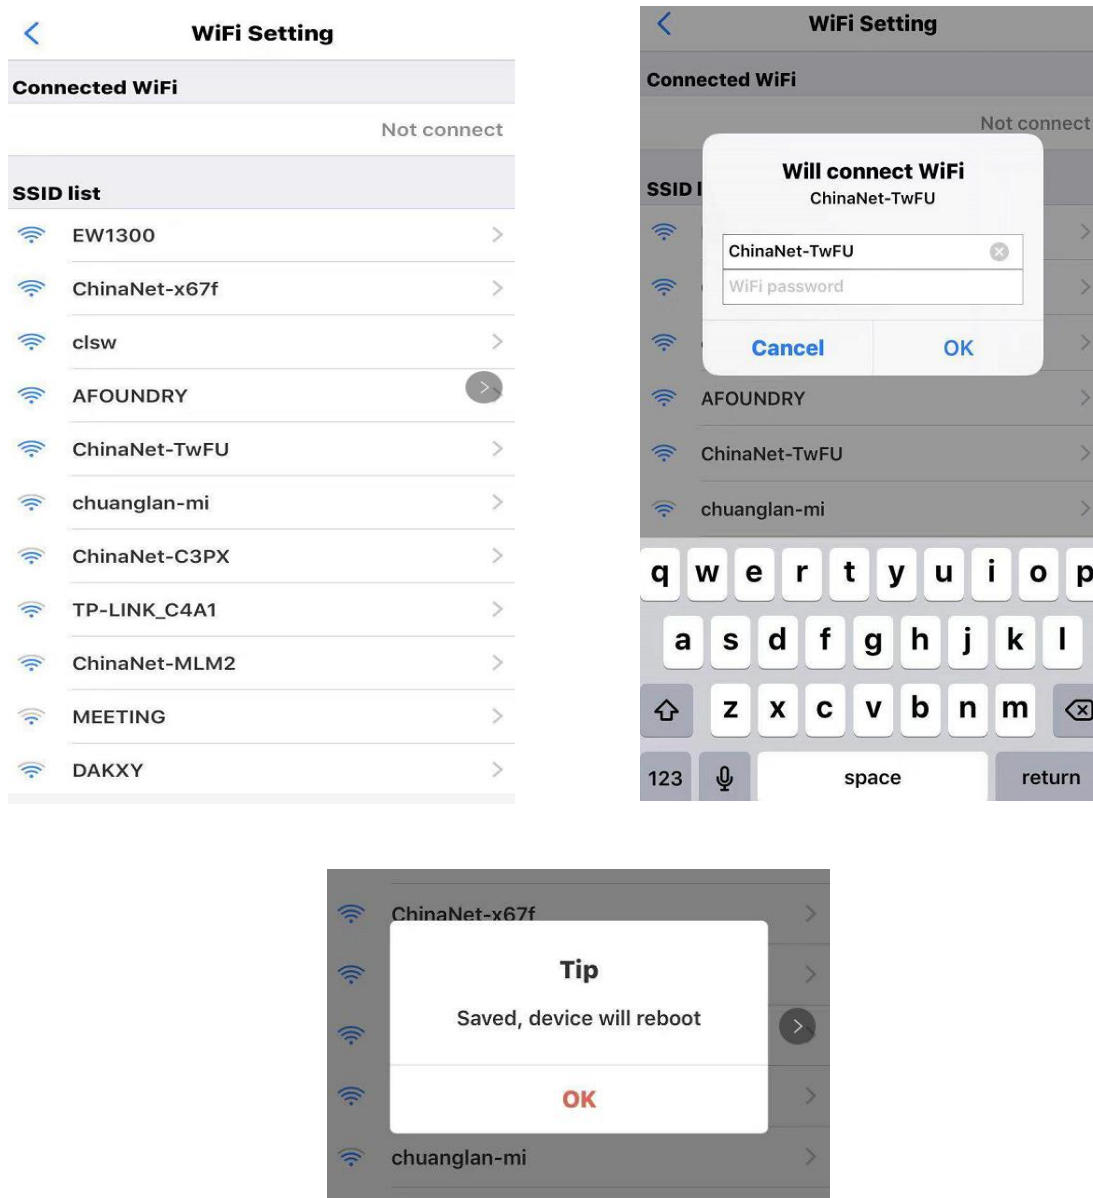


The camera will connect to the internet via your local WiFi, check on the main screen for "[Device Online](#)" after 60 seconds.

You may now connect your phone back to the local WiFi. In your smartphone, enter the mobile phone WI-FI settings, and choose your local network.


# Recording & Playback

Please refer to the product diagram on how to install a memory card on the camera device. You may have to format the memory on first use under "SD Card Settings".

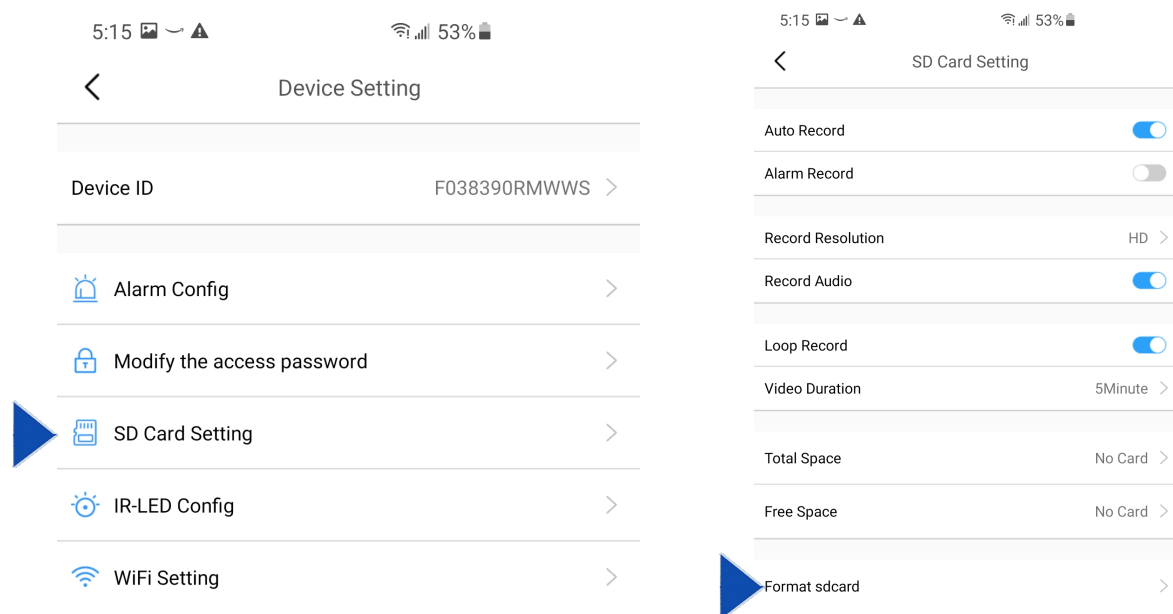


## Continuous Video Recording

Under **SD Card Settings**, ensure the **Auto Record**, and **Loop Record** settings are turned on. Loop Recording simply means that the oldest recorded videos will be deleted and replaced the with latest recordings once memory is full. Videos are recorded in file segments of either 1, 2, 5 and 30 minutes long which can be specified under **Video Duration**.

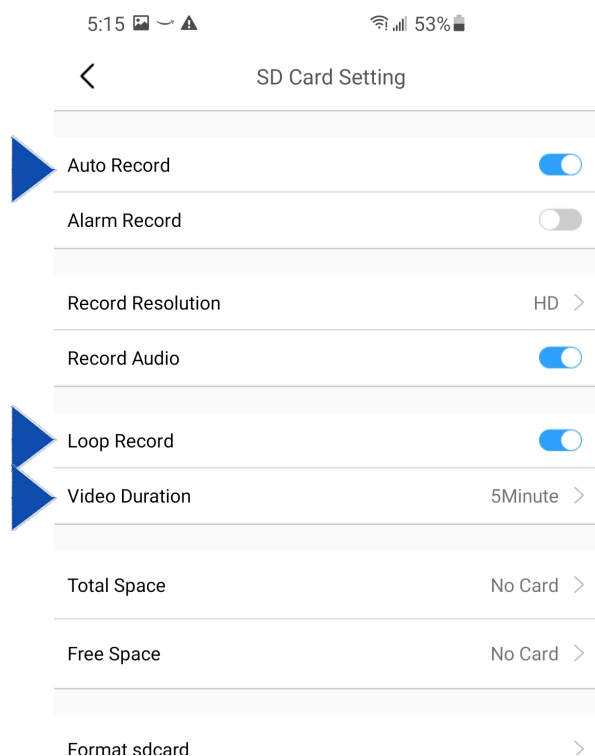


## Motion Activated Video Recording



For video recording only when motion is detected, in the **SD Card Settings** menu turn on the **Alarm Record** setting.

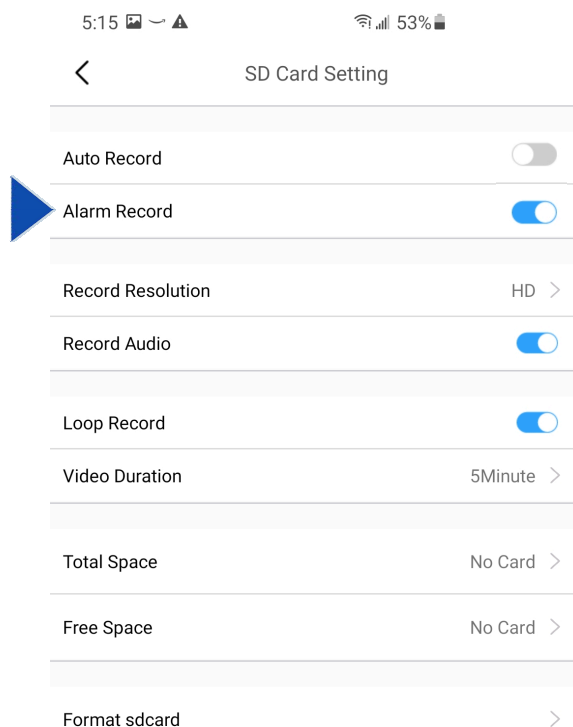

Under **Alarm Config** You may adjust the motion sensitivity that triggers video recording.

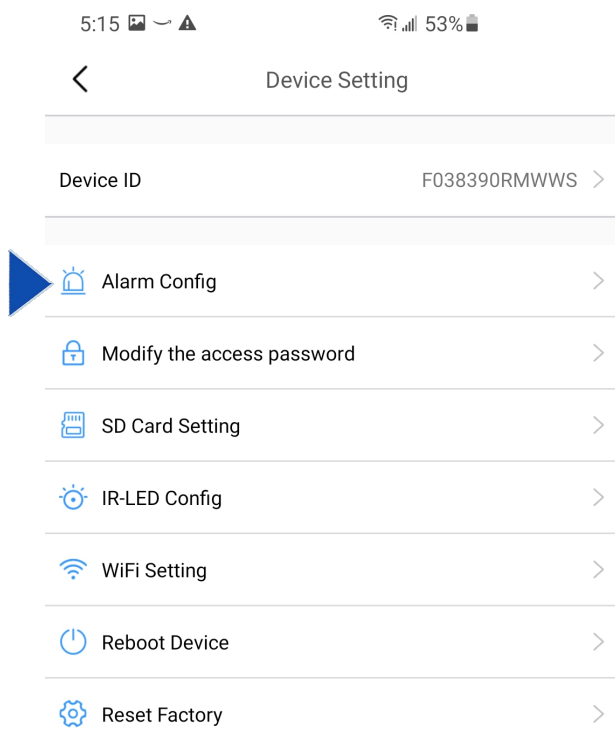


You also have the the option to recieve **Push Notifications** on your phone every time motion is detected.

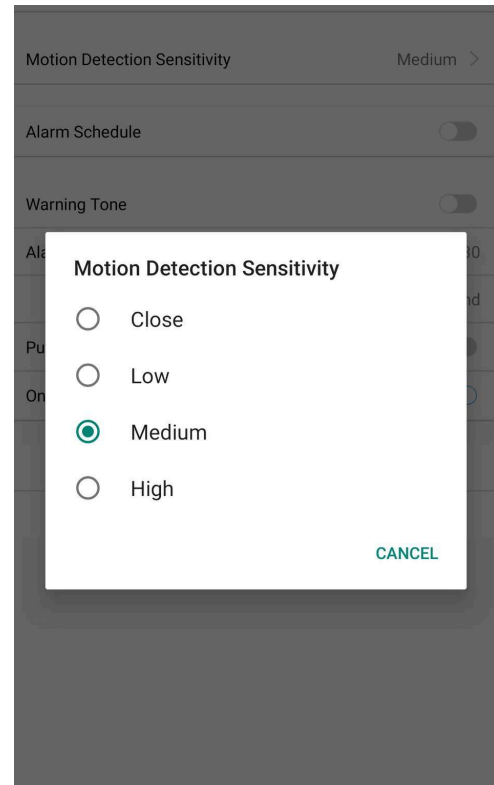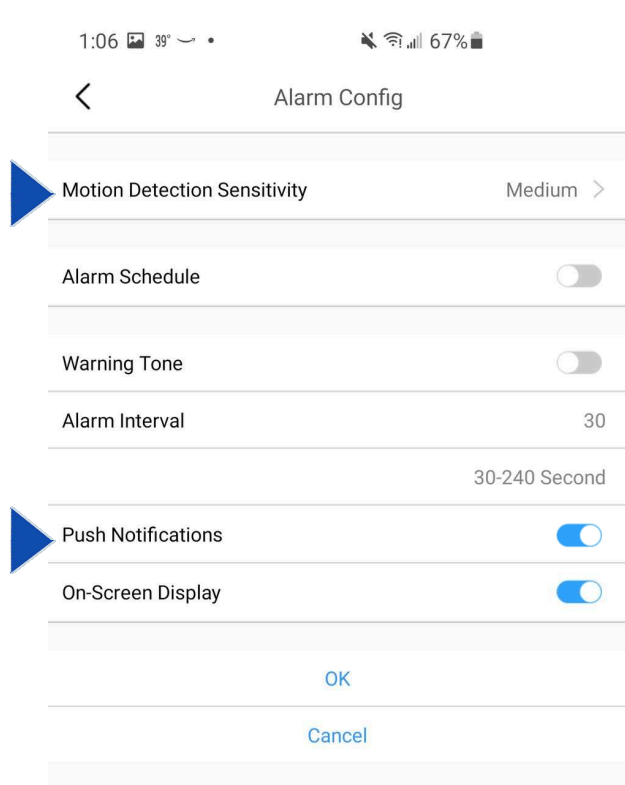


## Manually Recording

To manually record videos and take snapshots you can use the live video user interface.

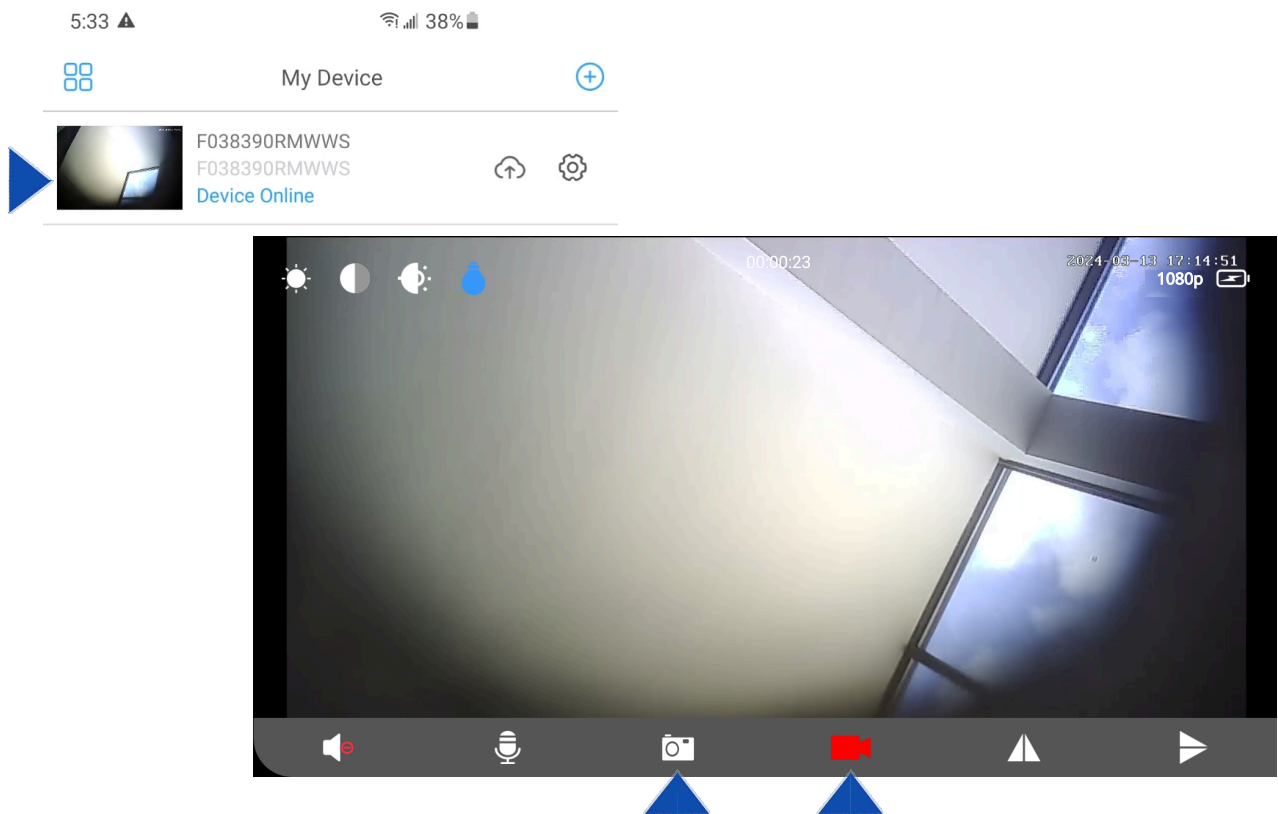

## Video Playback

To playback videos or view the snapped photos stored in the memory card, use the main menu screen, or connect the memory card to a computer.

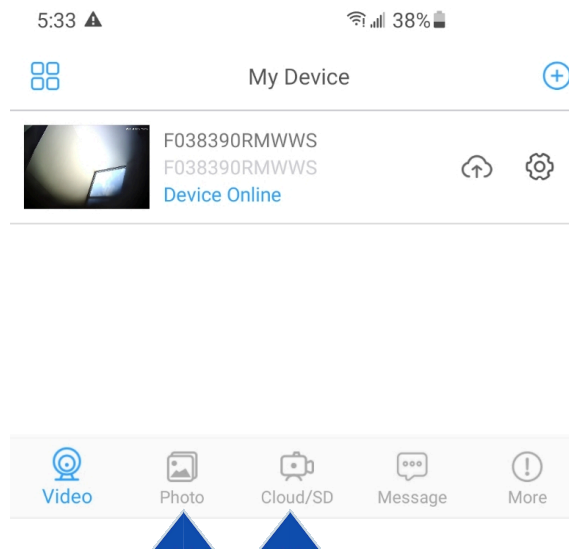

## 10. Troubleshooting Tips

### **Check memory card:**

The camera supports up to 128 GB Micro SD card. Please use High Speed Class 10 FAT formatted memory card. You must format the Micro SD before using. If SD card is not recognized when inserted into the camera, simply remove and re-insert.

### **Camera offline:**

1. Check power
2. Check if your router is working properly.
3. Weak Wi-Fi signal.
4. Wrong password wrong while Wi-Fi setting

### **Glitchy or stuttering video playback:**

You should choose a suitable resolution to watch according to your internet speed. Internet connection interruption will also cause video to freeze.

### **Forgot password or password invalid:**

Press and hold the reset button for 10 seconds to restore the camera device to the factory settings.

The initial password for each camera is **123456**. Please change the password to ensure the security of your camera.

**NOTE:** Passwords must consists of alphanumeric characters only.

If the camera cannot be connected to the router, please reset, and connect the hot spots before completing the configuration.

# 11. Technical Specifications

Video Resolution, Ratios	1080p, 720p, 640p, 320p @ 16/9 & 4/3
Video Format	AVI
Frame Rate	25 FPS
Viewing Angle	150 degree horizontally /90 vertically
Motion detection activation dstance	Straight line, 6 meters
Minimal Illumination	1 LUX
Battery Life	~1 hour
Video Clip Segments	1, 2, 5, 30 minute video length
Video Encoder	H.264
Recording Range	5m <sup>2</sup>
Current Consumption	380MA/3.7V
Storage Temperature	-20-80 degree centigrade
Operating Temperature	-10-60 degree centigrade
Operation Humidity	15-85%RH
Memory Card Type	TF card, MicroSD Card
Player Software	VLCPlayer/SMPlayer
Computer Operating System	Windows/Mac OS X
Mobile Phone Operating System	Android/iOS/Windows Mobile
Maximum Users	4