



Kestrel 2

QUICK START GUIDE

Included



Kestrel 2



Data USB Cable



Remote + Battery



Glasses Case



Charger + Additional Battery Arm






Cleaning cloth

Packing list

Kestrel Glasses	1
Case	1
Remote	1
Battery leg	2
Nose pad	1
Manual	1
Leg charger	1
USB cable	1
Glasses cloth	1

Diagram

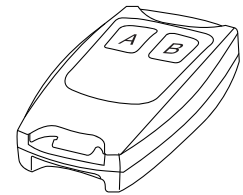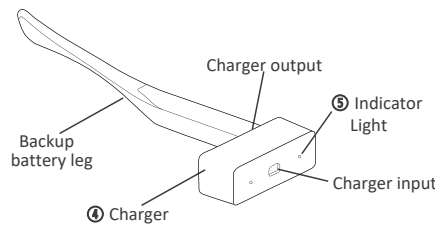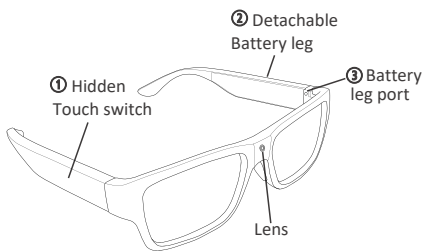

Operation

Fully charge the device 2-3 hours before usage.

1. Power on & Record:

Touch A button on the remote, or touch the "Touch switch" of glasses leg for 3 seconds to turn on device and record videos. The arm will vibrate once followed by two quick subtle vibration bursts.

2. Power off:

Press and hold the B button on the remote, Touch the "Touch switch" area of glasses leg for 3 seconds to turn off device, the arm will vibrate once and recorded file will be saved automatically.

3. Charging:

Connect the arms to the to the arm charger, and then connect the charger to a USB charger or any power USB port. The red indicator light will turn off once fully charged.

4. Playback:

Use the included **USB data cable** to connect the **frame port** of the glasses to a computer to access the recorded media. he video and photos will be inside the DCIM folder.

5. Storage:

If the device shuts off automatically - single vibration - soon after turning on, this means the memory is full or corrupted.

To clear memory space, you need to connect the glasses to your computer, first copy or move the files to your computer, and then delete them from the glasses.

To clear any corruption, please format the memory using your computer. All files will be lost.

Specifications

Video resolution	1920 * 1080, Max 30fps
View Angle	70/80/120 Degree
Max internal storage	8-64GB
Battery	280mA
Battery life	75 minutes
Video storage	16GB with 2 hours 10minutes recording
Video Player	VLC Player/SM Player