



DITRA

PLEASE DOWNLOAD AN APP CALLED CamHipro from the App Store (Google or Apple)



1. This camera will start to work after it's connected to power supply. To confirm the status of the camera, pls check, "Setting" of the phone - "WiFi" - "The device WiFi" will be a IPCAM\*\*\*\* there, if not pls reset the WiFi Camera.

2. If you failed to set WiFi network for the camera, there may be several reasons: - WiFi password is not correct; Please enter correct password.


- The name or the password of your WiFi network contains special letters (é ê ö ...), special symbols (#\$%...) or spaces; Please use classic letters and numbers as password.

- Pls make sure your home wifi is 2.4Ghz, this device can only work with 2.4Ghz network, not support 5Ghz network.

- Resetting the camera to factory settings may solve certain problems, like forgetting password of the camera, for example. To reset the camera, you may hold the reset button for above 10 seconds until hear a click sound from the camera. The reset button of WiFi video camera is located in the bottom of the camera.

1 Start Connect the Device WIFI

Step 1 Power the camera, wait a full 40 seconds for the device to boot up, then connect device WIFI

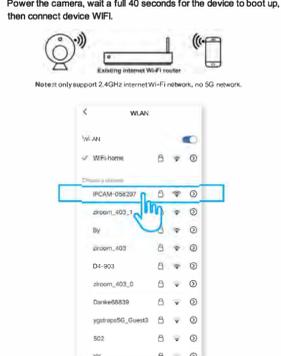

2

1 Start Connect the Device WIFI

Step 2 Enter Setting on the phone, select Wi-Fi, and scan for networks. The phone should detect the WiFi Camera. The network name will be IPCAM\*\*\*\*.

Note: If there is no camera ID like IPCAM\*\*\*\* displayed, please insert pin to press and hold Reset button up to 10 seconds and then release to reset the camera.



Step 3 Join the network and enter the password"01234567".

3

2 CAMERA CONFIGURATION

2.1 Download the CamHi Pro

Application on the APP store or on Google Play. (Please search CamHi Pro in App store and Google Play)



2.2 Power on camera and run the app.

Select - Click Add Camera - IP camera - YES, I WANT TO ADD THIS DEVICE - Pls tap into admin of Username and password - then Click Add (Picture# 12,3,4)



4

2 CAMERA CONFIGURATION



5

2.3 Configure wifi and add or Not configured yet, add directly

Pls tap the "+" sign - search your home wifi name and input your password here - And then click Configure wireless and add (Picture# 5,6,7)

Picture# 5

Picture# 6


Picture# 7

6

2 CAMERA CONFIGURATION

2.4 Not configured yet, add directly. Set your wifi connection later.

Pls click not configured yet, add directly - and then click Confirm skip - select your room name and confirm (Picture# 8,9,10)

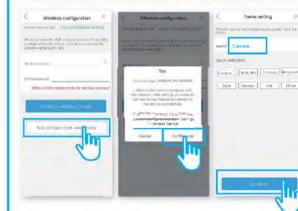

Picture# 8


Picture# 9

Picture# 10

7

2 CAMERA CONFIGURATION

2.5 After confirm, your camera is online now, could adjust SD to HD mode.(Picture# 11,12)

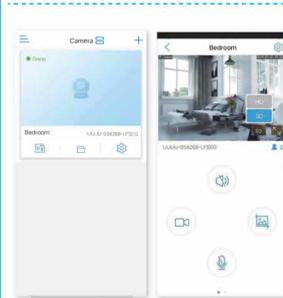


Picture# 11

Picture# 12

8

3 CAMERA SETTING

3.1 Main pages of the Wifi security Camera on mobile(Picture# 13,14)

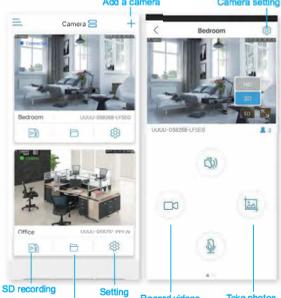

Picture# 13

Picture# 14

9

3 CAMERA SETTING

3.2 Picture and video playback

Playback Local recording - Click Image to view the images and could download the images to your phone, click Video to view the video And could download the videos to your phone. (Picture# 15,16)



Picture# 15

Picture# 16


10

3 CAMERA SETTING

3.3 Camera WiFi setting

When the camera is online, Click the Camera setting(Picture#17) - WiFi SETTING (Picture#18)

-Select WiFi SSID(Picture#19) - input PASSWORD - APPLICATION (Picture#20)

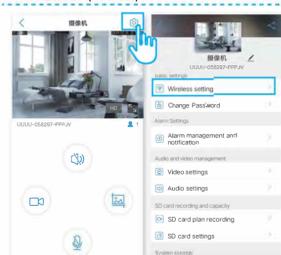

Picture# 17

Picture# 18

11

3 CAMERA SETTING



Picture# 19


Picture# 20

12

3 CAMERA SETTING

3.4 Change the camera password

Input old password "admin" - change to NEW password and application. (Picture# 21,22)

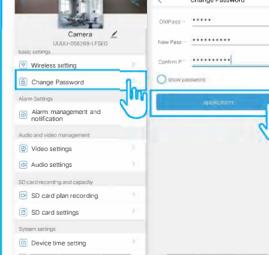

Picture# 21


Picture# 22

13

3 CAMERA SETTING

3.5 Motion Detection setting

Step 1: Pls from Your mobile "SETTING" - Allow notification - Adjust Emergency - Select the Alarm volume. Setting - Status bar and notification - Manage notification - Allow notification - Turn on Alarm Push(Picture# 23,24,25)

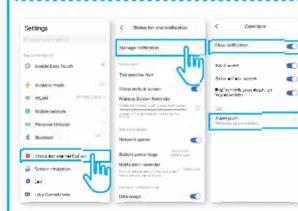

Picture# 23

Picture# 24

Picture# 25

14

3 CAMERA SETTING

Step 2: You could adjust the emergency from low to high, and select the alarm volume that you like.(Picture# 26,27,28)



Picture# 26


Picture# 27

Picture# 28

15

3 CAMERA SETTING

Step 3: Click Alarm management and notification(Picture#29), turn on Receive alarm push(Picture#30), set motion Sensitivity level from low to high. Also could adjust the area where could be detected.(left area, All areas, right area)(Picture# 29,30,31)

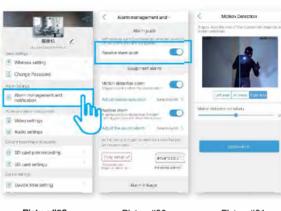

Picture# 29

Picture# 30

Picture# 31

16

3 CAMERA SETTING

Step 4: From advanced setting - Adjust what's time you want to receive alarm detected. (Picture# 32,33,34)



Picture# 32

Picture# 33


Picture# 34

17

3 CAMERA SETTING

3.6 Video settings

You could change the video format from 50Hz to 60Hz (Picture# 35)

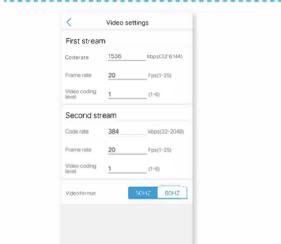


Picture# 35

18

3 CAMERA SETTING

3.7 SD card plan recording

You could set your video file length, from 15 seconds to 900 seconds. Then each video clip will be in this length. (Picture# 36, 37)

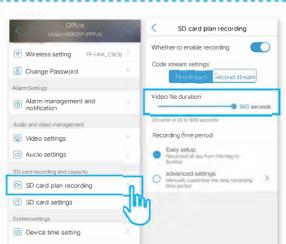

Picture# 36


Picture# 37

19

3 CAMERA SETTING

3.8 SD card plan recording

Also could from advanced settings to set what's schedule you want to record to SD card. (Picture# 38, 39)

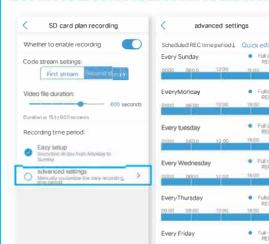

Picture# 38


Picture# 39

20

3 CAMERA SETTING

3.9 SD Card setting

The camera accept Micro SD card of Class 10+ with maximum capacity up to 128G. The format of the card should be Fat32. After installation of SD Card, please format the card with mobile application. (Picture# 40, 41)

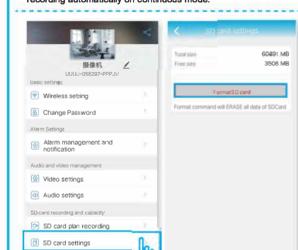

Picture# 40


Picture# 41

21

3 CAMERA SETTING

3.10 Device time setting

You could synchronize phone time to device, select what's time zone of your equipment and then Done to finish setting. (Picture# 42, 43)

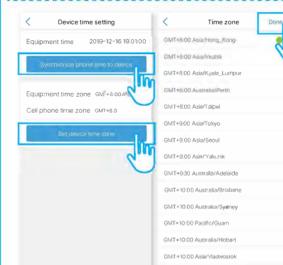

Picture# 42


Picture# 43

22

3 CAMERA SETTING

3.11 Default setting

You could reset the camera to default factory state. If there have something wrong, you also could restart the camera, but when click restart the camera, pls wait 1 minute to wait data update. (Picture# 44, 45)

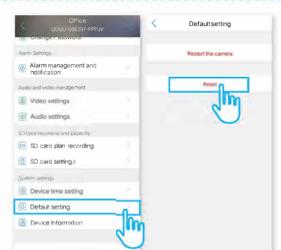


Picture# 44

Picture# 45

23

3 CAMERA SETTING

3.12 Pls find the device information from below image(Picture# 46, 47)

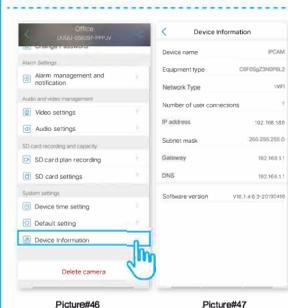

Picture# 46

Picture# 47

24

User Guide Alarm Clock FM Radio




Thank you for choosing our clock camera, if there have more questions pls message us anytime!

25


Feature:

- Cube alarm clock radio with Wi-Fi hidden camera
5-in-1 Multifunction: Wi-Fi security camera, alarm clock, FM radio, wireless speaker, USB charger
Support memory card max up to 128GB (Not included)
Receive push notifications if anything moves
Easy setup with 2.4G internet Wi-Fi network
Data and time stamp on actual videos
See up to 10 meters (32ft) in total darkness
Clock support 12 and 24-hour format
Excellent design with aluminum body
Support snooze function
Adjustable brightness control for LED display
Overwrite function available
2.4G Local Wi-Fi enable
Completely covert device


1.Product Structure

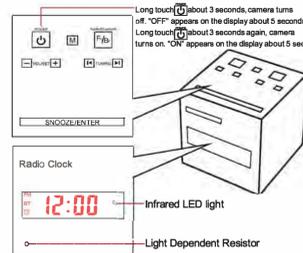

26

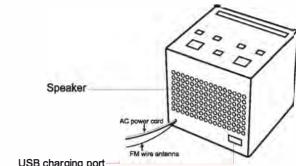

Speaker, USB charging port, AC power cord, FM wire antenna

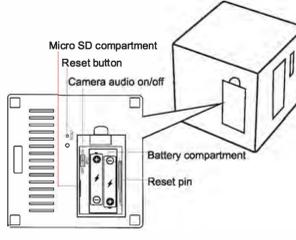

Micro SD compartment, Reset button, Camera audio on/off, Battery compartment, Reset pin


27

2.Package Content



3.Getting Started

1) This unit support AAA battery as a back up power source to keep the clock operating during a power interruption (AAA battery not included), installing battery as follows:

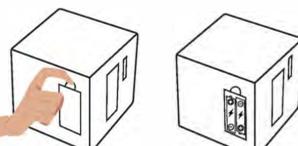

Step 1 Take off the cover on the bottom of unit. Step 2 Insert new battery into battery compartment with the correct pole.

28




Step 3 Attach the cover of clock radio

Note:


- When you replace the battery, do not disconnect the AC plug from the wall outlet. Otherwise, the current date, current time and alarm will be erased.
If the unit will be left unplugged for a long time, remove the battery to avoid any damage that may be caused by leakage or corrosion.
Please replace the battery, if a power interruption occurs while the battery is discharged, the current time and alarm will be erased.

2). Extend the FM wire antenna fully to increase reception sensitivity. Do not operate the unit over a steel desk or metal surface, as this may lead to interference.

29

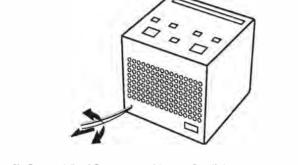

3). Connect the AC power cord to a wall outlet.

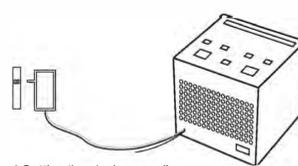

4.Setting the clock manually This unit is preset to the current date and time at the factory, and is powered by the back-up battery. To change the clock setting manually, operate the unit as follows. a. Long touch [M] about 3 seconds. b. Touch [VOL/SET] +/- or - to select 12 and 24 hours formats.

30

c. Touch [M], then press [VOL/SET] +/- or - to select the hour. d. Repeat step c to set minute. e. Touch SNOOZE/ENTER.

Note

If you do not press any button for about 8 seconds, while setting the clock, clock setting mode will be canceled.

5.Setting the alarm

a. First repeat a-d step as "Setting the clock manually". b. Touch [M], the alarm time appears for a few seconds and then [BT] appears on the display.

c. Press [VOL/SET] +/- or - to set the desired time while the alarm time appears on the display. While setting the alarm time, [BT] flashes on the display.

d. When the alarm time setting operation is complete, [BT] changes from flashing to fully lit.

e. Touch [M], press [VOL/SET] +/- or - to select your desired alarm sound with 3 ring tones for option. f. Touch SNOOZE/ENTER.

Note

If you do not press any button for about 8 seconds, while setting the clock and alarm, "The clock and alarm setting will be canceled.

1)To stop alarm Press any button to stop alarm, except SNOOZE/ENTER. The alarm will sound again at the same time the next day.

31

2) Snooze function .To doze for a few more minutes Touch SNOOZE/ENTER, the sound turns off, but will automatically come on again after about 9 minutes as default.

3)To Deactivate/Activate the alarm Long press SNOOZE/ENTER about 3 seconds, [BT] disappears from the display to deactivate the alarm. Long press SNOOZE/ENTER 3 seconds again to activate the alarm, and [BT] will appear on the display.

6. Wireless speaker 1) Touch [BT], then press [BT] to select "BT"(Bluetooth). While choose "BT" mode, "BT" flashes on the display.

2)Enter Setting on the phone, select Bluetooth, then search and connect "KT-V100".When connected, "BT" changes from flashing to fully lit.

3). Press [VOL/SET] +/- or - to adjust volume.

4). Press [BT] to play the previous or next song.


7. Playing the Radio 1) Touch [FM], then press [FM] to select "FM"(Radio). While choose "FM" mode, "FM" will show on display with solid red.

2) Long touch [M] about 3 seconds to search and channel automatically, max up to 20 radio channels can be stored.

3) Touch [BT] support change channel, or press [BT] to play the previous or next channel.

32

8. USB charging The device support charging for your phone with DC 5V 1.5A (USB cable and mobile phone not included).

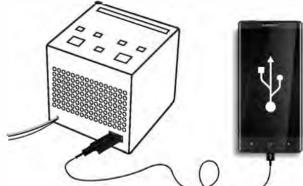

9. Setting the brightness of the display Three levels of brightness are available.Press SNOOZE/ENTER. Each time you press SNOOZE/ENTER, the brightness of the display changes as follows: High(default) -> Middle -> Low

Note When the alarm is sounding or the snooze function is active, the brightness of the display cannot be changed.

33

10.Specification

Table with 2 columns: Feature and Specification. Includes details for Clock Radio (FM, Speaker, Power, Dimensions, Weight, Color, Material, Plug type) and Wi-Fi Security Camera (Built-in image sensor, Sensor resolution, Sensor sensitivity, Focal Length, Angle of View, Algorithms, File Format, Video recording mode, Frame rate, Recording Capability, WIFI, Audio, Memory type, Night Vision, Push alarm notification).

34