



# VIZOR

Clip-on / Vizor Tissue Dispenser Hidden Camera

**USER MANUAL** 

# **INDEX**

<ol> <li>Whats Included         Unbox Your Vizor Surveillance Camera    </li> </ol>	Page 1
2. Camera Device Diagram  Detailed Diagram and Key Features	Page 1
3. Initial Setup Step-by-Step Guide to Get Started	Page 2
4. App Installation  How to Download and Install the Required Mobile Ap	Page 2 plication
5. Camera Startup  Preparing the camera device for connection	Page 3
6. WiFi Connection Setup Instructions for Connecting to the Vizor's Wi-Fi Hotsp	Page 3
7. Hotspot Mode Using the Vizor as a Standalone Hotspot Device With	Page 5
8. Network Integration Connecting Your Vizor to Your Home Wi-Fi Network	Page 6
9. Recording & Playback Guide to Recording and Retrieving Files from Your M	Page 8 edia Card
10. Troubleshooting Tips  Quick Fixes for Common Issues	Page 12
11. Technical Specifications	Page 13


Detailed Camera Specifications and Requirements

# 1. What's Included



Clip-on Tissue Dispenser, Instruction Manual, Data & Charging Micro USB Cable

# 2. Camera Device Diagram

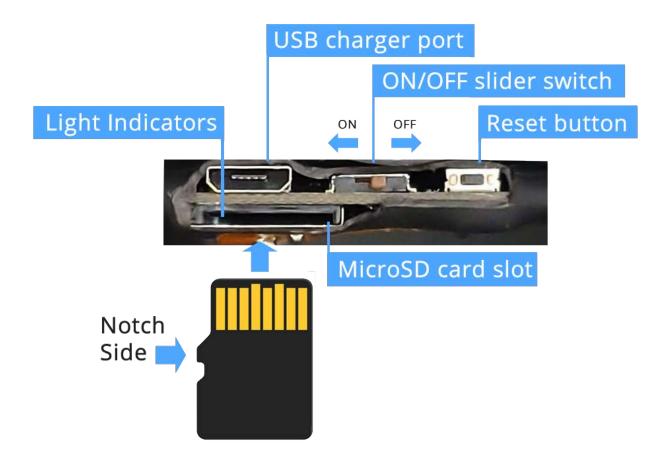

# 3. Initial Setup

## **Charging**

Please use the included USB cable to charge the battery. Connect the cable to a USB A/C adpter or any powered computer port.

### **Media Storage**

Insert a MicroSD memory card as shown in the diagram. The card should click in place. To remove it simply press it down again to toggle it back out.

#### Power ON/OFF

Slide the power switch left or right to turn the camera device on or off.

#### Camera Reset

Resetting the camera device to factory default will fix most issues. While the ON/OFF switch is set to ON, press and hold the reset switch for 5 seconds, the camera will restart with factory settings.

## 4. App Installation

## I. Setting up the App

Download the **LookCam** app from Google Play or the App Store. You can scan the QR code or use the URL links below from your phone.







App Icon

#### **Google Play / Android**

https://play.google.com/store/apps/details?id=com.view.ppcs

#### App Store / iOS

https://apps.apple.com/us/app/lookcam/id1460758870?l=zh&ls=1

#### **Windows Mobile**

http://lookcam.ffvv.xyz/down/Lookcam.zip

## 5. Camera Startup

Find the camera device within the Vizor as seen in the diagram.

Ensure the ON/OFF swith is to the **ON** position (left).


Look for a **slow** blinking **blue** light inside the SD card slot. It may take 30 seconds for the light to change from solid blue to blinking blue.

If you only see a red light, or no lights, ensure the device is charged, and try resetting the device according to the previous section.

## 6. WiFi Connection Setup


Please ensure to follow the previous step; *Camera Startup* to make sure the camera device is broadcasting it's own WiFi network.

In your smartphone, enter the mobile phone WI-FI settings, find the camera's WiFi network as shown as a sequence of character seen beelow and connect to it.

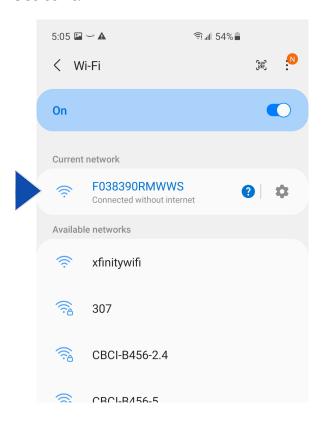

**NOTE:** please ensure "Mobile data" and "Wi-Fi Assist" features are disabled to prevent your phone from automatically using another network.

You may get a prompt warning that the internet is not available. If so, choose to **Keep Wi-Fi connection**.

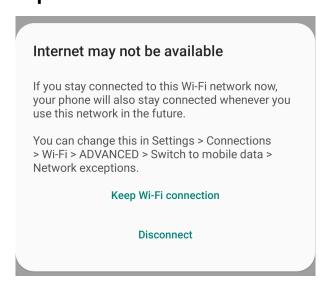


Your phone should now be connected to the camera device.

## 7. Hotspot Mode

This section is so you will be able to view the camera live on your phone using the the LookCam app. No WiFi is required if your phone is within 30 feet range of the Vizor.


This mode of operation is ideal if the Vizor is installed in your car or beyond the range of a WiFi network.

After completing the previous section, when you first open the LookCam app, the app will automatically prompt you to add the new camera device.

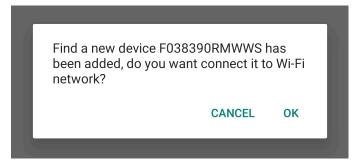


If you dont get a prompt, either it may be already connected, the phone did not connect to the hotspot on the previous section or you may have connected to the wrong network.

When you see "Device Online" in the listed item, you may tap on it to open the live camera feed.

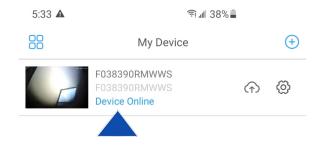

You may be prompt to setup a new password. You can **cancel** it for now to preview the video.

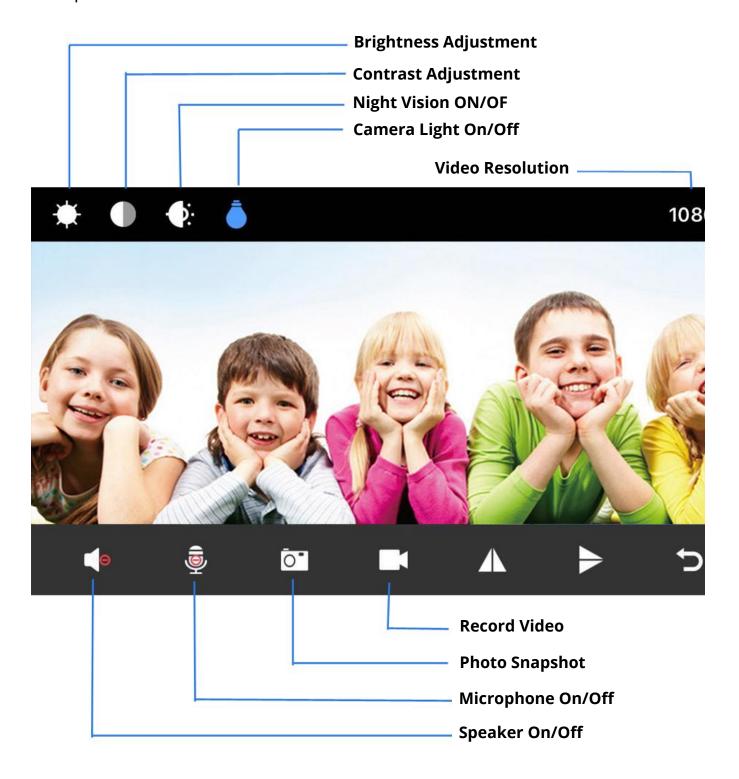


# 8. Network Integration

Please read the previous section; *Hotspot Mode* before continuing.


This mode of operation is so you can access the camera live view from anywhere using the LookCam app on your phone as long as your phone has internet access.

The Vizor has to be within range of a WiFi network, and you will need to know your WiFi network ID and password.


Wait 60 seconds for the camera to restart. The camera will now broadcast through your local network so you can remotely access the camera using the LookCam app.

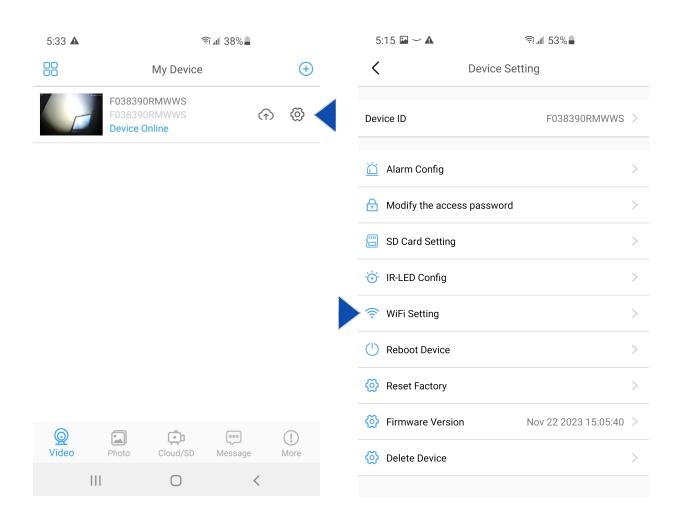

Select your WiFi network so the the camera can connect to it, and enter the password.

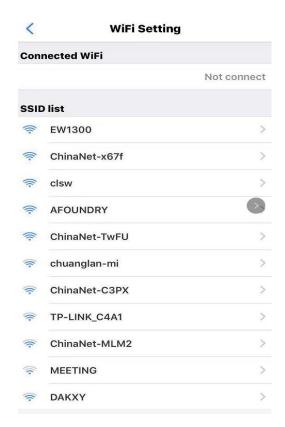



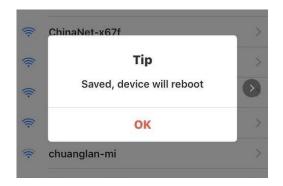


The camera will connect to the internet via your local WiFi, check on the main screen for "Device Online" after 60 seconds.

You may now connect your phone back to the local WiFi. In your smartphone, enter the mobile phone WI-FI settings, and choose your local network.


# **Recording & Playback**

Please refer to the product diagram on how to install a memory card on the camera device. You may have to format the memory on first use under "SD Card Settings".

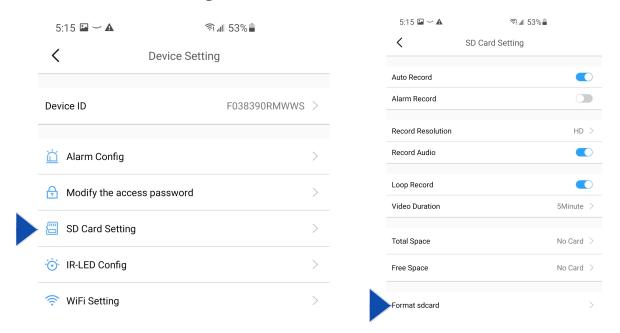


#### Continuous Video Recording

Under **SD Card Settings**, ensure the **Auto Record**, and **Loop Record** settings are turned on. Loop Recording simply means that the oldest recorded videos will be deleted and replaced the with latest recordings once memory is full. Videos are recorded in file segments of either 1, 2, 5 and 30 minutes long whitch can be specified under **Video Duration**.

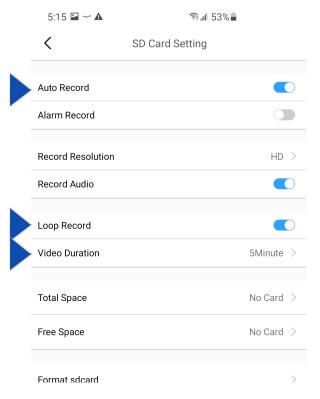


#### Motion Activated Video Recording


For video recording only when motion is detected, in the SD Card Settings menu turn on the Alarm Record setting.

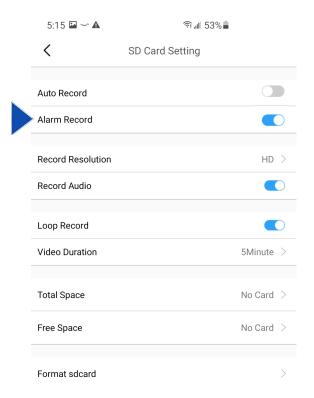


Under **Alarm Config** You may adjust the motion sensitivity that triggers video recording.

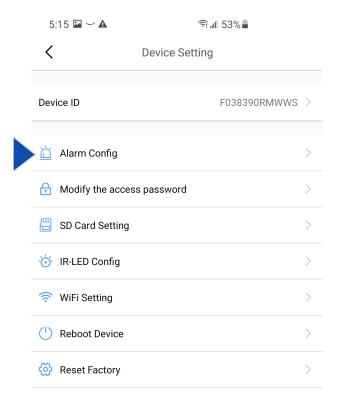


You also have the the option to recieve **Push Notifications** on your phone every time motion is detected.

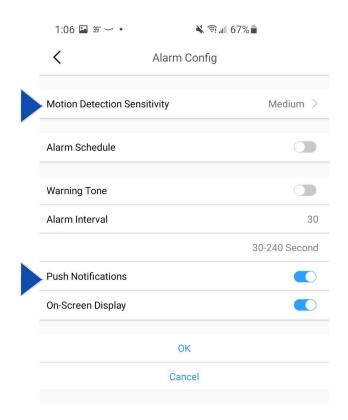

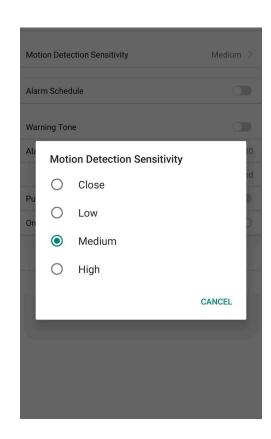


#### **Manually Recording**

To manually record videos and take snapshots you can use the live video user interface.

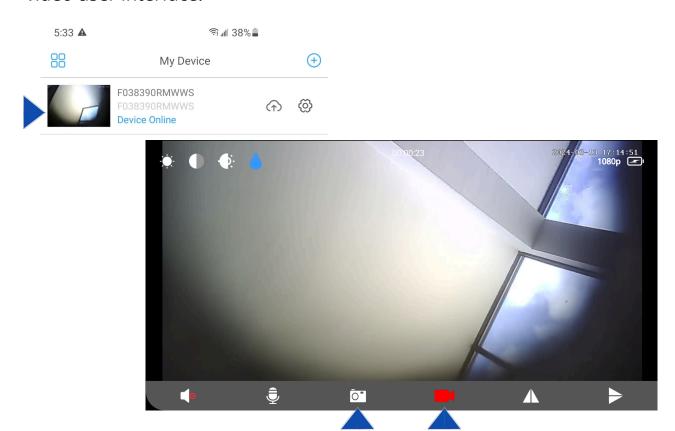

## Video Playback

To playback videos or view the snapped photos stored in the memory card, use the main menu screen, or connect the memory card to a computer.

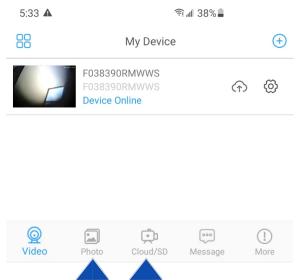

# 10. Troubleshooting Tips

#### **Check memory card:**

The camera supports up to 128 GB Micro SD card. Please use High Speed Class 10 FAT formatted memory card. You must format the Micro SD before using. If SD card is not recognized when inserted into the camera, simply remove and re-insert.

#### Camera offline:

- 1. Check power
- 2. Check if your router is working properly.
- 3. Weak Wi-Fi signal.
- 4. Wrong password wrong while Wi-Fi setting

#### Glitchy or stuttering video playback:

You should choose a suitable resolution to watch according to your internet speed. Internet connection interruption will also cause video to freeze.

#### Forgot password or password invalid:

Press and hold the reset button for 10 seconds to restore the camera device to the factory settings.

The initial password for each camera is **123456**. Please change the password to ensure the security of your camera.

**NOTE:** Passwords must consists of alphanumeric characters only.

If the camera cannot be connected to the router, please reset, and connect the hot spots before completing the configuration.

# **11. Technical Specifications**

Video Resolution, Ratios	1080p, 720p, 640p, 320p @ 16/9 & 4/3
Video Format	AVI
Frame Rate	25 FPS
Viewing Angle	150 degree horizontally /90 vertically
Motion detection activation dstance	Straight line, 6 meters
Minimal Illumination	1 LUX
Battery Life	~1 hour
Video Clip Segments	1, 2, 5, 30 minute video length
Video Encoder	H.264
Recording Range	5m²
Current Consumption	380MA/3.7V
Storage Temperature	-20-80 degree centigrade
Operating Temperature	-10-60 degree centigrade
Operation Humidity	15-85%RH
Memory Card Type	TF card, MicroSD Card
Player Software	VLCPlayer/SMPlayer
Computer Operating System	Windows/Mac OS X
Mobile Phone Operating System	Android/iOS/Windows Mobile
Maximum Users	4