



AIRI KARD

AI Voice Recorder & Translator Badge Holder

USER MANUAL

Model AI-AVIR-K3A · Works with the AIREC app for iPhone & Android

Thank you for choosing Airi Kard

Airi Kard is an ID badge holder with an AI voice recorder built in. Slide one switch to record your meeting, then let the AIREC app turn it into a transcript, a summary, a mind map or a translation.

Contents

1	Get to Know Airi Kard	3
2	Charge the Battery	5
3	Set Up the AIREC App	6
4	Make a Recording	8
5	Your Recordings in the App	10
6	Copy Recordings to a Computer	12
7	Troubleshooting & FAQ	13
8	Technical Specifications	15
9	Safety, Privacy, Warranty & Support	16

Before you begin: 4 things to know

- **Charge at 5 V only.** Use a computer USB port or a standard 5 V USB charger (1 A or less). Fast chargers (9 V and up) can burn out Airi Kard.
- **Use the included cable for files.** To copy recordings to a computer, use the USB-C data cable that came in the box. Many other cables only charge.
- **Always save when you're done.** Slide the switch all the way **down** to save your recording and turn Airi Kard off.
- **Record responsibly.** Recording laws vary by state and country. Always let people know when you're recording.

Need a hand? Our U.S.-based team is happy to help. Call **(877) 644-7592** (Mon–Fri, 9 AM–5 PM ET), email **support@zetronix.com**, or visit **help.zetronix.com**.

SECTION 1

Get to Know Airi Kard

A. What's in the box



Airi Kard

× 1



USB-C data cable

× 1



User manual

× 1




Retail box

× 1

ID card, lanyard and badge clip are not included.

B. Parts of your Airi Kard

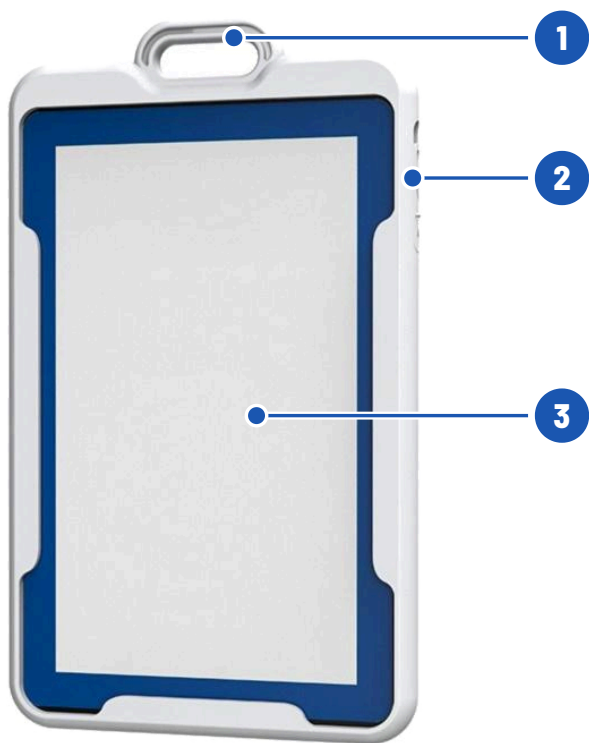

1

Lanyard loop

Attach any lanyard, badge reel or clip.

2

3-position switch (on the side)

Record, turn on & connect, or save & turn off.
See next page.

3

Card window

Holds a standard ID card, 3.37 × 2.13 in (CR80).



USB-C port

For charging and for copying recordings to a computer.

C. The 3-position switch

One switch on the side of Airi Kard does everything. Each position is marked with a symbol you can see and feel.



Top · ○ Record

Starts recording right away. No phone or internet needed.

Middle · v On & Connect

Turns Airi Kard on so it can connect to the AIREC app over Bluetooth.

Bottom · ↑ Save & Off

Saves your recording and turns Airi Kard off.




The switch is on the right side, near the top.

Easy to remember: Up to record. Middle to connect. Down to save.

D. Insert your ID and wear it

- 1 Slide your ID or access card into the **card window**. Any standard 3.37 × 2.13 in card fits.
- 2 Attach your lanyard, badge reel or clip to the **lanyard loop** at the top.
- 3 Wear Airi Kard on the outside of your clothing, at chest height, so your voice isn't muffled.

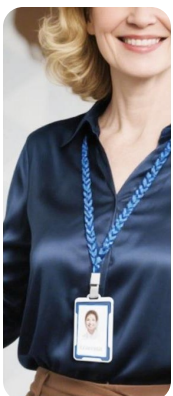

At 1.4 oz and only 0.28 in thin, Airi Kard is comfortable to wear all day and goes with you to every meeting.

ID card, lanyard and clip shown for illustration only and not included.

SECTION 2

Charge the Battery

Charge Airi Kard fully before first use. A full charge takes about **2 hours** and gives up to **18 hours** of recording.

- 1 Plug the included **USB-C cable** into Airi Kard's USB-C port.
- 2 Plug the other end into a **computer USB port** or a **5 V USB wall charger** rated **1 A or less** (like a basic phone charger).
- 3 The light **flashes red** while charging and turns **blue** when the battery is full. Unplug the cable.

Light	What it means
 Red, flashing	Charging
 Blue	Fully charged. You can unplug the cable.

Important: no fast chargers. Airi Kard must be charged at **5 V**. High-voltage fast chargers (9 V or more, often labeled "fast charge", "PD" or "QC") can damage the battery and burn out the device. If you're not sure, charge from a computer's USB port.

Battery care

- If you won't use Airi Kard for a while, charge it fully at least **once every 3 months** to protect the battery.
- Charge at room temperature. Don't charge or leave Airi Kard in a hot car, in direct sun or near a heater.
- Recording time is an estimate. Actual time depends on how you use Airi Kard.

SECTION 3

Set Up the AIREC App

Airi Kard records on its own. The **AIREC** app is where the AI does its work: transcripts, summaries, mind maps and translation.

A. Install the AIREC app

Scan the code for your phone with its camera, or search for "**AIREC**" in the App Store or Google Play.



iPhone

App Store · iOS 16 or later



Android

Google Play

B. Create your account

- 1 Open AIREC and follow the on-screen steps to **sign up** or **log in**.
- 2 When the app asks, tap **Allow** for **Bluetooth**. On Android, also allow **Nearby devices** (or **Location** on older phones). The app needs this to find Airi Kard.
- 3 Make sure your phone is online. The AI features need an internet connection.

C. Turn on Airi Kard



Slide the switch to the **middle (V)** position. Airi Kard is now on and ready to connect to the app.


What you'll need

- An iPhone with iOS 16 or later, or an Android phone with Bluetooth
- An internet connection (Wi-Fi or mobile data) for transcription, summaries and translation
- An AIREC account (you create it in the app)


SECTION 3 · CONTINUED

D. Connect Airi Kard to the app

- 1 Turn on **Bluetooth** on your phone and keep Airi Kard close by, with its switch in the **middle (V)**.
- 2 Open AIREC. On the home screen, tap **+ Not connected** at the top.
- 3 On the **Bluetooth connection** screen, find your Airi Kard (it may be listed as **VoiceNote**) and tap **Connect device**.

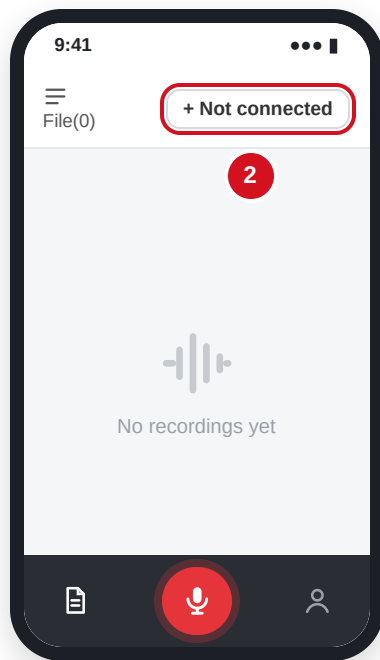

Home screen. Tap + Not connected.

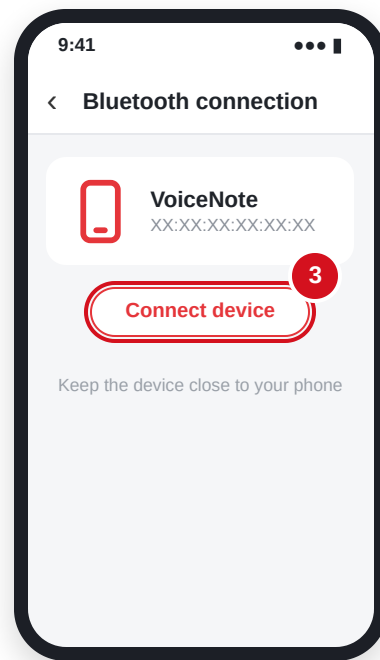

Bluetooth connection. Tap **Connect device**.

Pictures are simplified. Screens may look a little different on your phone or after app updates.



Connected! Airi Kard is now linked to your AIREC account. Next time, just slide the switch to the middle and open the app.

Tip: Connect through the AIREC app, not your phone's Bluetooth settings menu. If Airi Kard doesn't appear, see "**The app can't find my Airi Kard**" on page 13.

SECTION 4

Make a Recording

There are two ways to record. Use the switch when you want to start fast with no phone, or start from the app when you want live transcription or translation.

A. Record with the switch (no phone needed)



- 1 Slide the switch all the way **up** (○). Airi Kard starts recording right away.
- 2 Go about your meeting, class or interview. Airi Kard keeps recording on its own. No phone, Wi-Fi or internet needed.
- 3 When you're done, slide the switch all the way **down** (↑). Your recording is saved and Airi Kard turns off.

Don't skip step 3. Always slide the switch down to finish. A recording that isn't saved this way may be incomplete or lost.


B. Bring your recordings into the app

- 1 Slide the switch to the **middle** (V) and open AIREC. The app reconnects to Airi Kard.
- 2 In the file list, recordings that are still on Airi Kard show a **transfer** icon . Tap it to copy the recording to your phone.
- 3 Once a recording is on your phone, you can play it and create a transcript, summary or mind map (Section 5).


C. Record from the app

With Airi Kard connected (switch in the **middle**), you can start, save or discard recordings from your phone and choose what the app does while you record.

- 1 Tap the red **microphone** button at the bottom of the app.
- 2 Choose a function (see the table below).
- 3 Tap the big red **microphone** to start recording.
- 4 When you're done, tap ✓ to save the recording. Tap ✕ to throw it away.

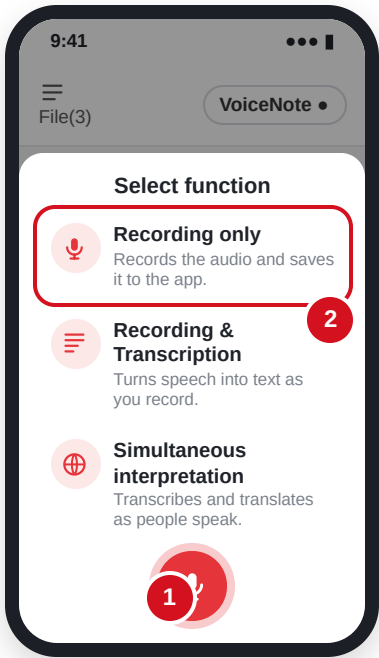

Steps 1-2. Open recording and pick a function.

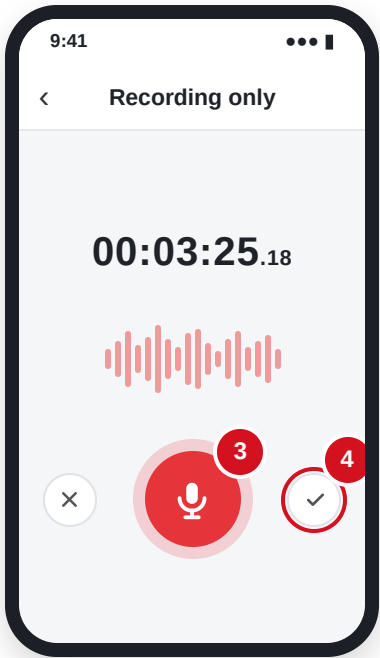

Steps 3-4. Start, then tap ✓ to save.


Pictures are simplified. Screens may look a little different on your phone or after app updates.

Function	Best for
Recording only	Capturing audio now and creating a transcript or summary later.
Recording & Transcription	Watching your words appear as text on your phone while you record.
Simultaneous interpretation	Presentations, video calls and meetings in another language. Each sentence is transcribed and translated as it's spoken.


SECTION 5

Your Recordings in the App

Every recording on your phone appears in the AIREC file list. From there you can play it, rename it, delete it, and open it to see the AI transcript, summary and mind map.

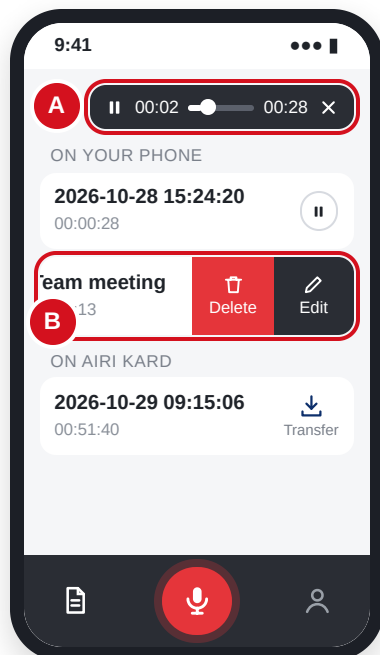

File list. Play, swipe to edit or delete, and transfer.

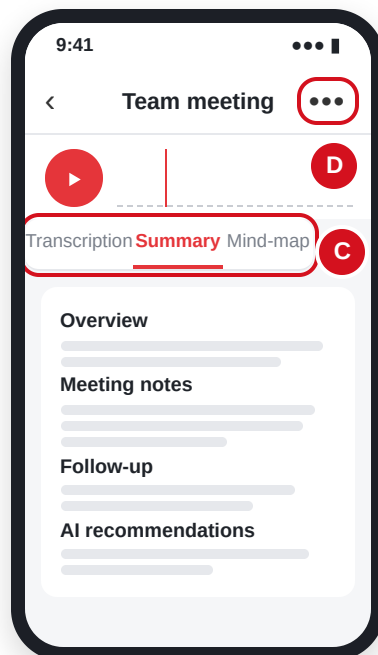

Recording details. Switch views and share.

Pictures are simplified. Screens may look a little different on your phone or after app updates.

A Play

Tap a recording to play it. Use the bar at the top to pause, drag to any point, or tap **X** to close the player.

B Edit or delete

Swipe left on a recording, then tap **Edit** to rename it or **Delete** to remove it from your phone.

C Transcript, Summary, Mind-map

Open a recording and tap the tabs to see the text, the AI summary, or a mind map of the discussion.

D Share & export

Tap **...** in the top corner to share or export as **TXT**, **PDF** or **Markdown**.

Recording won't play? Delete the copy on your phone (swipe left → Delete), then transfer it again from Airi Kard.

SECTION 5 · CONTINUED

What the AI can do for you

Transcription

Turns speech into searchable, editable text. Copy it straight into email, documents or notes.

AI Summary

One tap pulls out the key points: meeting info, overview, notes, follow-ups and recommendations.

Mind Map

Turns a summary into a clear map of topics, sub-points and action items.

Translation, three ways

Interpretation

For presentations, cross-border meetings and video calls. Each sentence is transcribed and translated as it's spoken.

Conversation

For face-to-face talks. The app recognizes both speakers and translates back and forth.

Photo

For menus, signs and documents. Take a photo and the text is pulled out and translated in seconds.

The app detects languages automatically. All translation runs in the AIREC app on your phone.

Export formats

TXT

Plain text that pastes anywhere

PDF

Clean and ready to forward

Markdown

For docs, wikis and notes apps

Share

Email, messages and more

Good to know

- AI features run in the AIREC app and need an **internet connection**. Recording with the switch works anywhere, with no connection.
- The app uses AI models including **GPT-4**, **o3-mini** and **DeepSeek**. Clear audio gives the best results: wear Airi Kard facing out and keep background noise low.
- AI-generated text can contain mistakes. Check important details, names and numbers against the recording.
- App features, menus and plans are provided by the app developer and may change with updates.

SECTION 6

Copy Recordings to a Computer

You can copy the original audio files from Airi Kard to a Windows PC or Mac, just like a USB flash drive.

- 1 Save first.** Slide the switch all the way **down (↓)** to save any recording in progress.
- 2** Connect Airi Kard to your computer with the **included USB-C data cable**.
- 3** Open the drive that appears on your computer (**File Explorer** on Windows, **Finder** on Mac) and copy the recording files to a folder on your computer.
- 4** When the copy is finished, **eject** the drive before you unplug the cable.

Why save first? Airi Kard has a built-in protection reset. A recording that is still in progress when you plug into a computer may not be saved.

Drive not showing up? Many USB-C cables only charge. Use the data cable that came with Airi Kard and plug it straight into the computer, not into a hub.

How much can Airi Kard hold?

Airi Kard records high-quality audio (48 kHz, 256 kbps), so files are fairly large. Here's about how much fits:

Model	Recording time it can store
32GB	About 270 hours
128GB	About 1,080 hours

Storage hours are estimates. Actual results vary with use and settings.

Keep your recordings safe

- Copy important recordings to your computer or phone soon after you make them, and keep a backup.
- Move files off Airi Kard from time to time so you always have room to record.
- Zetronix is not responsible for lost or damaged recordings, so please back up anything you can't afford to lose.

Troubleshooting & FAQ

Do I need my phone to record?

No. Slide the switch **up** (○) and Airi Kard records on its own, with no phone or internet. Connect to the app later to get your transcript and summary.

What do the three switch positions do?

Up (○) records. **Middle** (V) turns Airi Kard on and connects it to the app. **Down** (↑) saves your recording and turns it off.

The app can't find my Airi Kard.

Make sure the switch is in the **middle** (V), Bluetooth is on, and Airi Kard is charged and close to your phone. Check that AIREC is allowed to use Bluetooth (and Nearby devices or Location on Android) in your phone's settings. Connect from the app, not the phone's Bluetooth menu. If it's connected to another phone, disconnect it there first. Then close and reopen the app and try again.

My recording is missing or cut short.

Always finish by sliding the switch all the way **down** (↑). Also check that the battery wasn't empty and that there was free space. Recordings made with the switch stay on Airi Kard until you transfer them in the app.

A recording won't play in the app.

Swipe left on the recording and tap **Delete** to remove the copy on your phone, then transfer it again from Airi Kard.

Transcription, summary or translation isn't working.

These features need an internet connection. Check that your phone is online and the AIREC app is up to date, then try again.

The light doesn't come on when I charge.

Use the included cable and a computer USB port or a 5 V charger rated 1 A or less. If the battery was completely empty, give it a few minutes to show the charging light.

Can I use my phone's fast charger?

No. Fast chargers (9 V or more) can burn out Airi Kard. Use a computer USB port or a basic 5 V charger.

SECTION 7 • CONTINUED

My computer doesn't show Airi Kard as a drive.

Slide the switch **down** to save, then use the **included USB-C data cable**. Many other cables only charge. Plug straight into the computer instead of a hub, or try another USB port.

How long does the battery last?

Up to **18 hours** of recording on a full charge. Charging takes about **2 hours**.

How many hours can I store?

The 32GB model holds about **270 hours** and the 128GB model about **1,080 hours**. Copy recordings to a computer to free up space.

Which ID cards fit?

Any standard **3.37 × 2.13 in (CR80)** card, the same size as a credit card and most employee badges and access cards.

I haven't used Airi Kard in a while.

Charge it fully before use. To protect the battery during storage, charge it at least once every 3 months.

Is it OK to record conversations?

Recording laws vary by state and country, and many places require everyone's consent. Always tell people when you're recording. Airi Kard is made for open note-taking in meetings, classes, trainings and interviews.

Still need help?

Our U.S.-based support team is happy to help. Have your order number handy if you can.



Zetronix Customer Support

Phone: **(877) 644-7592** (Mon–Fri, 9 AM–5 PM ET)

Email: **support@zetronix.com**

Help center: **help.zetronix.com** (scan the code)

Technical Specifications

Product	Airi Kard AI Smart Translator, Note Taker & Voice Recorder Badge Holder
Model / SKU	AI-AVIR-K3A
Storage	32GB (about 270 hours) or 128GB (about 1,080 hours)
Recording format	WAV, 48 kHz sampling rate, 256 kbps bit rate
Controls	3-position side switch: Record (top) · On & Connect (middle) · Save & Off (bottom). Recording can also be started from the app.
Battery	650 mAh rechargeable lithium battery
Recording time	Up to 18 hours per charge*
Charging	About 2 hours · 5 V USB input, 1 A or less (do not use 9 V+ fast chargers)
Port	USB Type-C for charging and file transfer
Connectivity	Bluetooth, connects to the AIREC app
App	AIREC for iPhone (iOS 16 or later) and Android
AI features (in app)	Transcription, AI summary, mind map
Translation (in app)	Simultaneous interpretation, conversation, photo translation
AI models (in app)	GPT-4, o3-mini, DeepSeek
Export formats	TXT, PDF, Markdown
Computer compatibility	Windows and macOS (file transfer over USB-C)
Card window	Standard ID card, 3.37 × 2.13 in (CR80)
Dimensions	3.98 × 2.36 × 0.28 in
Weight	1.4 oz
Body	ABS, white with blue card frame
Warranty	1-year limited warranty

*Recording time and storage hours are estimates; actual results vary with use and settings. AI features run in the AIREC app and need an internet connection. Specifications may change without notice.

SECTION 9

Safety, Privacy, Warranty & Support

Use responsibly

This device must be used in accordance with all applicable local, state and federal laws. Neither the manufacturer nor the distributor is liable for any unlawful use; the user accepts all responsibility for how the device is used.

Audio recording is regulated in many states and countries, and recording a conversation without the consent of the people involved may be illegal. Know the rules where you live, and always let people know when you're recording.

Safety warnings

- Read this manual before use and keep it for future reference.
- Charge only at 5 V (1 A or less). Never use 9 V or higher fast chargers.
- Stop using Airi Kard if it gets very hot, swells, or smells unusual.
- Keep it dry. Don't use it in rain, in the shower or in very humid places.
- Don't leave it in direct sun, in a hot car or near heat sources.
- Don't open the case or try to replace the battery. There are no user-serviceable parts inside.
- Keep Airi Kard and its cable away from small children.
- Recycle the built-in battery according to local rules. Don't put it in household trash.

Warranty & returns

Your Airi Kard is covered by a **1-year limited warranty** against qualifying defects in materials or workmanship from the date of purchase. Zetronix will repair or replace the product at its discretion. Return authorizations can be requested within **30 days of delivery**; a 15% restocking fee applies to most non-defective returns. See zetronix.com/return-policy for full terms.



Customer support

Phone: **(877) 644-7592** (Mon–Fri, 9:00 AM–5:00 PM ET)

Email: **support@zetronix.com**

Help center: **help.zetronix.com** (scan the code)

Online: **zetronix.com**



Zetronix Corp. · Boston, MA · Serving customers since 2006
Airi Kard is distributed by Zetronix. App names and logos belong to their respective owners.