



Zetronix™
State of the Art



Nano

**1080p HD WIFI Nanny Cam D.I.Y
Self-Install Camera Kit**


USER MANUAL

1. Whats Included Unbox Your Surveillance Camera	Page 1
2. Camera Device Diagram Detailed Diagram and Key Features	Page 1
3. Initial Setup Step-by-Step Guide to Get Started	Page 2
4. App Installation How to Download and Install the Required Mobile Application	Page 2
5. Camera Startup Preparing the camera device for connection	Page 3
6. WiFi Connection Setup Instructions for Connecting to the Device Wi-Fi Hotspot	Page 3
7. Hotspot Mode Using the device as a Standalone Hotspot Device Without Wi-Fi	Page 5
8. Network Integration Connecting Your device to Your Home Wi-Fi Network	Page 6
9. Recording & Playback Guide to Recording and Retrieving Files from Your Media Card	Page 8
10. Troubleshooting Tips Quick Fixes for Common Issues	Page 12

1. What's Included



2. Camera Device Diagram

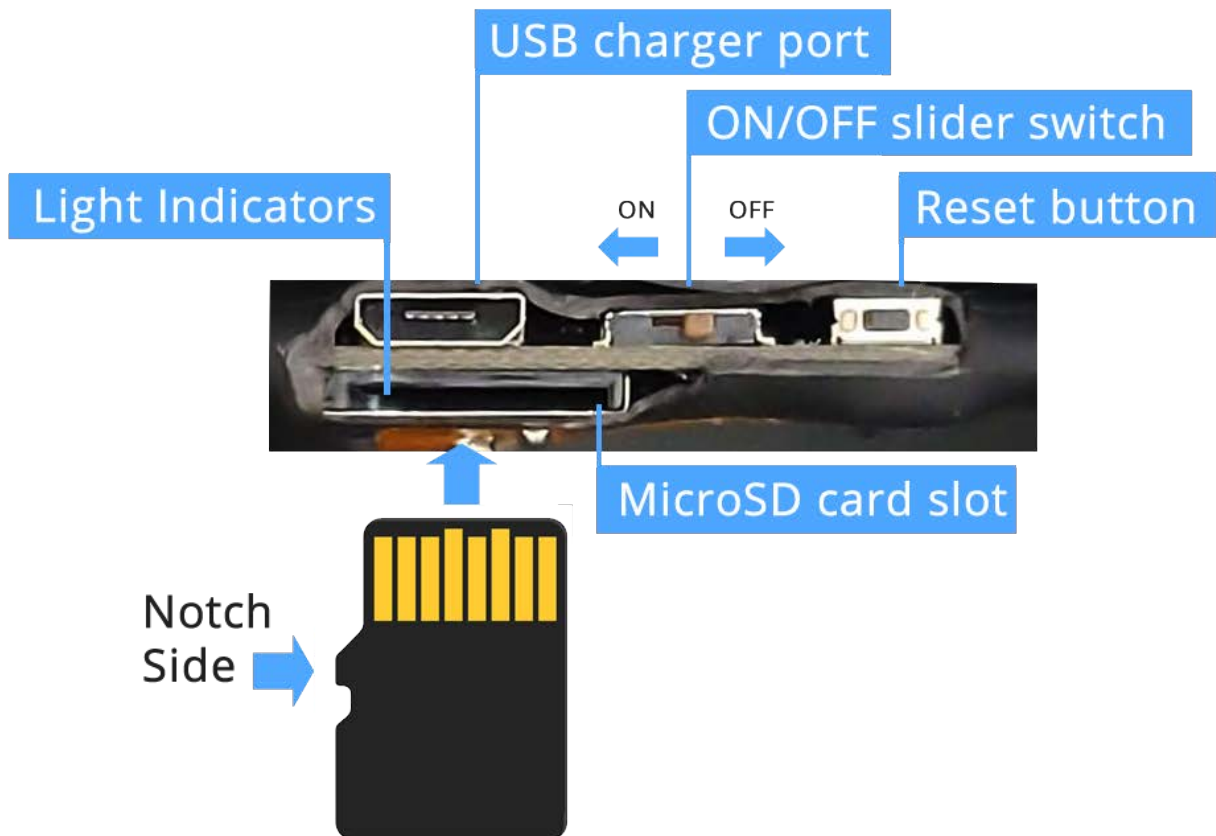

3. Initial Setup

Charging

Please use the included USB cable to charge the battery. Connect the cable to a USB A/C adpter or any powered computer port.

Media Storage

Insert a MicroSD memory card as shown in the diagram. The card should click in place. To remove it simply press it down again to toggle it back out.

Power ON/OFF

Slide the power switch left or right to turn the camera device on or off.

Camera Reset

Resetting the camera device to factory default will fix most issues. Whie the ON/OFF switch is set to ON, press and hold the reset switch for 5 seconds, the camera will restart with factory settings.

4. App Installation

I. Setting up the App

Download the **LookCam** app from Google Play or the App Store. You can scan the QR code or use the URL links below from your phone.



App Icon

Google Play / Android

<https://play.google.com/store/apps/details?id=com.view.ppcs>

App Store / iOS

<https://apps.apple.com/us/app/lookcam/id1460758870?l=zh&ls=1>

Windows Mobile

<http://lookcam.ffv.xyz/down/Lookcam.zip>

5. Camera Startup

Find the camera device within the device as seen in the diagram.

Ensure the ON/OFF switch is to the **ON** position (left).


Look for a **slow** blinking **blue** light inside the SD card slot. It may take 30 seconds for the light to change from solid blue to blinking blue.

If you only see a red light, or no lights, ensure the device is charged, and try resetting the device according to the previous section.

6. WiFi Connection Setup


Please ensure to follow the previous step; **Camera Startup** to make sure the camera device is broadcasting it's own WiFi network.

In your smartphone, enter the mobile phone WI-FI settings, find the camera's WiFi network as shown as a sequence of character seen below and connect to it.

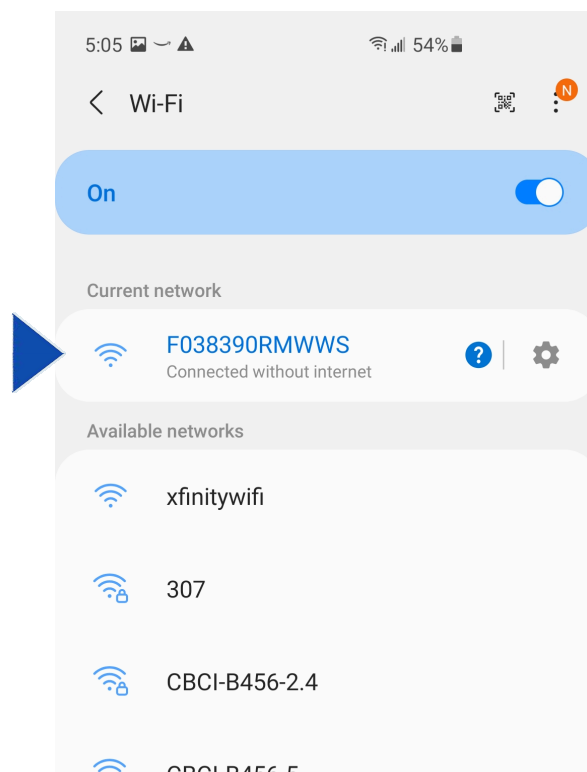

NOTE: please ensure "Mobile data" and "WiFi assist" features are disabled to prevent your phone from automatically using another network.

You may get a prompt warning that the internet is not available. If so, choose to **Keep Wi-Fi connection**.

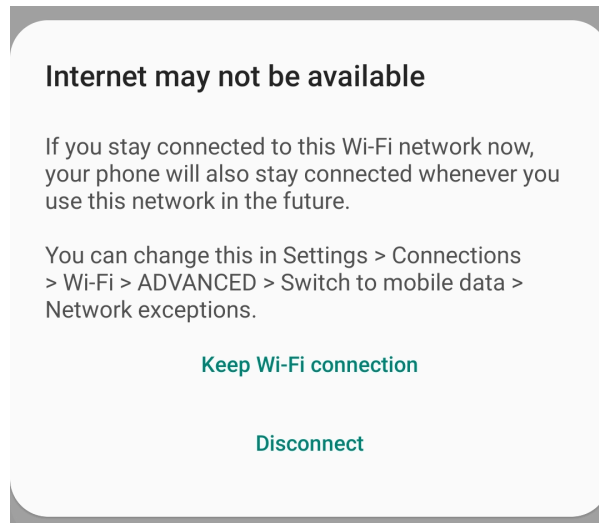


Your phone should now be connected to the camera device.

7. Hotspot Mode

This section is so you will be able to view the camera live on your phone using the the LookCam app. No WiFi is required if your phone is within 30 feet range of the device.


This mode of operation is ideal if the device is installed beyond the range of a WiFi network.

After completing the previous section, when you first open the LookCam app, the app will automatically prompt you to add the new camera device.

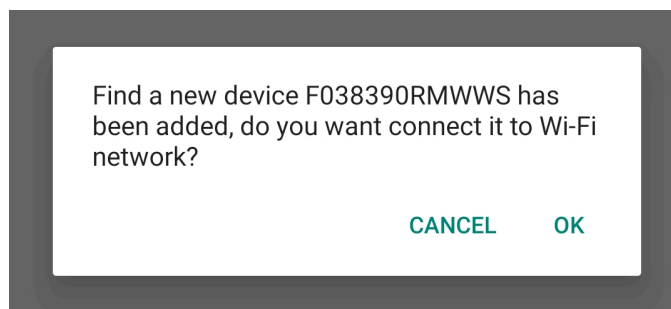


If you dont get a prompt, either it may be already connected, the phone did not connect to the hotspot on the previous section or you may have connected to the wrong network.

When you see "**Device Online**" in the listed item, you may tap on it to open the live camera feed.

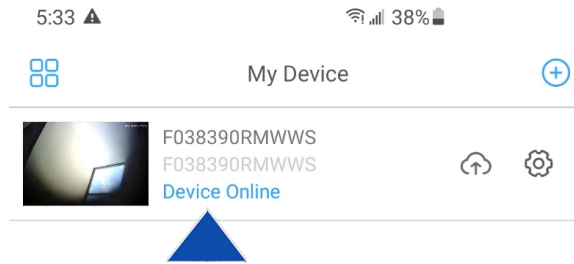

You may be prompted to setup a new password. You can **cancel** it for now to preview the video.

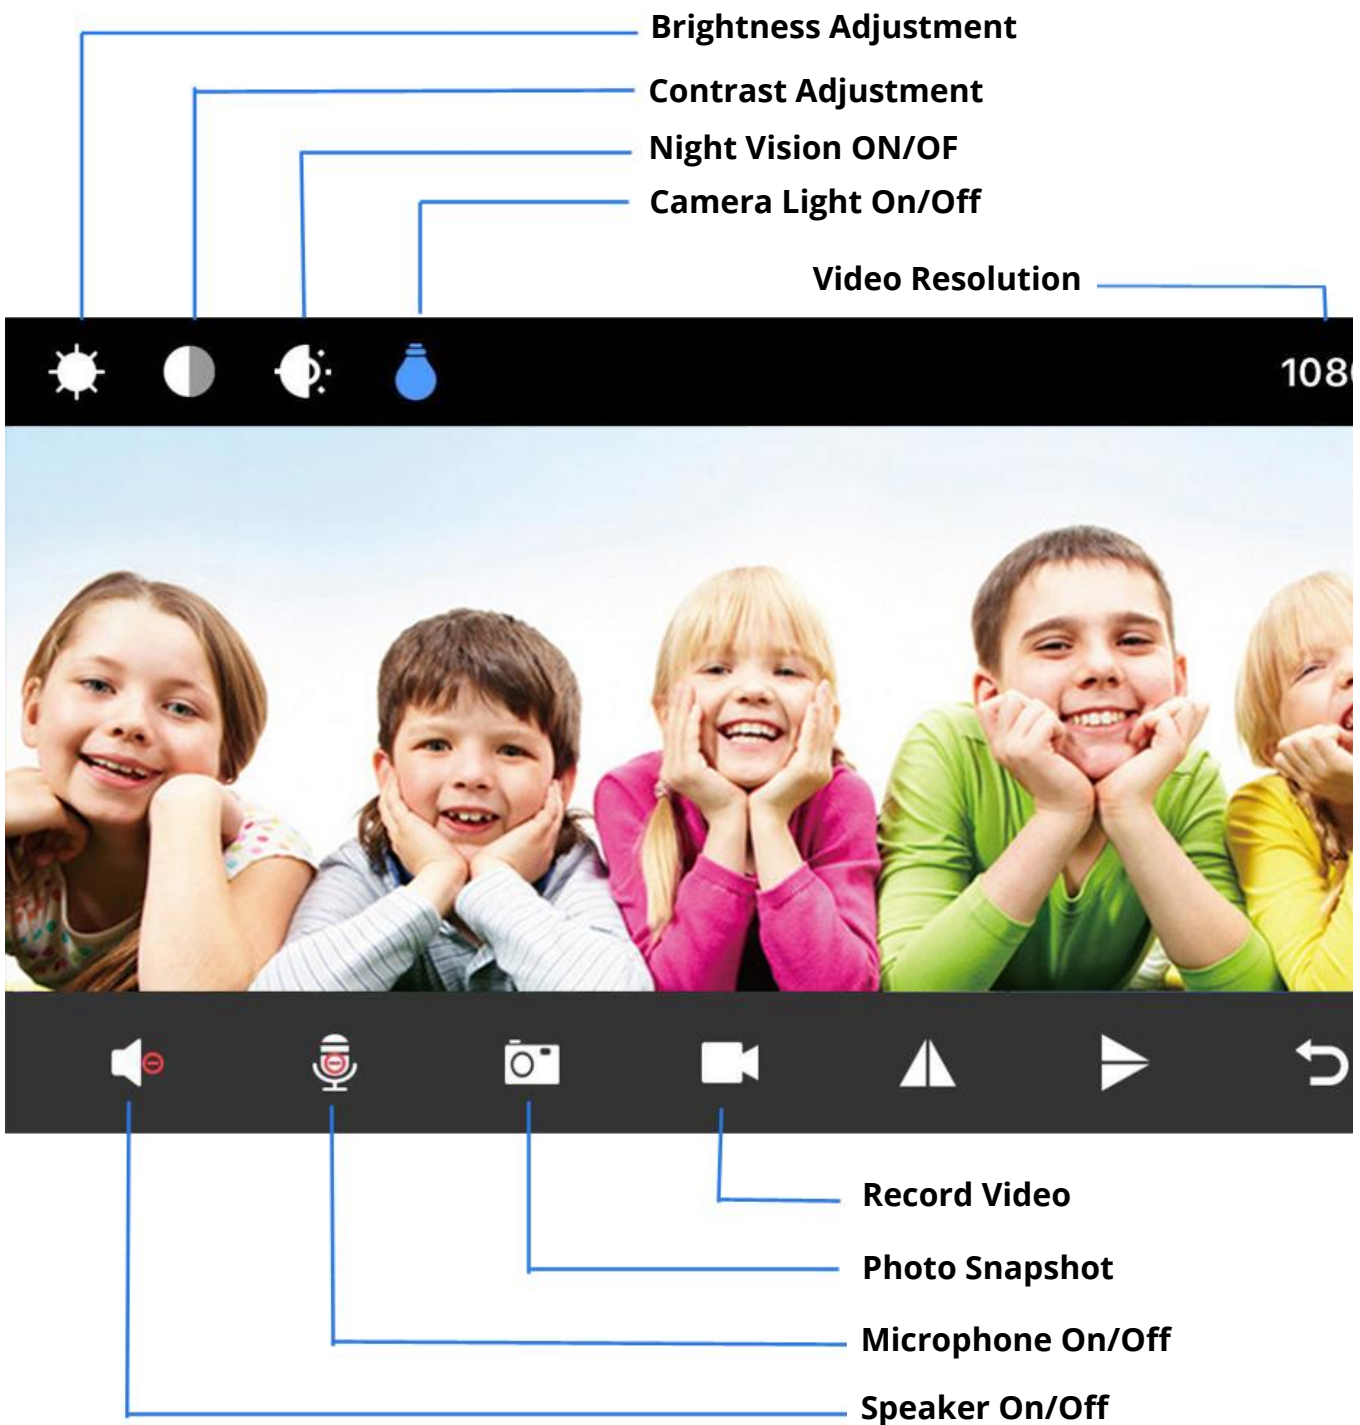

8. Network Integration



Please read the previous section; **Hotspot Mode** before continuing.

This mode of operation is so your can access the camera live view from anywhere using the LookCam app on your phone as long as your phone has internet access.



The device has to be within range of a WiFi network, and you will need to know your WiFi network ID and password.

Click the settings icon ⚙️ → WiFi Setting → Choose you local WiFi → Enter you WiFi Password → Click OK.

Wait 60 seconds for the camera to restart. The camera will now broadcast though your local network so you can remotly access the camera using the LookCam app.

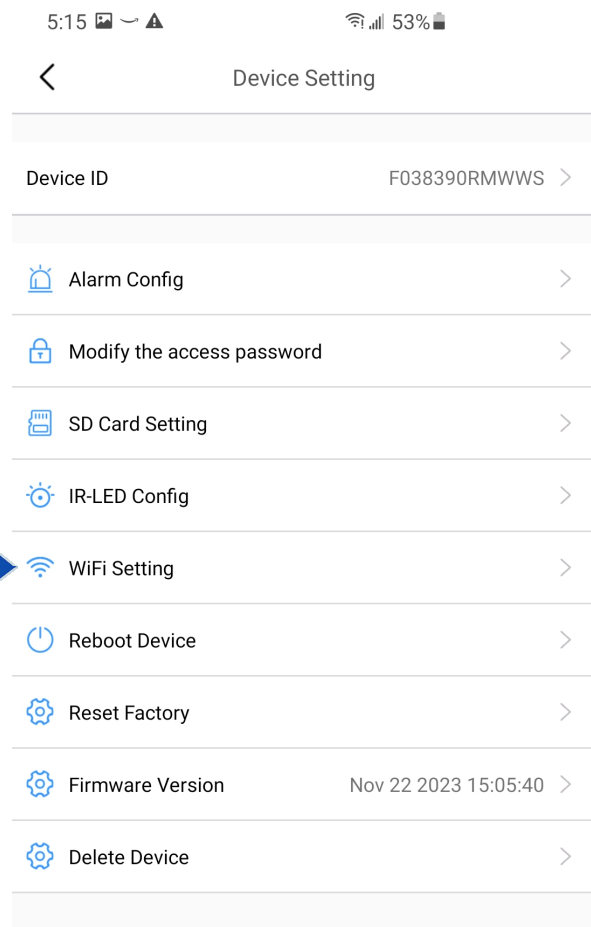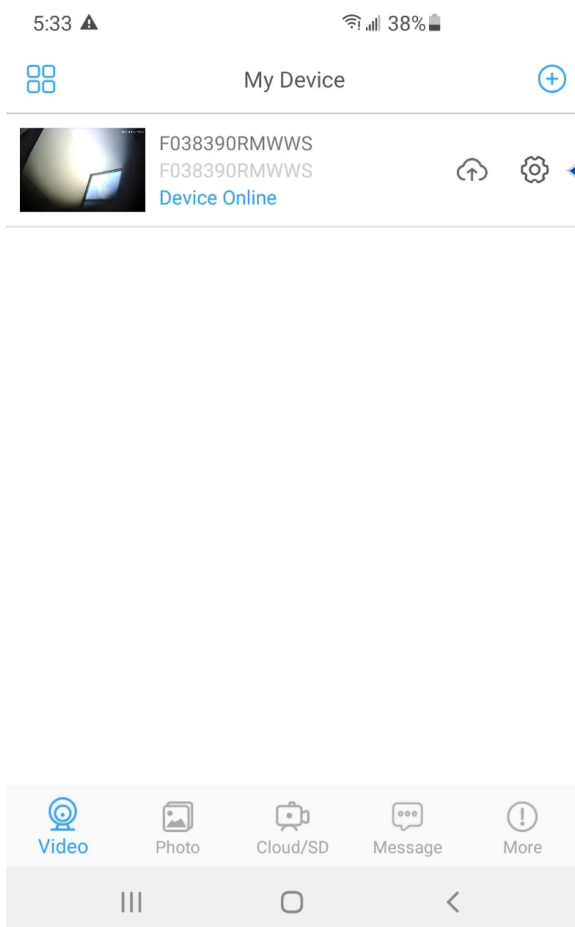

Select your WiFi network so the the camera can connect to it, and enter the password.

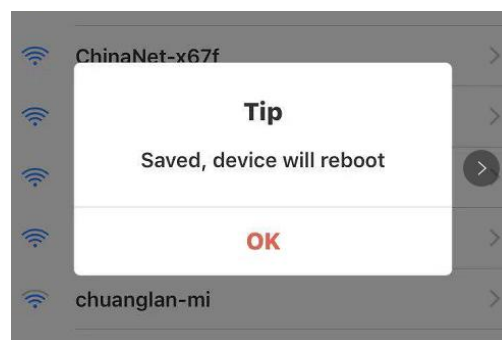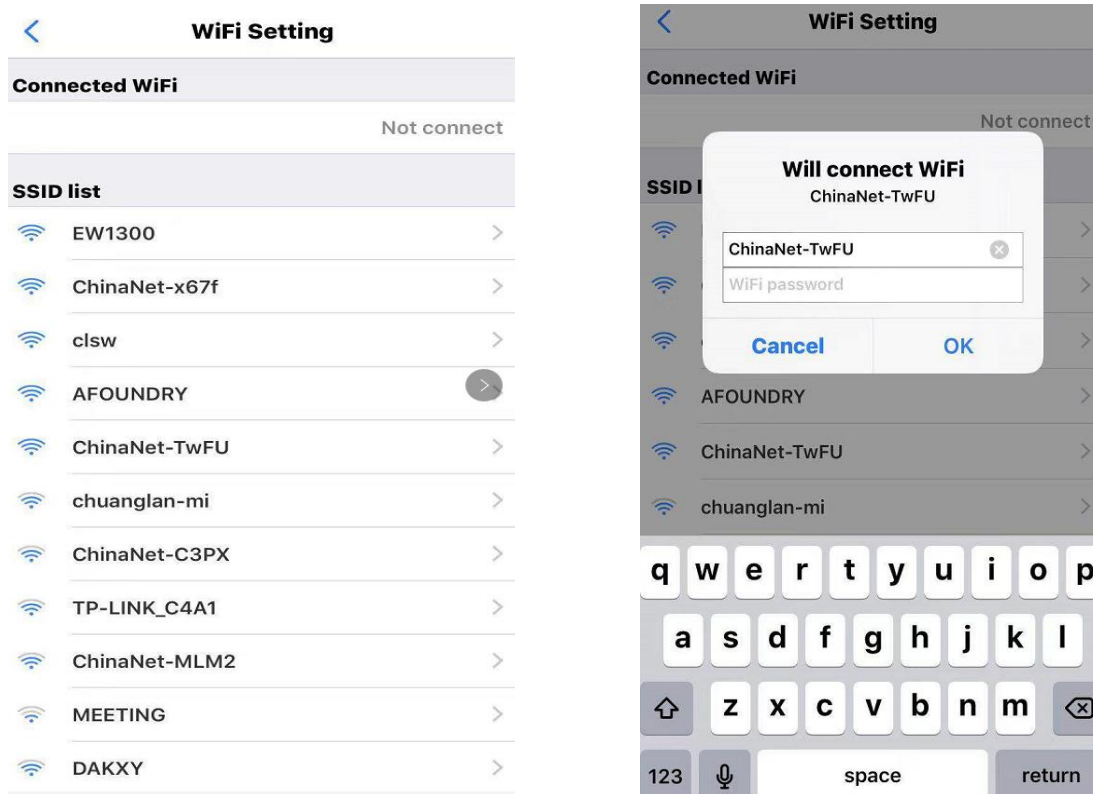


The camera will connect to the internet via your local WiFi, check on the main screen for "[Device Online](#)" after 60 seconds.

You may now connect your phone back to the local WiFi. In your smartphone, enter the mobile phone WI-FI settings, and choose your local network.


Recording & Playback

Please refer to the product diagram on how to install a memory card on the camera device. You may have to format the memory on first use under "SD Card Settings".

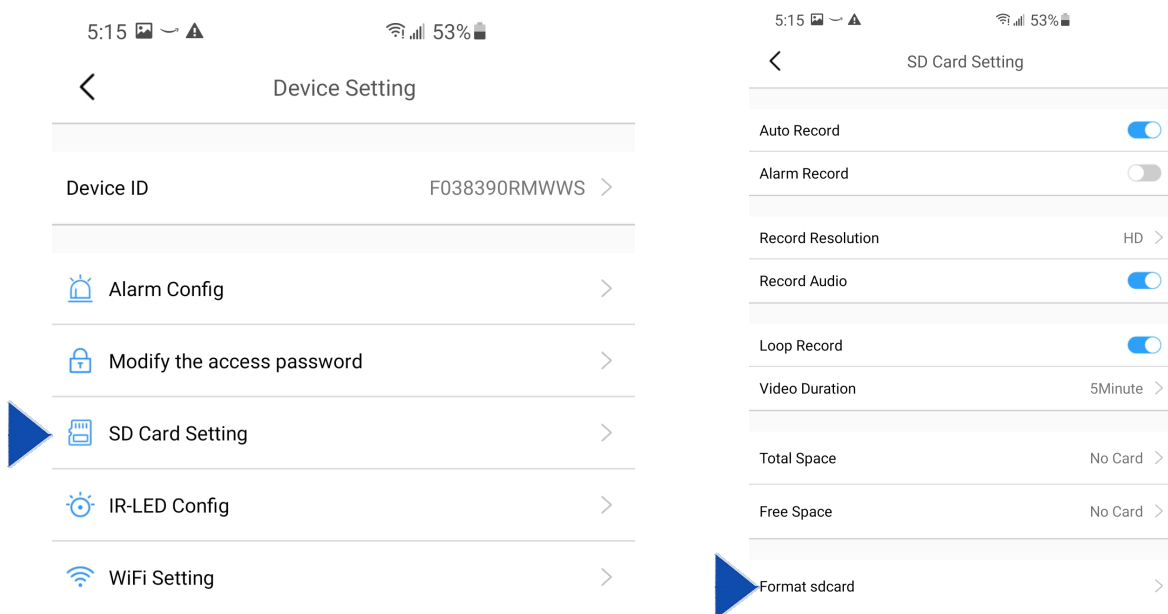


Continuous Video Recording

Under **SD Card Settings**, ensure the **Auto Record**, and **Loop Record** settings are turned on. Loop Recording simply means that the oldest recorded videos will be deleted and replaced with the latest recordings once memory is full. Videos are recorded in file segments of either 1, 2, 5 and 30 minutes long which can be specified under **Video Duration**.

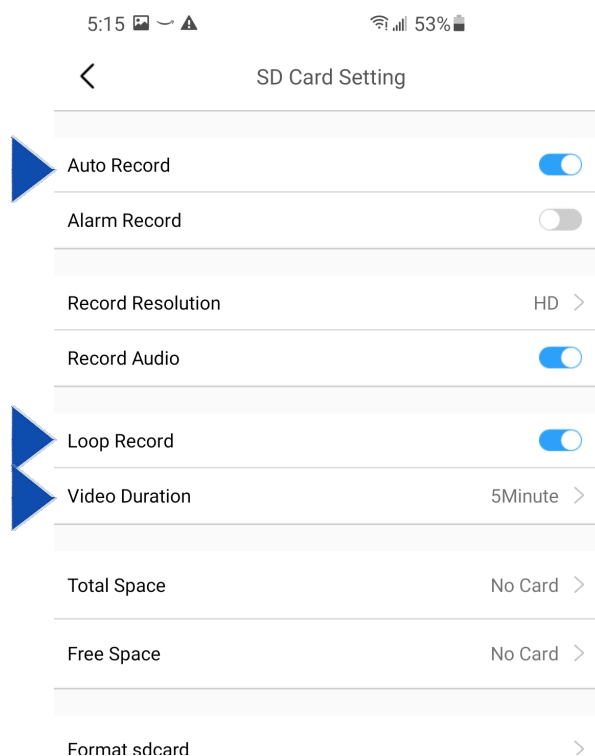


Motion Activated Video Recording



For video recording only when motion is detected, in the **SD Card Settings** menu turn on the **Alarm Record** setting.

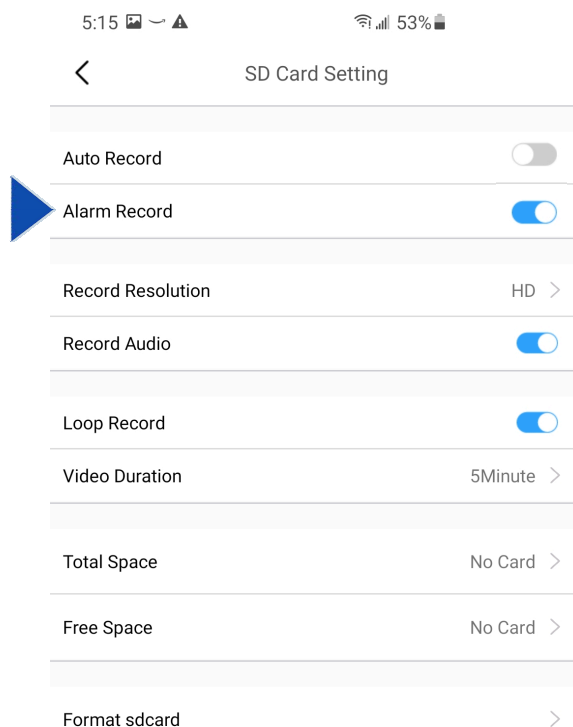

Under **Alarm Config** You may adjust the motion sensitivity that triggers video recording.

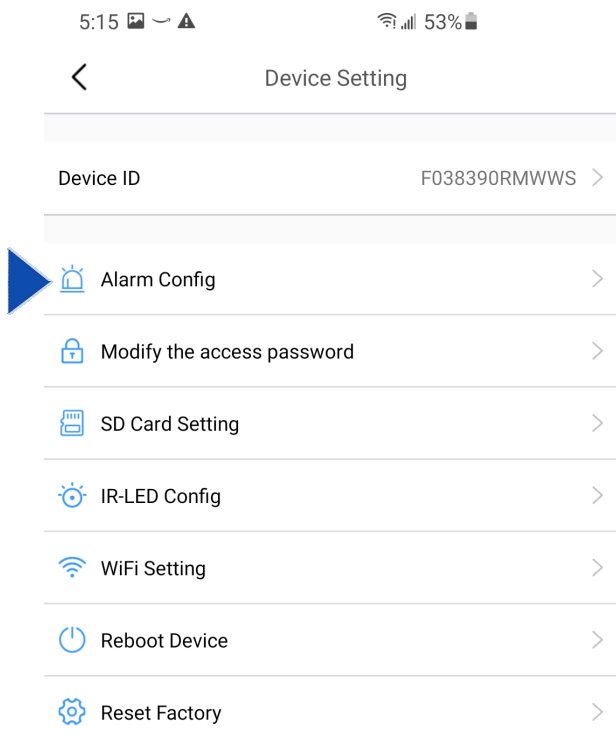


You also have the the option to recieve **Push Notifications** on your phone every time motion is detected.

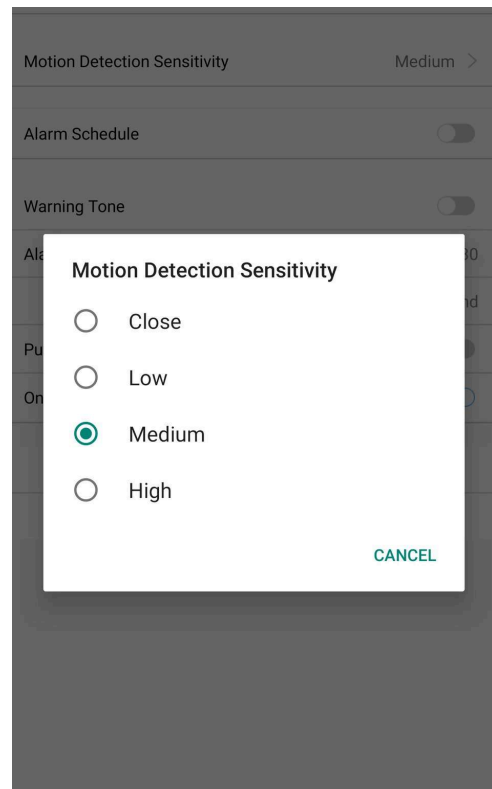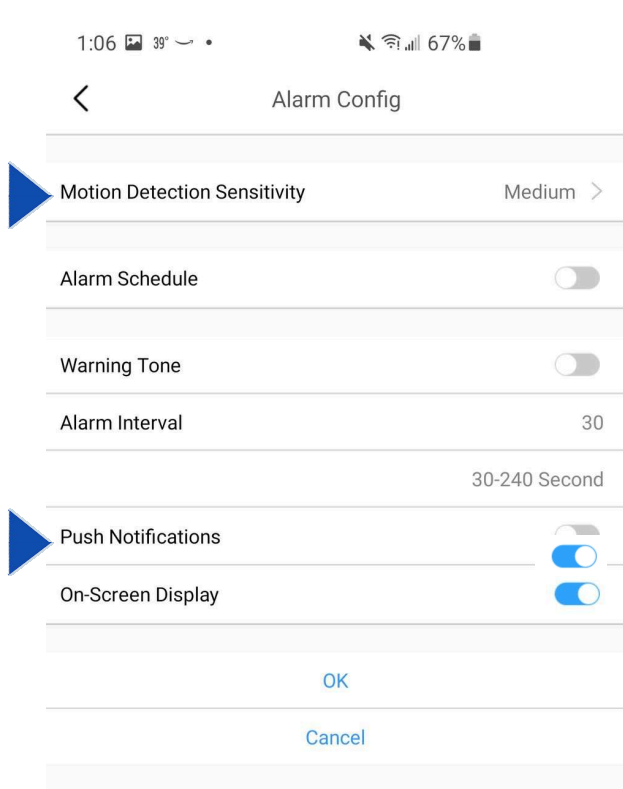


Manually Recording

To manually record videos and take snapshots you can use the live video user interface.

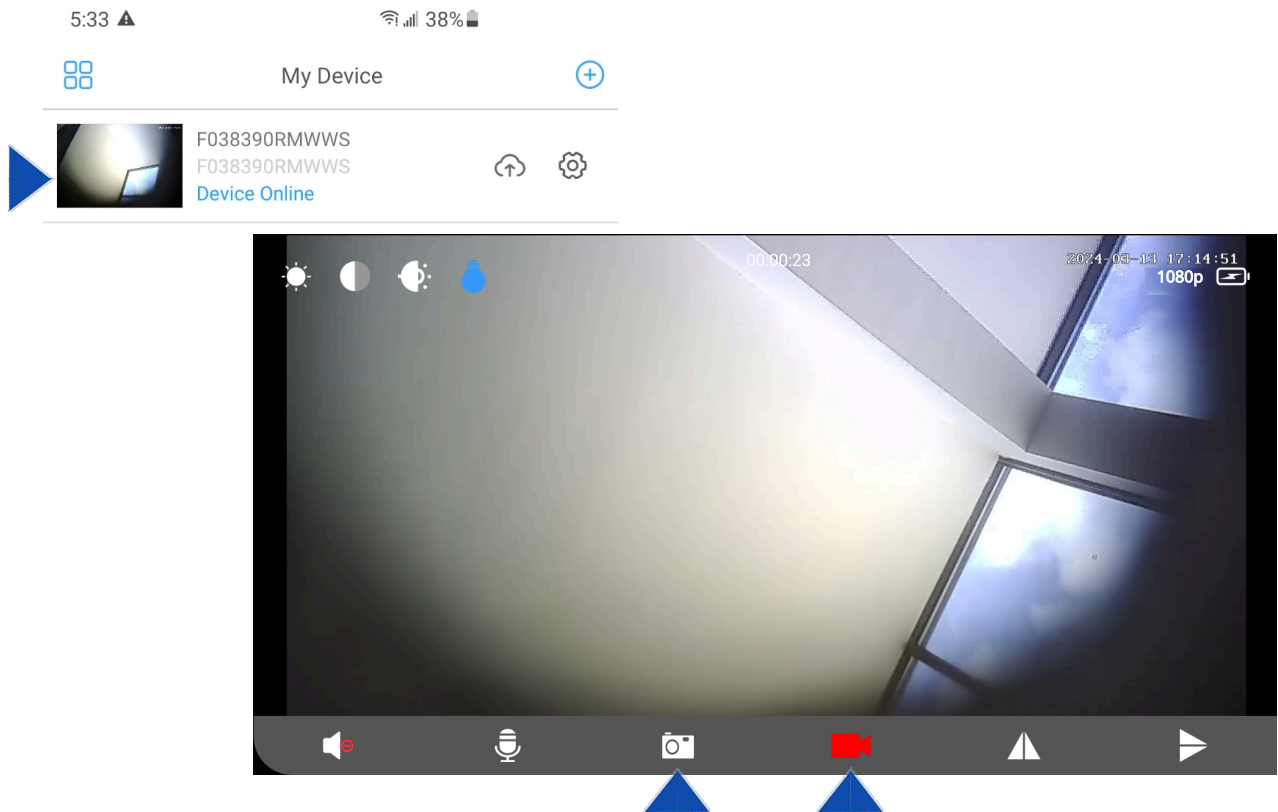

Video Playback

To playback videos or view the snapped photos stored in the memory card, use the main menu screen, or connect the memory card to a computer.

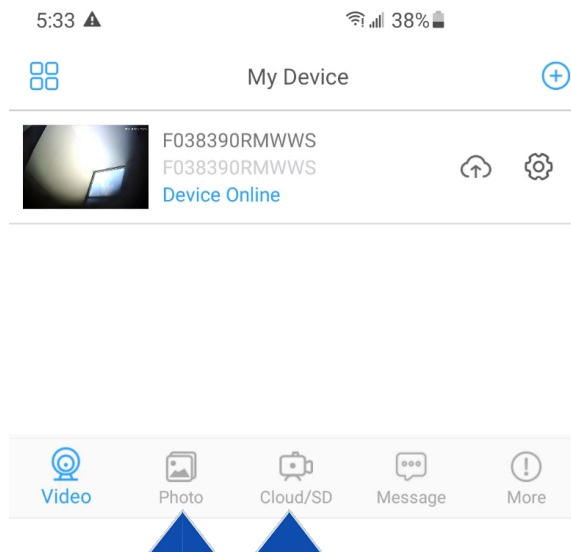

10. Troubleshooting Tips

Check memory card:

The camera supports up to 128 GB Micro SD card. Please use High Speed Class 10 FAT formatted memory card. You must format the Micro SD before using. If SD card is not recognized when inserted into the camera, simply remove and re-insert.

Camera offline:

1. Check power
2. Check if your router is working properly.
3. Weak Wi-Fi signal.
4. Wrong password wrong while Wi-Fi setting

Glitchy or stuttering video playback:

You should choose a suitable resolution to watch according to your internet speed. Internet connection interruption will also cause video to freeze.

Forgot password or password invalid:

Press and hold the reset button for 10 seconds to restore the camera device to the factory settings.

The initial password for each camera is **123456**. Please change the password to ensure the security of your camera.

NOTE: Passwords must consists of alphanumeric characters only.

If the camera cannot be connected to the router, please reset, and connect the hot spots before completing the configuration.